 


Front Door Speakers


NOTES:
Please read first

* Instructions show factory size speakers or speakers with adaptor brackets only. Cutting or fabricating (not shown) will be required for other speaker sizes.

1. If equipped with manual windows: Use a shop rag with a "shoeshine" motion to release "C" clip on rear of window crank and remove crank (Figure 1).
2. Pry out "sail" panel to release two (2) metal clips and remove panel (Figure 2).
3. Remove one (1) phillips screw from center of door release trim. Slide trim toward rear of door to pull from recess and allow trim to hang (Figure 3).
- 4a. **Door Pull Handle removal - driver's door:**
Remove one (1) phillips screw from bottom of door pull handle. Pry off front portion of handle from front edge (Figures 4 & 5).



- 4b. **Door Pull handle removal - passenger's door:**
Remove one (1) phillips screw from bottom edge (same location as driver's door - Figure 4). Remove one (1) phillips screw from top of door pull handle (Figure 6). Pry off front portion of handle to remove. Remove two (2) phillips screws from recessed holes exposed by removal of handle (Figure 7).

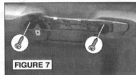

Continued on the next page.



1-800-955-9094
Technical Service

CRUTCHFIELD®

Copyright 2002 Crutchfield Corporation