

09-40 CONTROL SYSTEM

CONTROL SYSTEM

LOCATION INDEX..... 09-40-1

BODY CONTROL MODULE (BCM)

REMOVAL/INSTALLATION..... 09-40-1

Dashboard Wiring Harness C

Disassembly Note 09-40-1

BCM Disassembly Note..... 09-40-2

BODY CONTROL MODULE (BCM)

INSPECTION 09-40-2

Terminal Voltage Table


(Reference) 09-40-2

STEERING ANGLE SENSOR

INSPECTION 09-40-10

CONTROL SYSTEM LOCATION INDEX

1	BCM (See 09-40-1 BODY CONTROL MODULE (BCM) REMOVAL/INSTALLATION.) (See 09-40-2 BODY CONTROL MODULE (BCM) INSPECTION.)
2	Steering angle sensor (See 09-40-10 STEERING ANGLE SENSOR INSPECTION) (See 09-02K-29 DTC C1937 [BCM].)

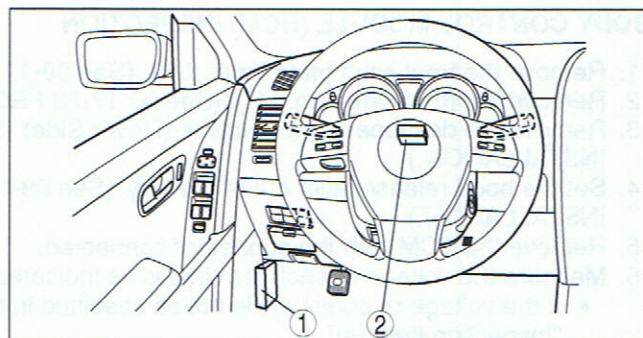

id094000801000

ac9uuw0000665


BODY CONTROL MODULE (BCM) REMOVAL/INSTALLATION

id094000800400

1. Disconnect the negative battery cable.
2. Remove the front scuff plate inner (LH). (See 09-17-23 FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
3. Remove the front side trim (LH). (See 09-17-23 FRONT SIDE TRIM REMOVAL/INSTALLATION.)
4. Remove the dashboard under cover. (Driver Side) (See 09-17-14 DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
5. Set the hood release lever out of the way. (See 09-14-46 HOOD LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
6. Remove in the order indicated in the table.

1	Dashboard wiring harness A
2	Dashboard wiring harness B
3	Connector
4	Dashboard wiring harness C (See 09-40-1 Dashboard Wiring Harness C Disassembly Note.)
5	Bolt
6	BCM (See 09-40-1 Dashboard Wiring Harness C Disassembly Note.)


7. Install in the reverse order of removal.

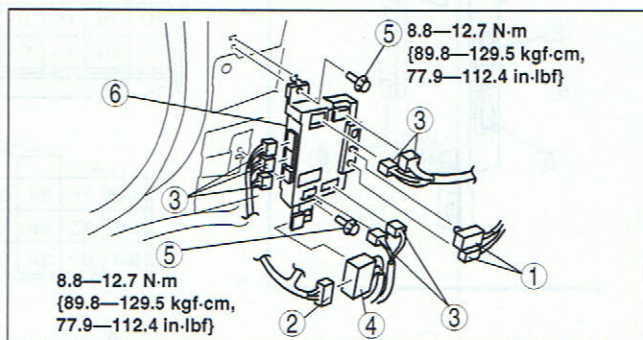

ac9uuw0000649

Dashboard Wiring Harness C Disassembly Note

1. As shown in the figure, lift the tab in the direction of the arrow (1) using a tape-wrapped flathead screwdriver, and while keeping it lifted, pull it in the direction of the arrow (2) to remove.

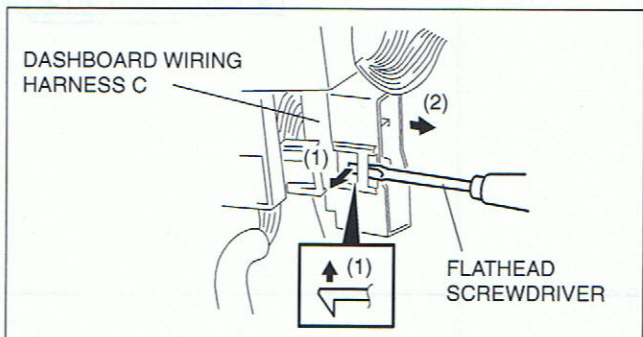

ac9uuw0000921