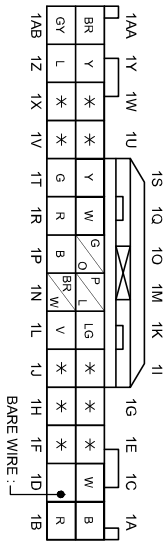
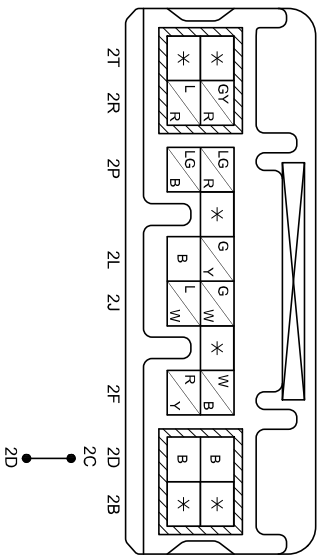
 
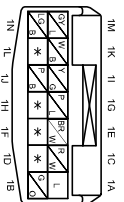
 
 
 


2016 Mazda CX-5  
AUDIO SYSTEM (WITH CENTER DISPLAY / Bose® TYPE AUDIO)

0920-3g


0920-301A CONNECTIVITY MASTER UNIT	0920-301B CONNECTIVITY MASTER UNIT	0920-301E CONNECTIVITY MASTER UNIT	0922-201 CLOCK SPRING	0922-202 CRUISE CONTROL SWITCH / STEERING SWITCH / CLOCK SPRING
				
0920-323 GPS ANTENNA		0940-103A START STOP UNIT		
				


Steering switch

O-W-O : Resistance			O-W-O : Resistance			O-W-O : Resistance			O-O : Continuity O-W-O : Resistance						
Switch Position	Terminal		Resistance (ohm)	Switch Position	Terminal		Resistance (ohm)	Switch Position	Terminal		Resistance (ohm)	Switch Position	Terminal		
	H	J			M	J			D	L			D	L	
Volume Switch (-) ON	O-W-O		53.064—54.136	Talk Switch ON	O-W-O		103.95—106.05	DOWN Switch ON	O-W-O		386.1—393.9	UP switch ON	O	—	O
Volume Switch (+) ON	O-W-O		145.233—148.167	Pick-up Switch ON	O-W-O		271.26—276.74	INFO Switch ON	O-W-O		999.9—1,020.1	OFF	O	—	O
Seek Switch (+) ON	O-W-O		297.693—303.707	Hang-up Switch ON	O-W-O		657.36—670.64	OFF	O-W-O		2,524.5—2,575.5	Rt: 2,524.5—2,575.5 ohms			
Seek Switch (-) ON	O-W-O		556.083—567.317	OFF	O-W-O		3,330.36—3,397.64								
OFF	O-W-O		4.813.083—4.910.317												
Start stop unit terminal voltage table (reference)															
Terminal	Measurement conditions											Voltage (V)			
1AA	Up switch is pressed											1.0 or less			
	Down switch is pressed											Approx. 1.2			
	INFO button is pressed											Approx. 2.2			
	Except above											Approx. 3.3			
1AB	Under any condition											1.0 or less			

2016 Mazda CX-5  
AUDIO SYSTEM (WITH CENTER DISPLAY / Bose® TYPE AUDIO)

0920-3g

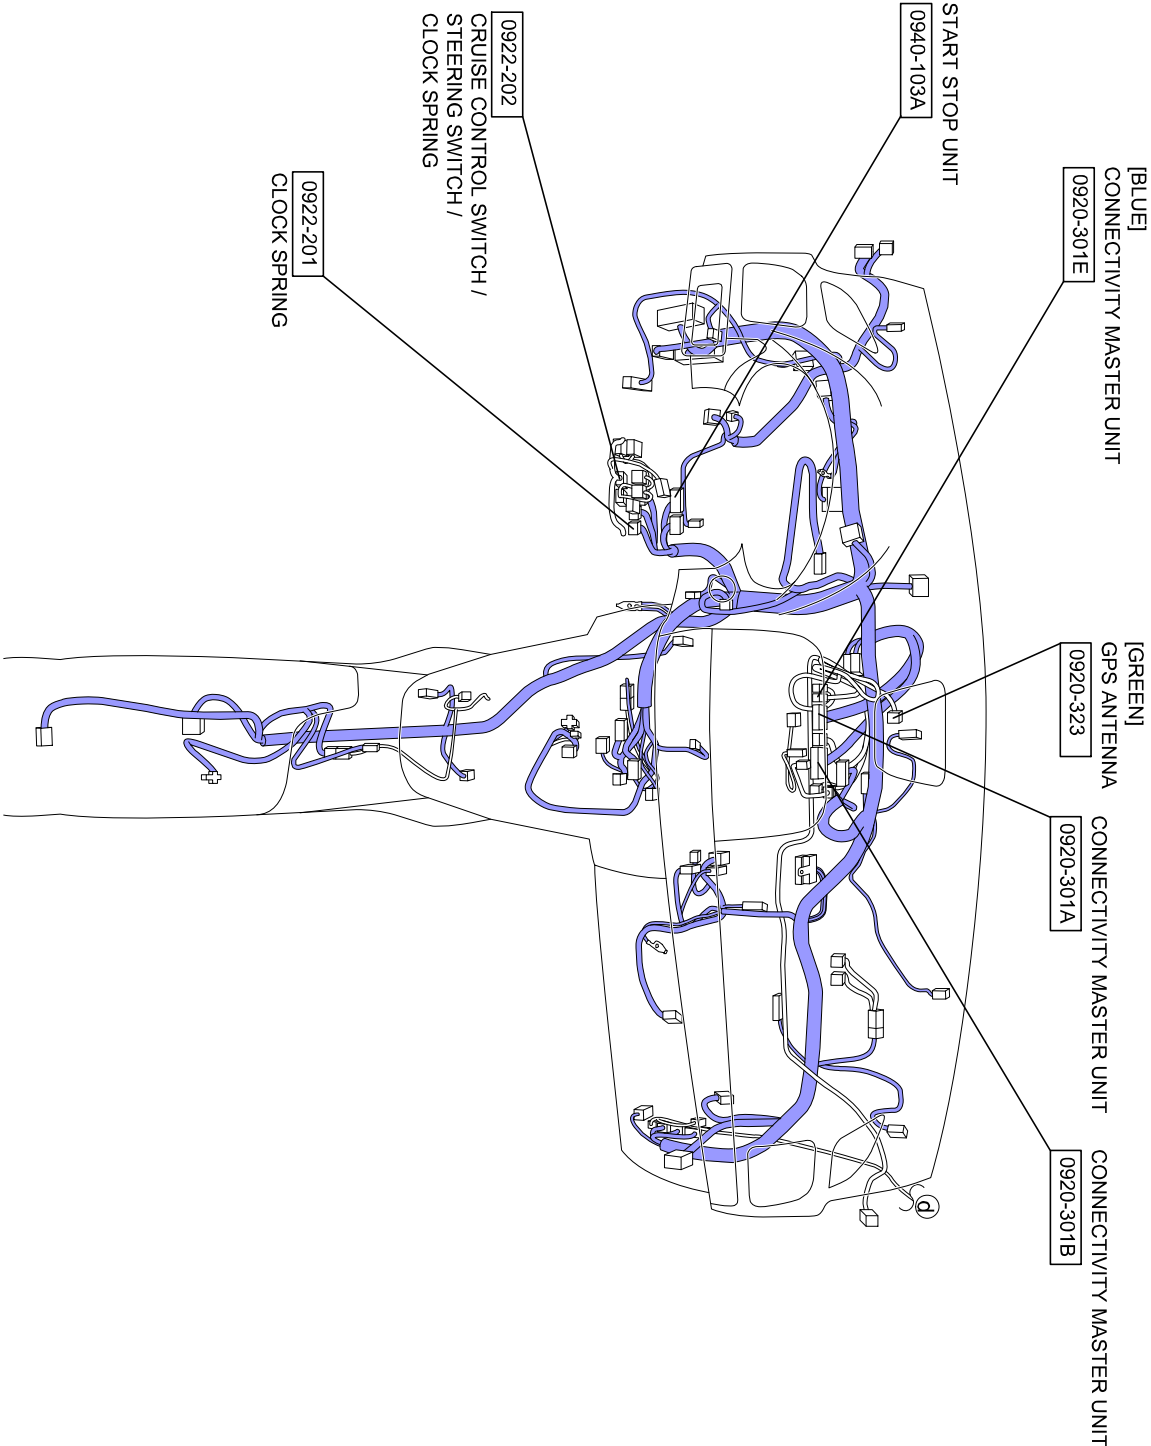

 : INSTRUMENT PANEL HARNESS