


ENTERTAINMENT

2. Remove the following parts:
 - (1) Liftgate upper trim (See 09-17-87 LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 - (2) Liftgate side trim (See 09-17-87 LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Liftgate lower trim (See 09-17-89 LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
 - (4) Liftgate garnish (See 09-17-65 INNER GARNISH REMOVAL/INSTALLATION.)
3. Press the rear mount camera tabs in the direction of the arrows (1) shown in the figure, pull the rear mount camera in the direction of the arrow (2) shown in the figure, and disengage the rear mount camera tabs from the liftgate garnish.
4. Remove the rear mount camera.
5. Install in the reverse order of removal.

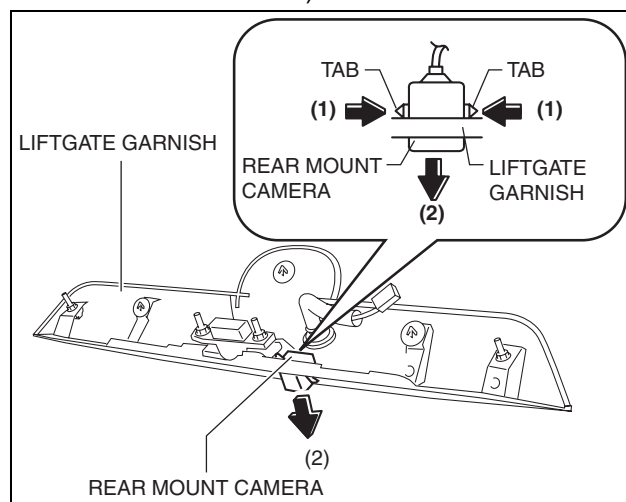

ac5jv00001090

REAR MOUNT CAMERA INSPECTION

European (L.H.D. U.K.) specs.


id092000815000

Note

- The rear mount camera cannot be inspected as an individual unit. If the rear mount camera does not display images normally, refer to the symptom troubleshooting. (See 09-03F-32 DISPLAY DOES NOT CHANGE TO THE REAR MOUNT CAMERA IMAGE. [ENTIRE AUDIO SYSTEM].)

Except European (L.H.D. U.K.) specs.

1. Disconnect the negative battery cable. (See 01-17A-11 NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION [SKYACTIV-G 2.0].) (See 01-17A-13 NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION [SKYACTIV-G 2.0 (WITHOUT i-stop)].) (See 01-17B-9 NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Liftgate upper trim (See 09-17-87 LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
 - (2) Liftgate side trim (See 09-17-87 LIFTGATE SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Liftgate lower trim (See 09-17-89 LIFTGATE LOWER TRIM REMOVAL/INSTALLATION.)
 - (4) Liftgate garnish (See 09-17-65 INNER GARNISH REMOVAL/INSTALLATION.)
 - (5) Rear mount camera (See 09-20-68 REAR MOUNT CAMERA REMOVAL/INSTALLATION.)
3. Prepare four dry cell batteries (1.5 V)
4. Connect the four dry cell batteries in a series.

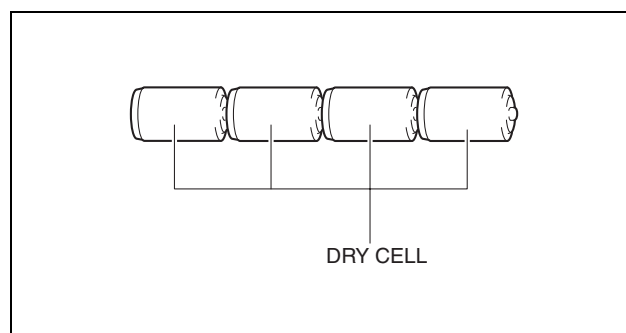

ac5wz0000510