

Repair Procedure

Safety Recall 5321K – Multi-Model Fuel Pump May Fail – All Models except MX-5

A. VEHICLE INSPECTION PROCEDURE

1. Verify that the vehicle is within the following ranges:


Model	Subject VIN range	Subject production date range
2018-2019MY CX-5 (KF)	JM3KF**** J* 387268 – 476254 JM3KF**** K* 500024 – 514334	From April 3, 2018 through October 27, 2018
2019MY CX-3 (DK)	JM1DK**** K* 403654 – 428073	From April 10, 2018 through November 6, 2018
2018-2019MY CX-9 (TC)	JM3TC**** J0 229736 – 237357 JM3TC**** K0300008– 308082	From April 16, 2018 through October 17, 2018
2018-2019MY Mazda6 (GL)	JM1GL**** J1 313085 – 329168 JM1GL**** K1 314118 – 329175	From April 5, 2018 through October 24, 2018

The asterisk symbol “\*” can be any letter or number.

- If the vehicle is one of the above listed, proceed to Step 2.
- If the vehicle is not within the above ranges, return vehicle to the customer or inventory.

2. Perform a Warranty Vehicle Inquiry using your eMDCS System and inspect vehicle for Campaign Labels **Recall 5321K** attached to the vehicle’s hood. Refer to eMDCS System - Warranty Vehicle Inquiry Results table below.

**NOTE:** Be sure to verify Recall number as the vehicle may have multiple Recall labels.

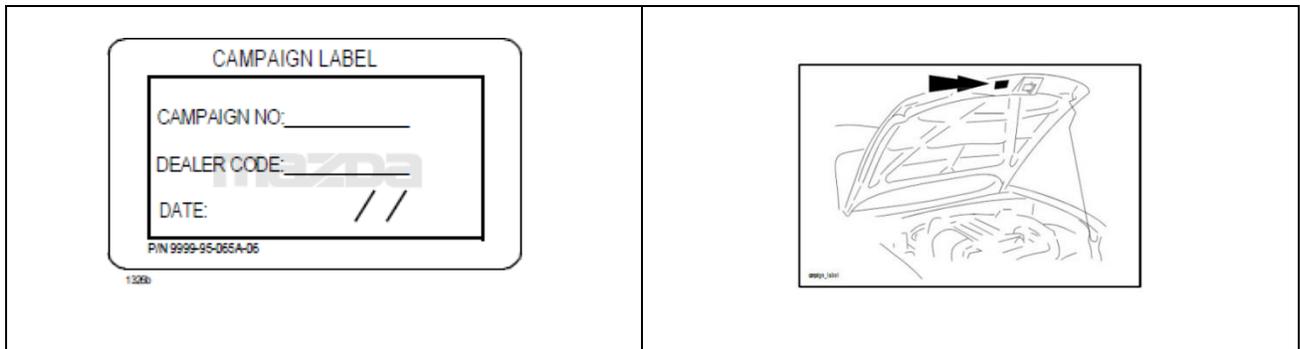

eMDCS System - Warranty Vehicle Inquiry Results:

If eMDCS displays:	Campaign Label is:	Action to perform:
If no repair date is displayed on the line with RECALL 5321K, it has not been completed on this vehicle	Present	Contact the Mazda Warranty Department at (800) 727-6626, Option 3.
	Not present	--Proceed to "REPAIR PROCEDURE".
If repair date is displayed on the line with RECALL 5321K, it has been completed on this vehicle	Present	Return vehicle to inventory or customer.
	Not present	Complete a label and apply to vehicle's hood.
RECALL 5321K is not displayed	Does not apply	Recall does not apply to this vehicle. Return vehicle to customer.

**B. REPAIR PROCEDURE – Fuel pump disassembly/assembly procedure**

This repair procedure has combined both Type A and Type B fuel pumps which has the same removal/ installation procedure. It is also the same in the supplemental VIDEO's below which must be reviewed prior to repair.



Please watch both videos prior to repairing:

[Type A Repair video link](#)



[Type B Repair video link](#)

However, there are two structural differences, which is explained below.

- 'Type B' has applied suction pipe.

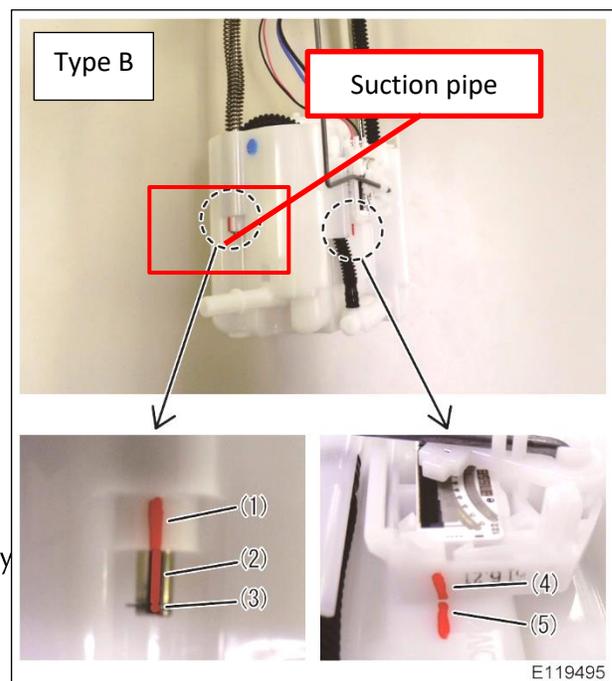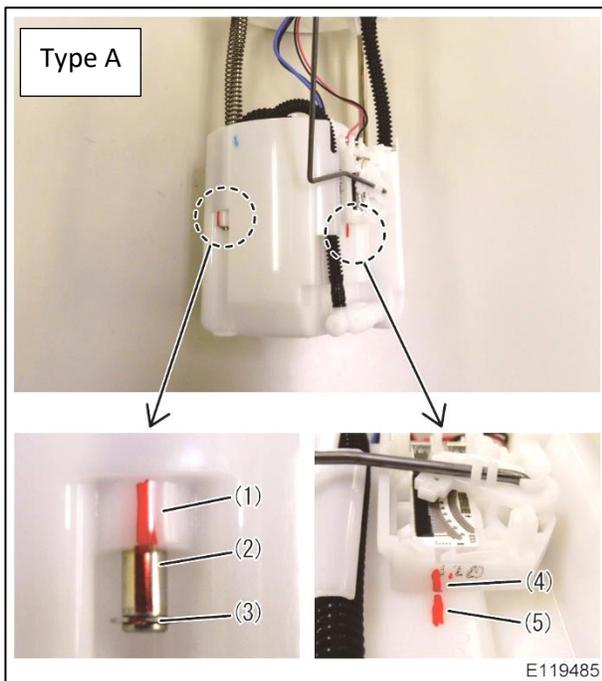


Type B has the valve referred to in the tube routing diagram.

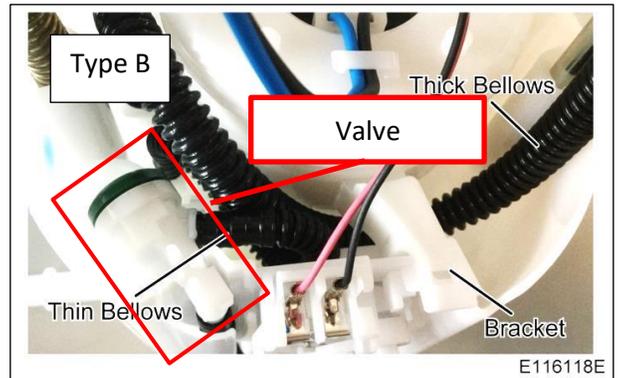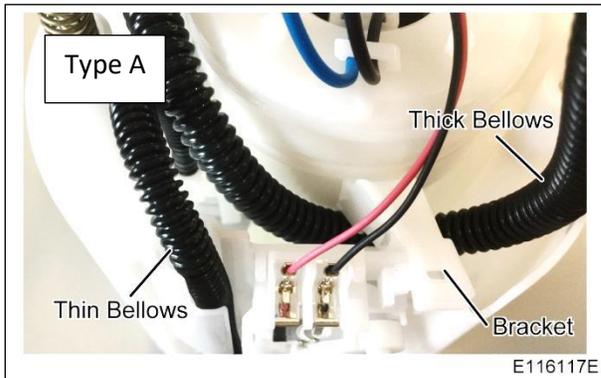



## Fuel pump disassembly procedure

1. Discharge the fuel inside the fuel pump. If all the fuel does not come out with a single discharge, repeat discharging two or three times.


**CAUTION:** Fuel that remains in the filter or pump may spill, always discharge the fuel over a tray or other container.

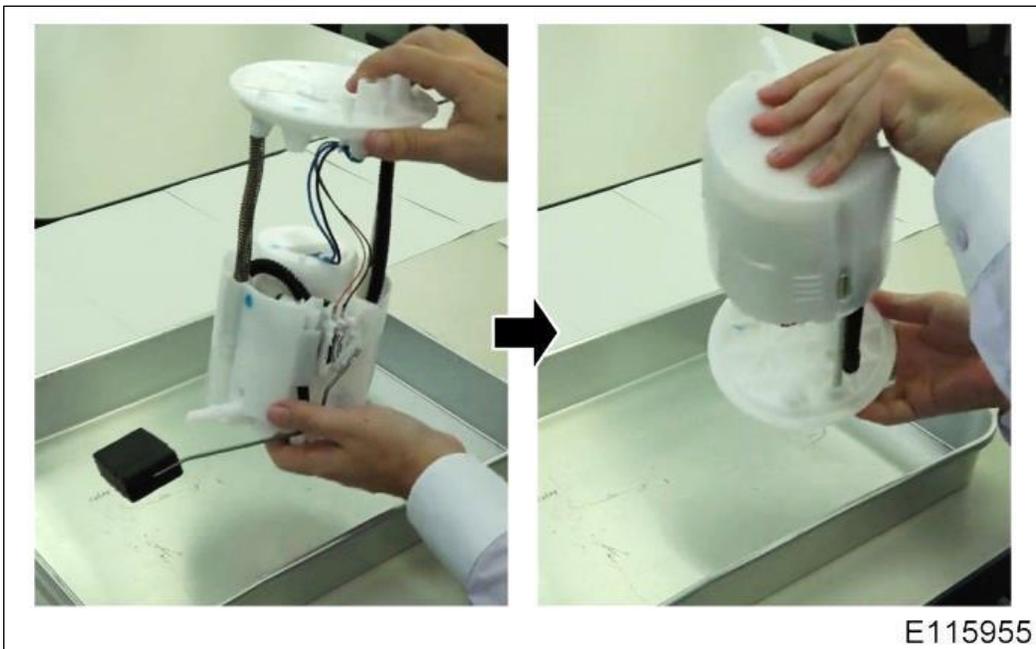

2. Mark the (1) rod guide, (2) rod, (3) E-ring, (4) fuel gauge sender and (5) reservoir cup with a marker before disassembly to avoid re-assembling incorrect.

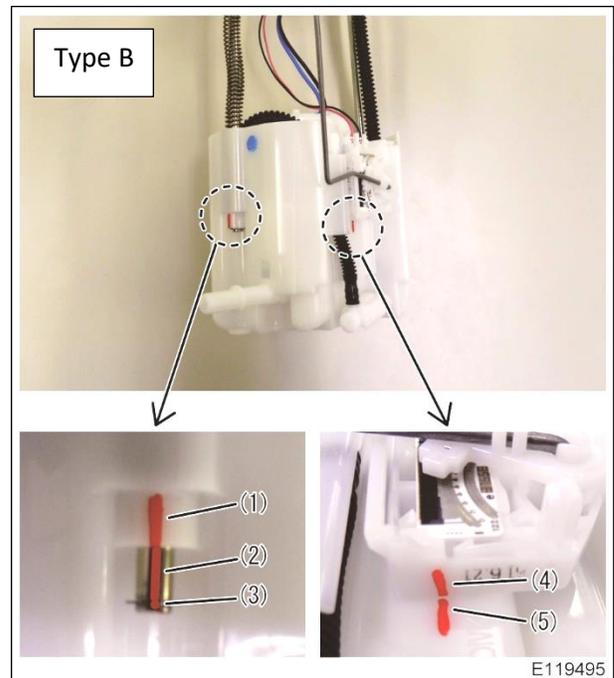
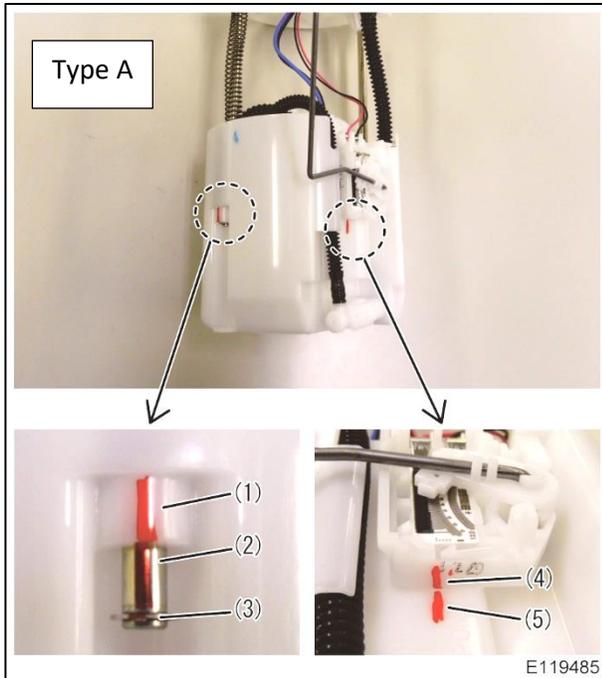


3. Check the routing condition of the wire harness and tube. The routing is the same during reassembly.

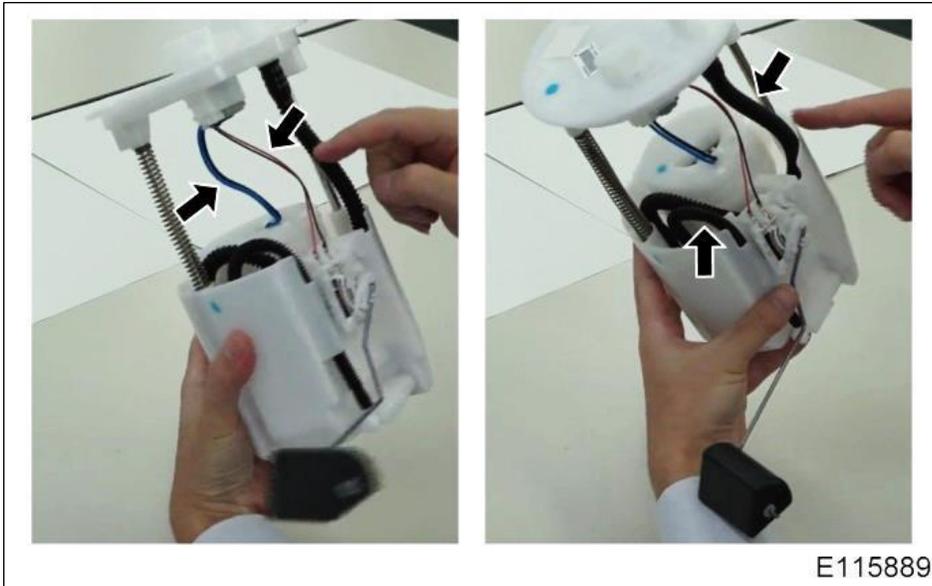

**NOTE:** Check carefully because the routing may differ by type.




- Thick bellows tube routing (either over or under the bracket)
- Thin bellows tube routing (bend position)
- Wire harness routing (clamp position)

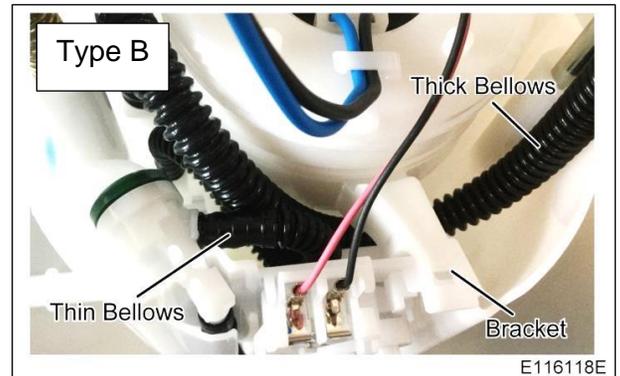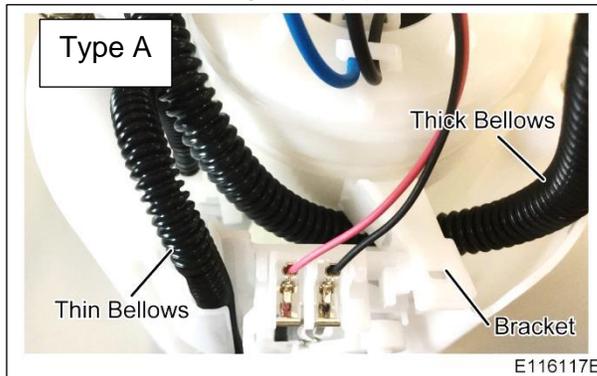

4. Remove the wire harness from the clamp. Spread the clamp and remove the wire while ensuring that the wire harness is not damaged.

**CAUTION:**

Be aware that if the clamp is pulled out on an angle without opening the clamp, the coating may rip, the wire harness may be disconnected, or the fuel pump or fuel gauge sender may not run. Also, be aware that the clamp may be damaged if the clamp is spread too wide.

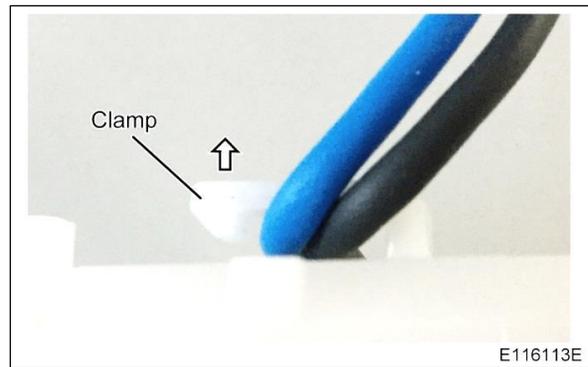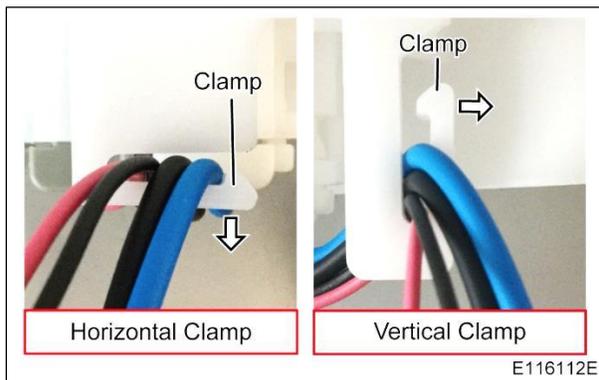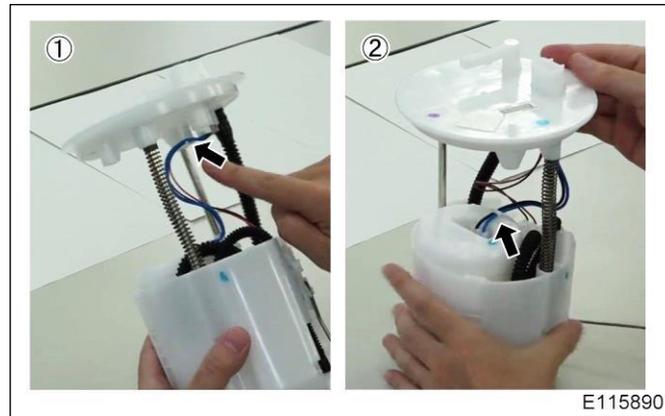


5. Remove the connector of the wire harness (with the flange).

**CAUTION:**

- Pull out the connector with the lock pushed.
- Do not grasp the wire harness and pull out.
- Be aware that if the wire harness is grasped and pulled out, the wire harness may be disconnected, or the fuel pump or fuel gauge sender may not run.

**NOTE:**

Use a flathead screwdriver wrapped in protective tape for removal. While pushing the lock with a screwdriver, pull out the connector straight down.

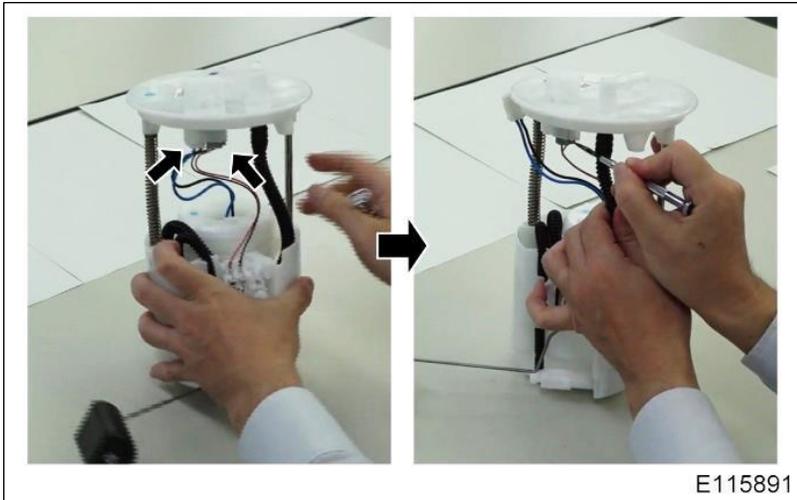




6. Remove the fuel gauge sender.

**CAUTION:**

While working, do not bend the arm of the fuel gauge sender, and do not touch resistance substrates or contacts to prevent problems.

**NOTE:**


Use a flathead screwdriver wrapped in protective tape to release the lock, push up from below, and then remove.

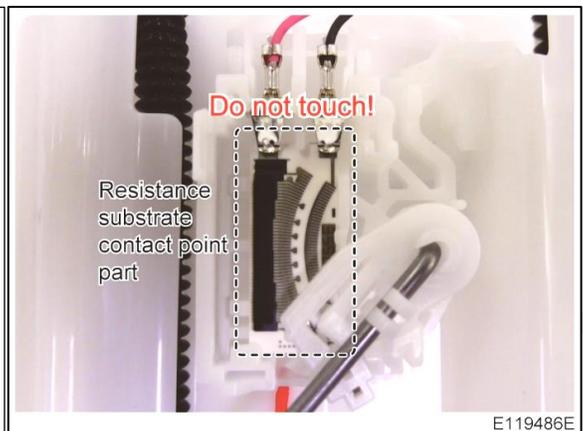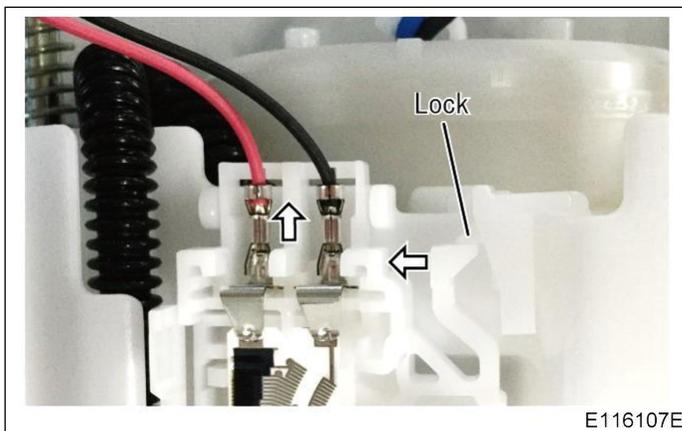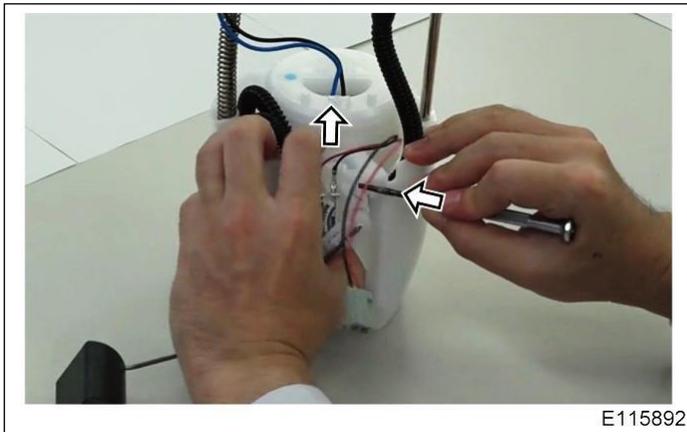

Remove the jet pump from the reservoir cup. (Only 4WD that has fuel pump# PYY2 has transfer jet pump)

**NOTE:** Use a flathead screwdriver wrapped in protective tape for removal.

**CAUTION:** Be aware that the clamp may be damaged if the clamp is spread too wide.

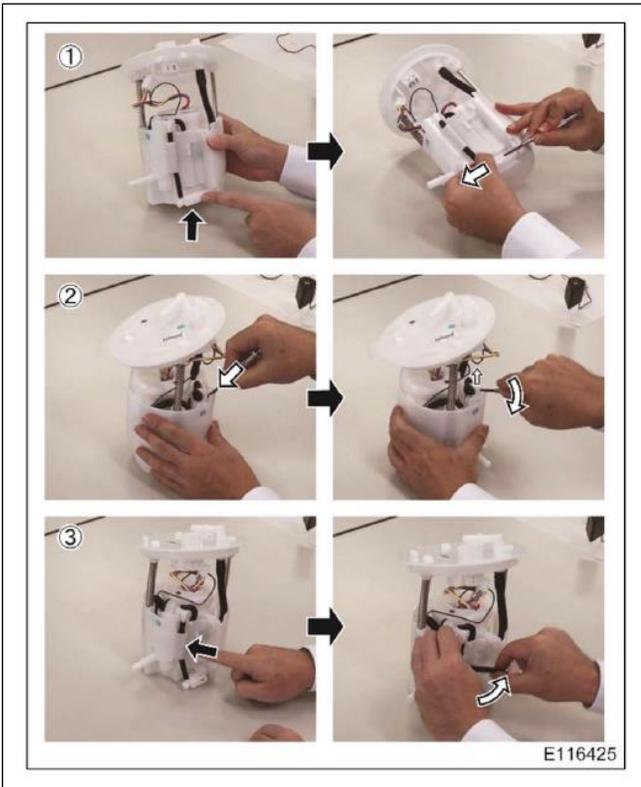


① Remove the jet pump for pumping.

② Remove the transfer jet pump.

③ Remove the bellows tube from the reservoir cup.

**Caution:**  
Take care not to damage the reservoir cup.

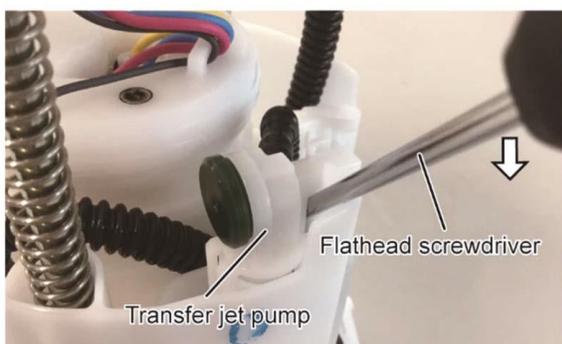



7. Remove the E-ring. Use combination pliers or similar tool for removal.




**NOTE:**  
The E-ring cannot be reused.

8. Remove the bracket. Use a flathead screwdriver wrapped in protective tape for removal of the three locations.


**CAUTION:** Be aware that the clamp may be damaged if the clamp is spread too wide.

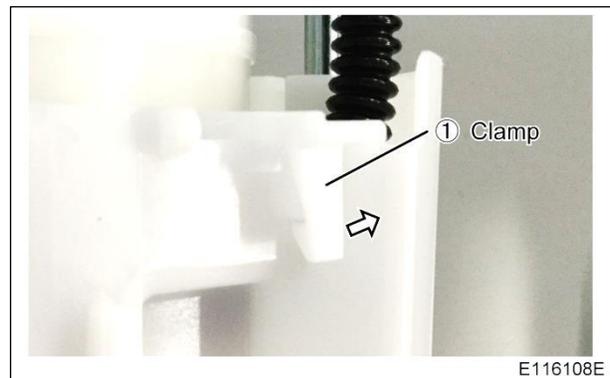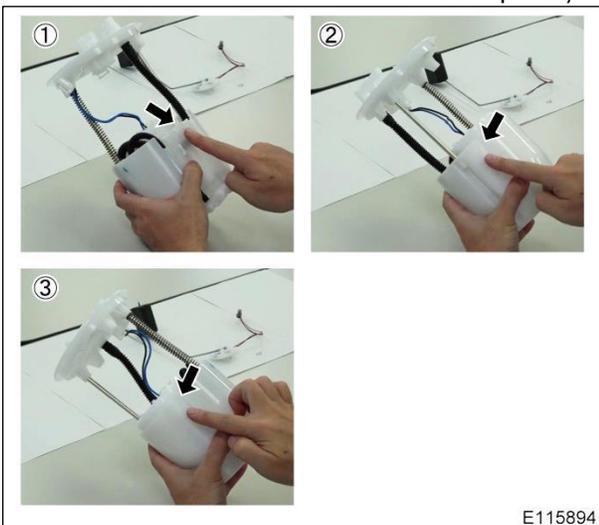

9. Pull out the high-pressure pump from the reservoir cup.

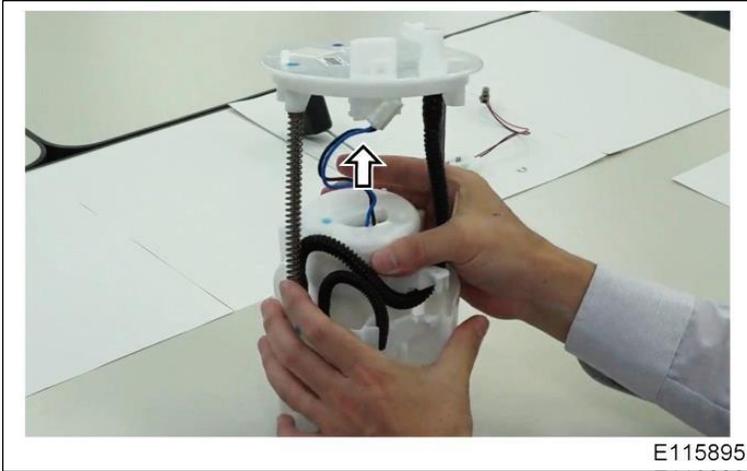


10. Remove the spring from the rod with the spring on it.

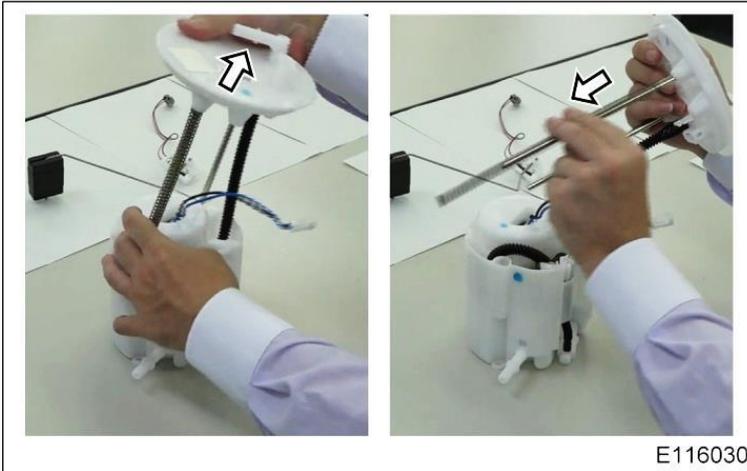


11. Remove the suction filter. Use a flathead screwdriver wrapped in protective tape for removal of the five locations.

**CAUTION:**


- **Make sure for soiling and** damage of the suction filter.
- Cover so that foreign debris does not get inside the suction filter.
- Be aware that the clamp may be damaged if the clamp is spread too wide.

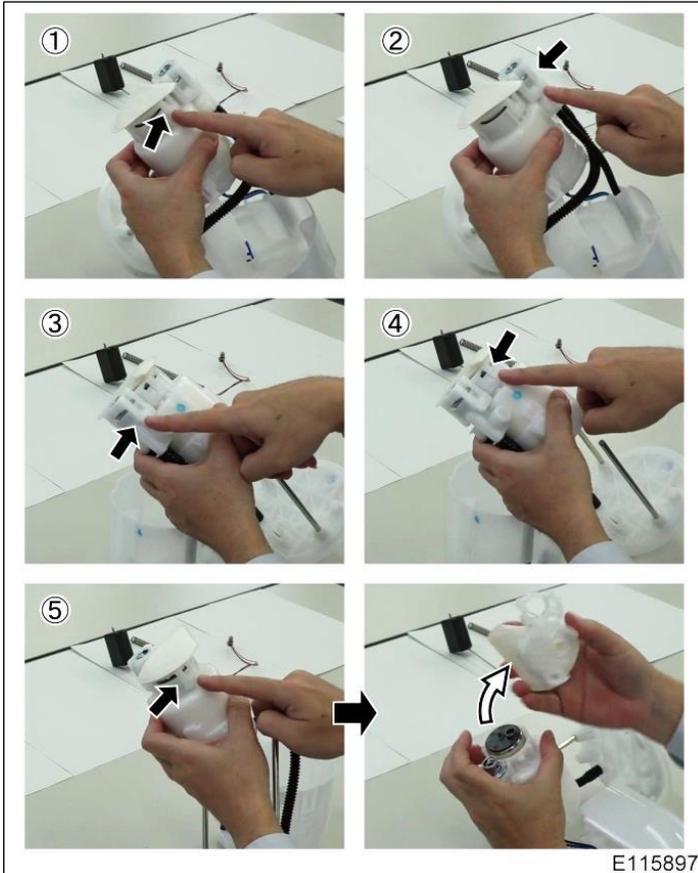

One-valve type

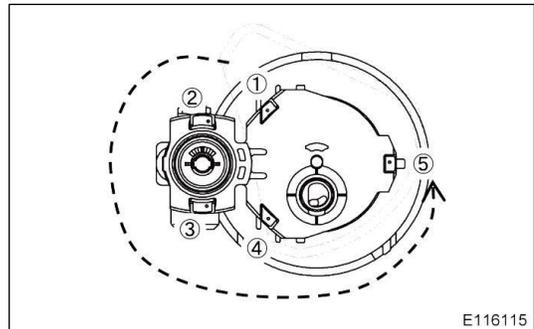


Two-valve type

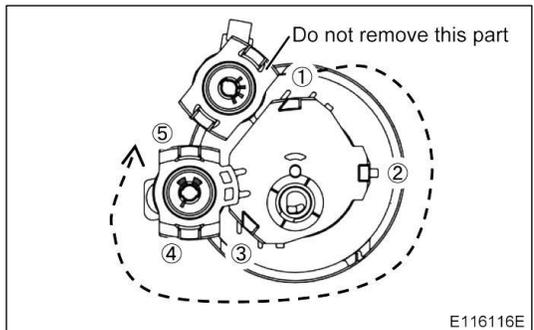

12. Push out the fuel pump using a flathead screwdriver wrapped in protective tape.

**CAUTION:**


- When the suction filter is reinstalled again, **watch for soiling** or damage of the filter.
- Make sure that the connector is not damaged.
  - Take precautions when removing the pump as leftover fuel may spill.

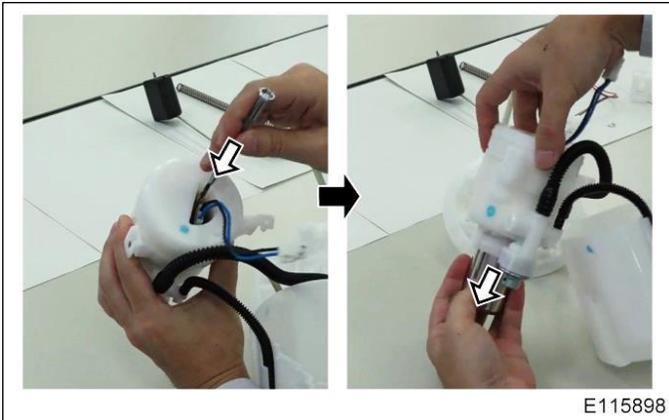

13. If the O-ring remains on the high-pressure pump, use a long hook-like rod to remove it while ensuring that the O-ring seal is not damaged.


**CAUTION:** Be aware that if the O-ring is not removed, **the inability to eject fuel** due to the double installation of O-rings will cause poor drivability, acceleration problems, engine stalling, and hard start issues.

- O-rings cannot be reused.

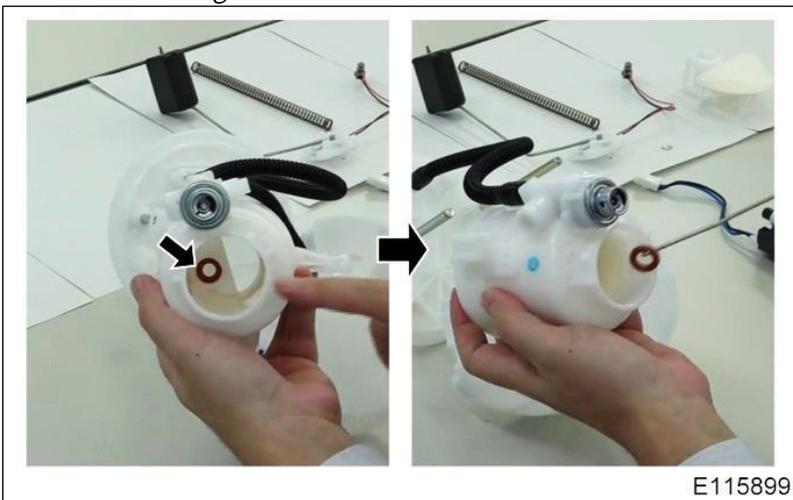

14. Remove the wire harness and spacer from the fuel pump.

**CAUTION:** Fuel pump and spacer cannot be reused. Mark parts with permanent marker to distinguish reusable and non-reusable parts.

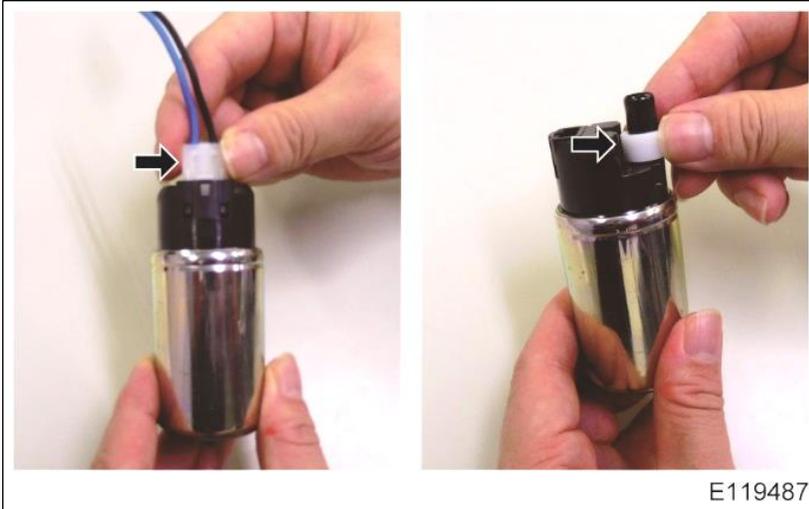


### Fuel pump assembly procedure

**CAUTION:** Make sure that there is no dirt/foreign objects or scratches on the connection parts such as O-ring, spacer, and suction filter etc. before assembling.



1. Install the suction filter in the fuel pump.

**CAUTION:** During assembly, be careful that the suction filter and fuel pump are not damaged.

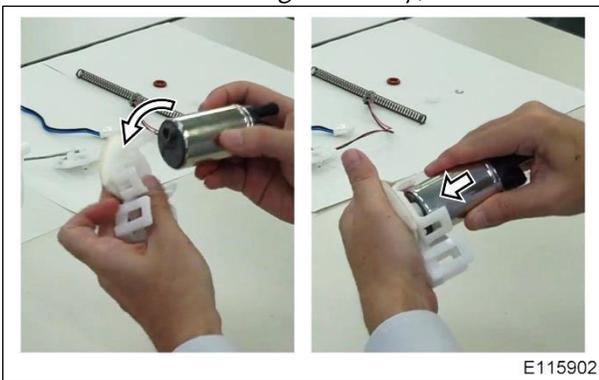


2. Install the new spacer, new O-ring, and wire harness to the new fuel pump.




**CAUTION:** Be aware that if the O-ring is installed incorrectly or poorly, the inability to eject fuel will cause poor drivability, acceleration problems, engine stalling, and hard start issues.

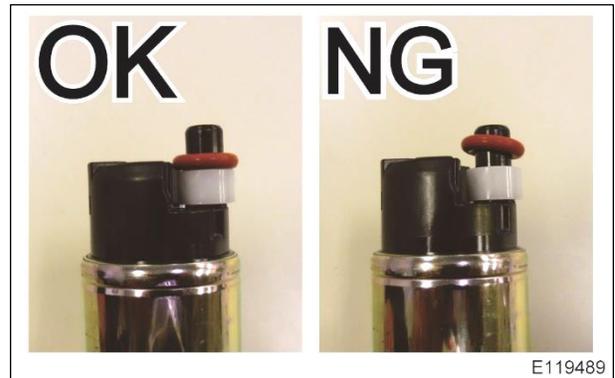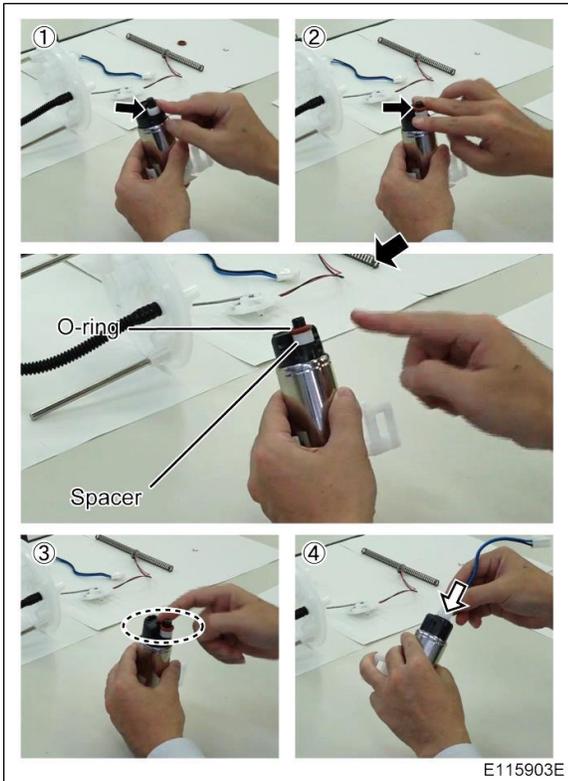

- Be careful as to the pushing location so that the suction filter is not broken. Use the palm of your hand to push in the entire surface of the suction filter straight forward.
- Be careful that the flange does not contact anything as damage will lead to a fuel leak.

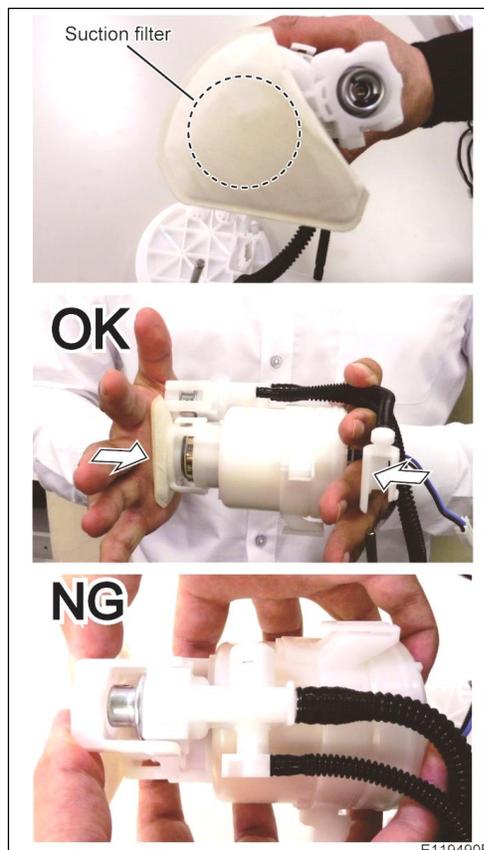



3. Install the fuel pump in the high-pressure pump.

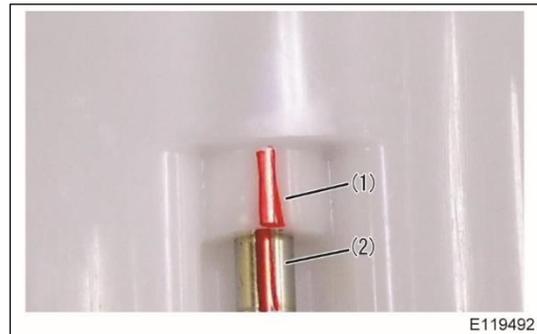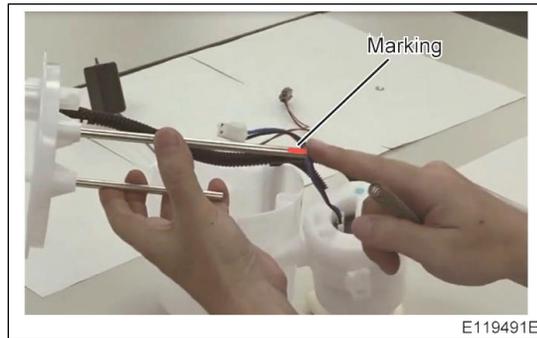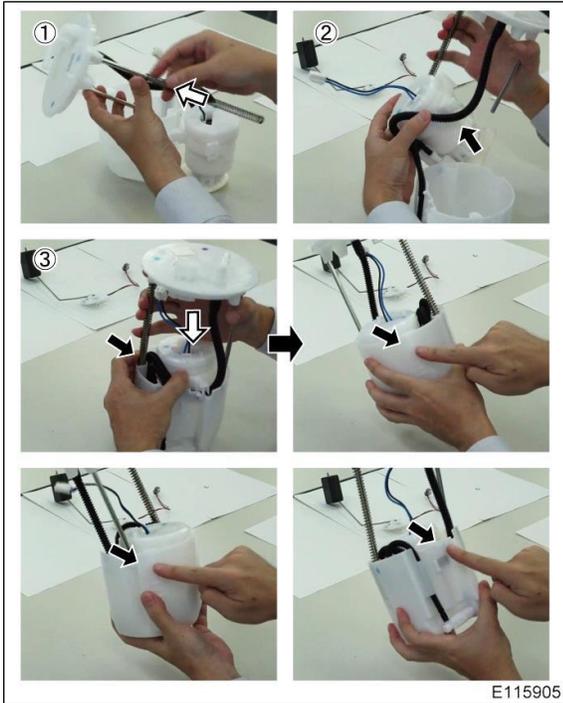

**NOTE:** Only 4WD that has fuel pump # PYY2 has transfer jet pump



Install the O-ring with the thin wire diameter on the transfer jet pump.

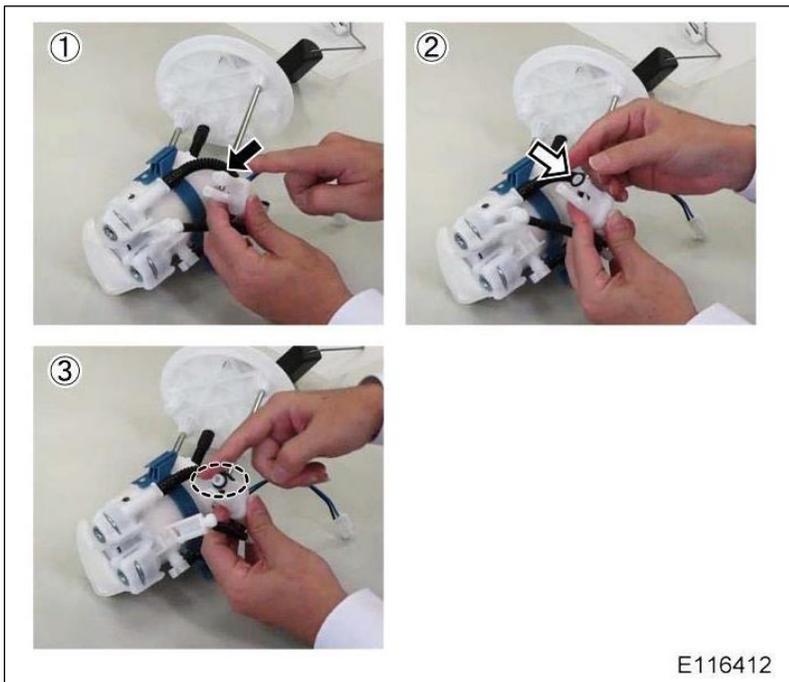

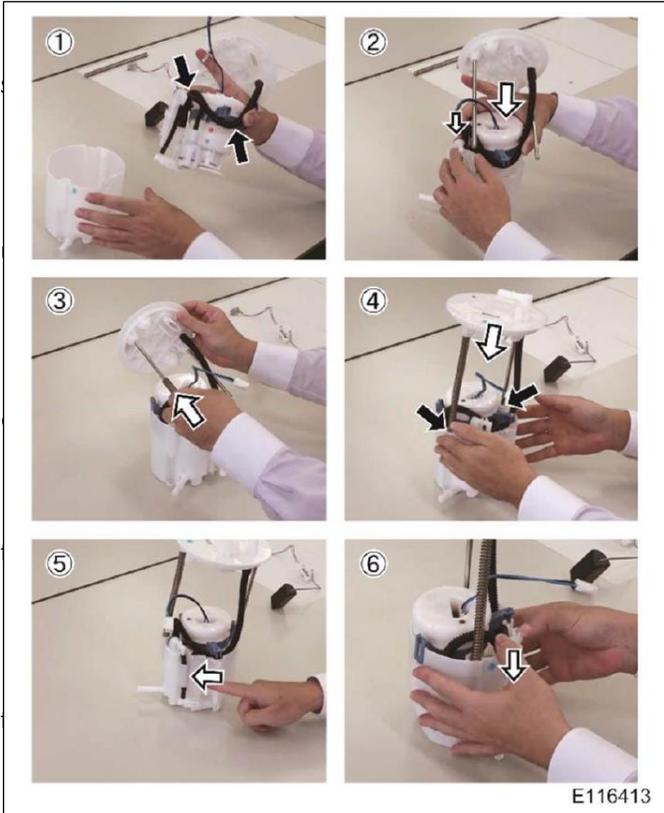


Install the strainer in the reservoir

- ① Set the fuel tube so that the routing is the same as was noted before disassembly.
- ② While placing the strainer in the reservoir, insert and provisionally install the transfer jet
- ③ Insert the spring in the sliding shaft.
- ④ Insert the sliding shaft in the sliding opening of the reservoir.
- ⑤ Install the bellows tube of the jet pump on the guide part of the reservoir.
- ⑥ Install the transfer jet pump. Align the joint part with the fitting position of the reservoir, push on the upper surface of the jet pump, and push in until the joint part is below the guide part.

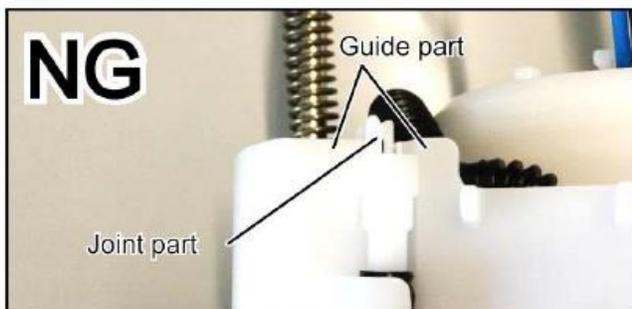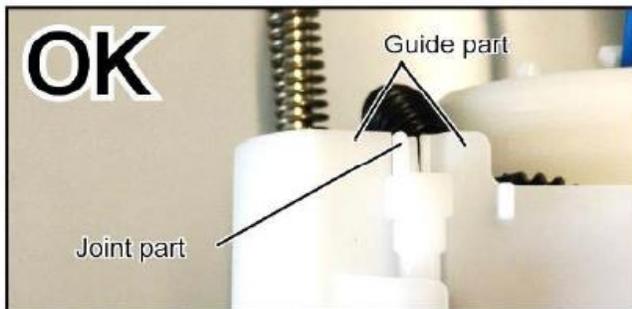

Check the joint part is in the correct

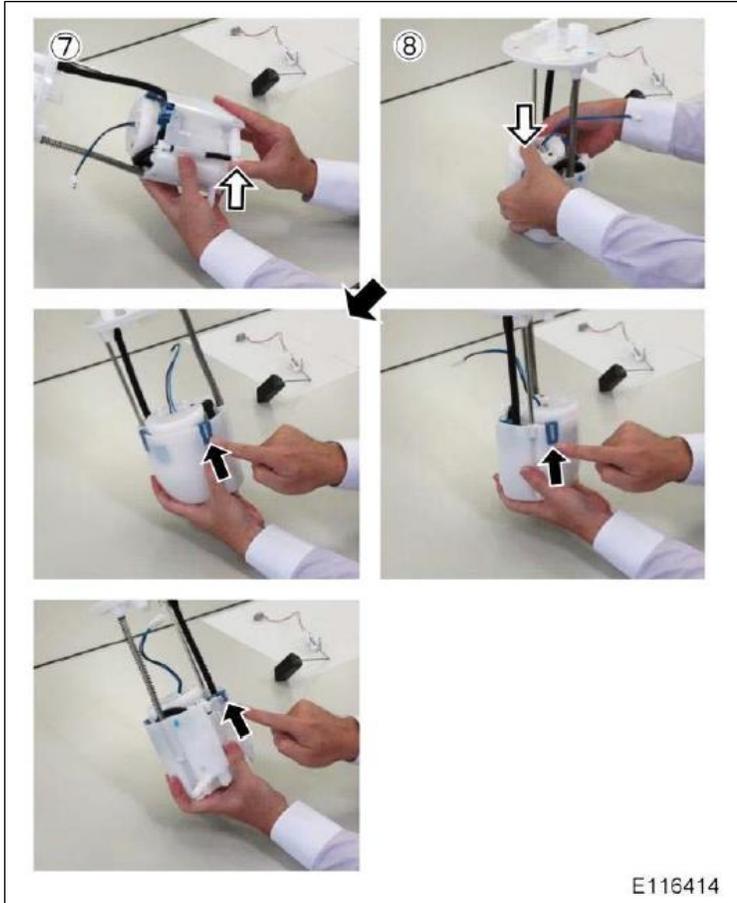


⑦ Install the jet pump on the reservoir.  
Make sure that the lock has been checked and secure.

⑧ Push the strainer, and then make sure that the three joints have been installed correctly.

**CAUTION:**


Be careful when arranging the ground wire so does not come out of the sliding shaft.

4. Install the new E-ring. Use needle-nose pliers or similar tool for installation.  
Make sure the E-ring can rotate by a finger after installation



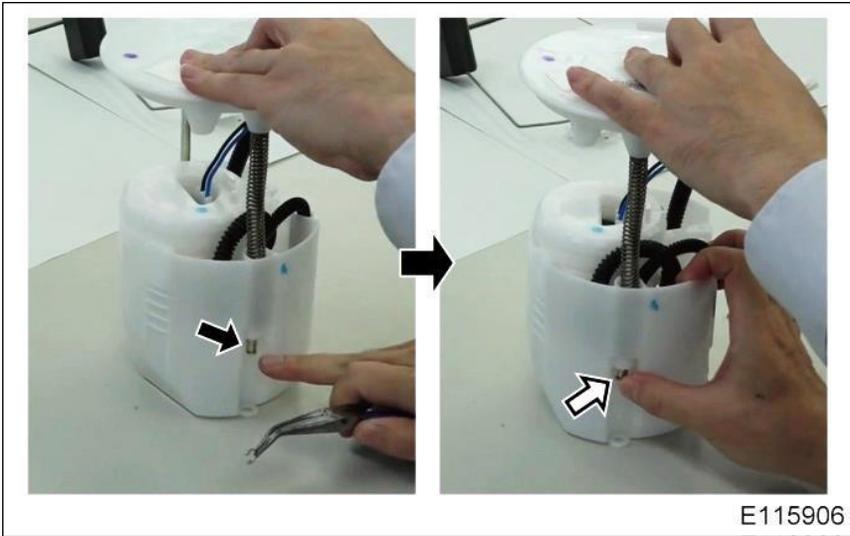


5. Install the fuel gauge sender in the reservoir cup.

**CAUTION:** Push the resin part in and down, while making sure not bend the arm of the fuel gauge sender, and do not touch resistance substrates or contacts to prevent fuel problems.

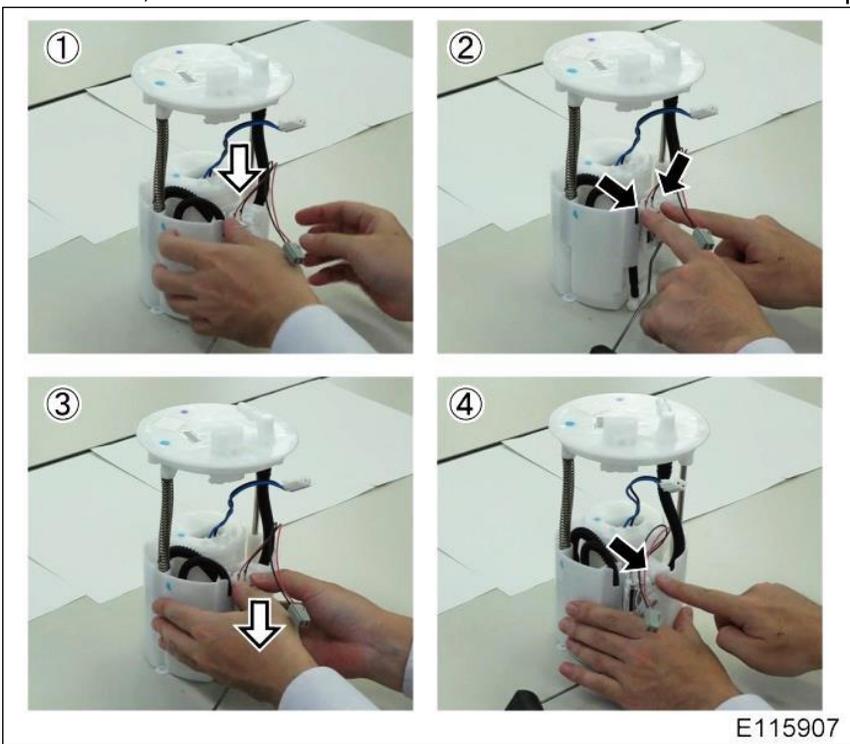




Make sure that the lock has been checked and secured.

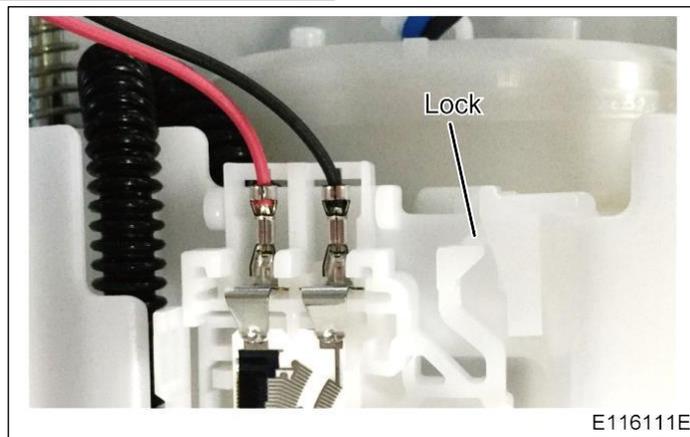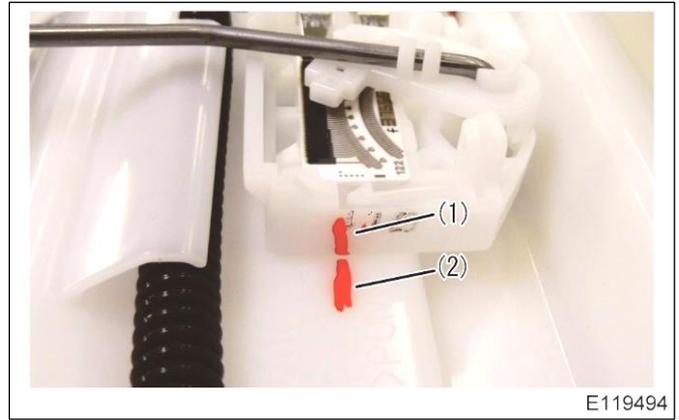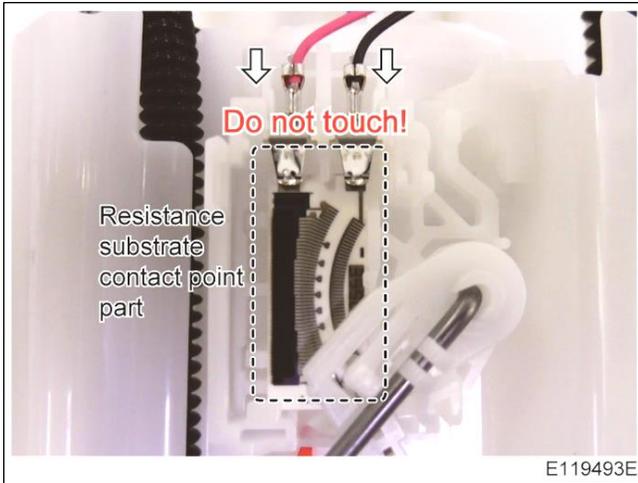

6. Install the connector of the wire harness. Make sure that the lock has been checked and is secure.



7. Install the wire harness in the clamp section.

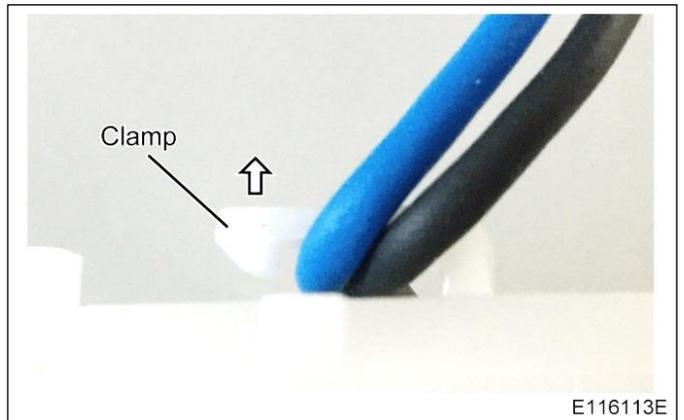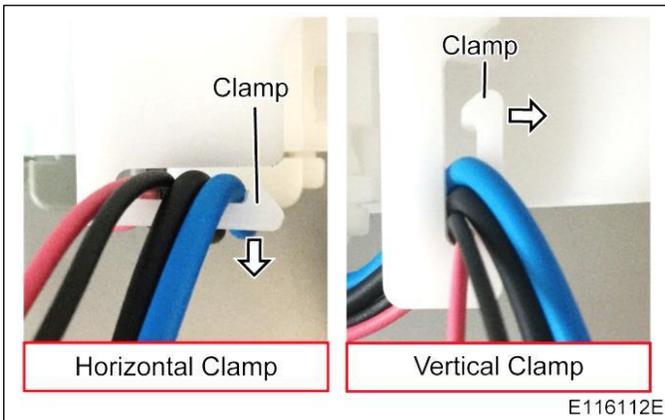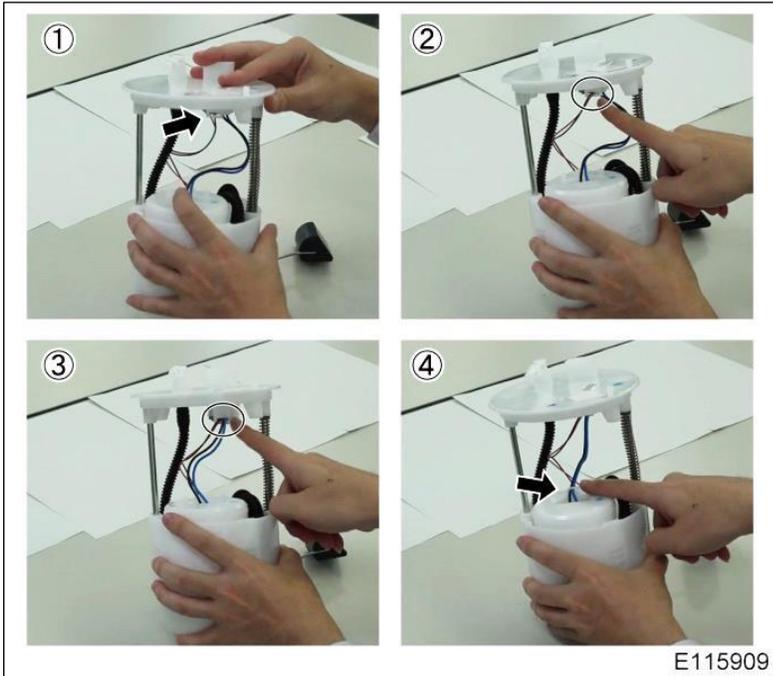

Procedure continued on next page

### C. CAMPAIGN LABEL INSTALLATION

1. Fill out a yellow "Campaign Label" (9999-95-055A-06) with Campaign No: "5321K", your dealer code, today's date.

CAMPAIGN LABEL

CAMPAIGN NO: \_\_\_\_\_


DEALER CODE: \_\_\_\_\_

DATE: \_\_\_\_/\_\_\_\_/\_\_\_\_

PIN 9999-95-055A-06

1328

2. Affix it to the hood as shown:

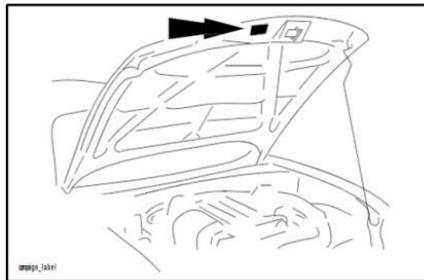

**END OF REPAIR PROCEDURE**