

FRONT SUSPENSION ALIGNMENT SPECIFICATIONS

Item		Fuel gauge indication					
		Empty	1/4	1/2	3/4	Full	
Maximum steering angle [Tolerance $\pm 3^\circ$]	Inner	36°00'					
	Outer	30°12'					
Total toe-in	Tire [Tolerance $\pm 4 \{ \pm 0.16 \}$]	(mm {in})	2 {0.08}				
	Rim inner		1 \pm 3 {0.04 \pm 0.12}				
	(degree)		0°11' \pm 0°22'				
Caster angle ^{*2} (Reference value) [Tolerance $\pm 1^\circ$]			3°00'	3°02'	3°04'	3°06'	3°08'
Camber angle ^{*2} (Reference value) [Tolerance $\pm 1^\circ$]			-0°56'		-0°57'		
Steering axis inclination (Reference value)			14°18'	14°19'		14°20'	14°21'

REAR WHEEL ALIGNMENT SPECIFICATIONS

Item		Fuel gauge indication					
		Empty	1/4	1/2	3/4	Full	
Total toe-in	Tire [Tolerance $\pm 4 \{ \pm 0.16 \}$]	(mm {in})	2 {0.08}				
	Rim inner		1 \pm 3 {0.04 \pm 0.12}				
	(degree)		0°11' \pm 0°22'				
Camber angle ^{*2} (Reference value) [Tolerance $\pm 1^\circ$]			-1°33'	-1°35'	-1°37'	-1°40'	-1°42'