

0920-3a

0920-301B
CONNECTIVITY MASTER UNIT

0920-301C
CONNECTIVITY MASTER UNIT

0920-304A
CENTER DISPLAY

0920-304B
CENTER DISPLAY

0940-101C
FBCM

0940-101D
FBCM

Terminal	Measurement conditions	Voltage (V)
3J	Light switch at TNS position	B+
	Light switch at OFF position	—*4
3K	Under any condition	B+
3L	Under any condition	B+

*4: The measured voltage changes according to the tester specification, therefore determination based on terminal voltage is not possible.

