


■ B-PILLAR LOWER TRIM REMOVAL/INSTALLATION

id091700802000

id091700802000


- 1.Remove the front scuff plate. (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
- 2.Remove the rear scuff plate. (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
- 3.Partially peel back the seaming welts.

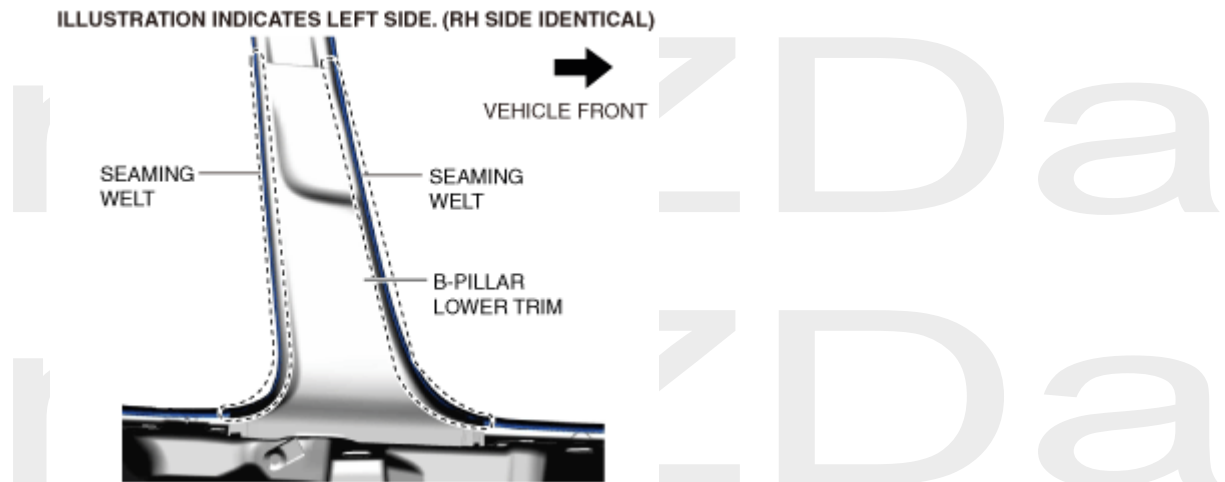

ac5uuw00006651

- 4.Hold the shaded areas shown in the figure, and while pulling the B-pillar lower trim in the directions of arrows (1) and (2), remove the hooks and pins.

ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

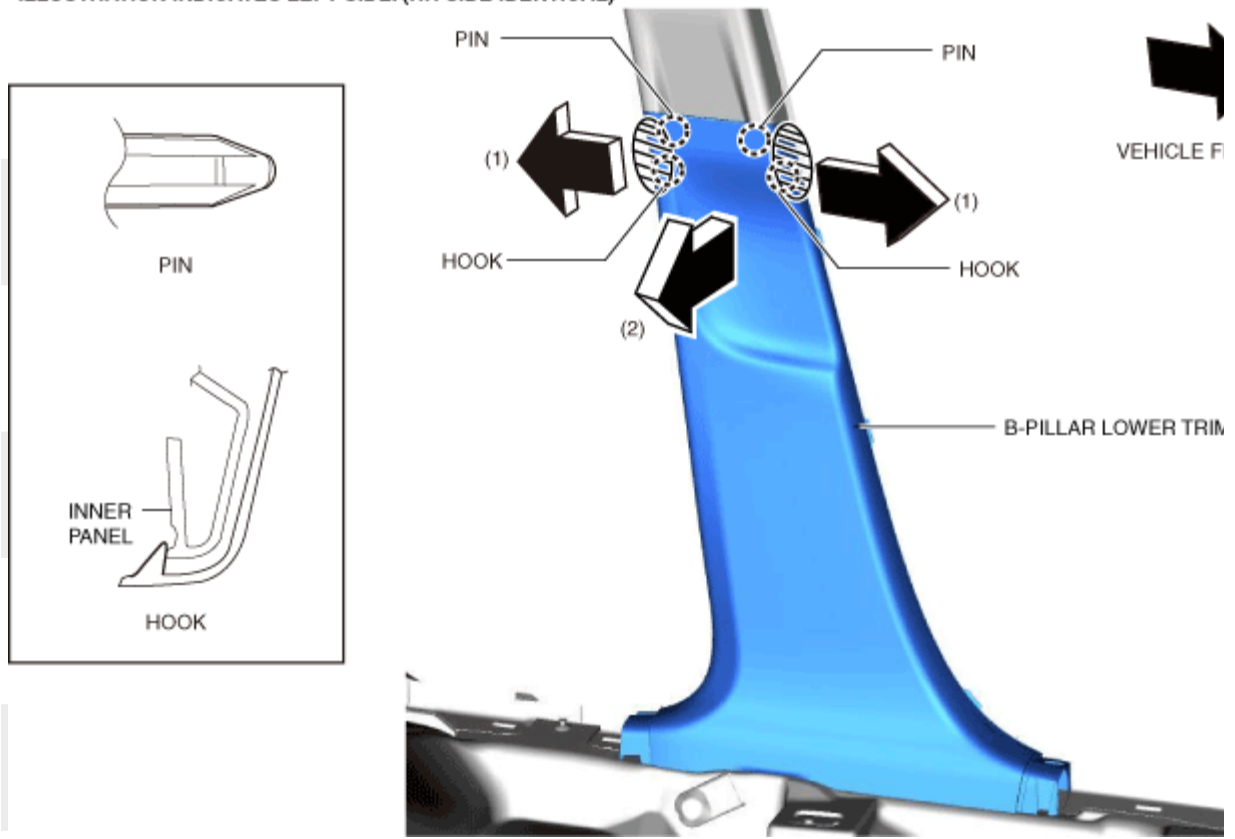


ac5uuw00006652

5. Hold the shaded areas shown in the figure, remove the B-pillar lower trim by pulling it in the direction of the arrow to detach the clips and pins.

mazDa
mazDa
mazDa

ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

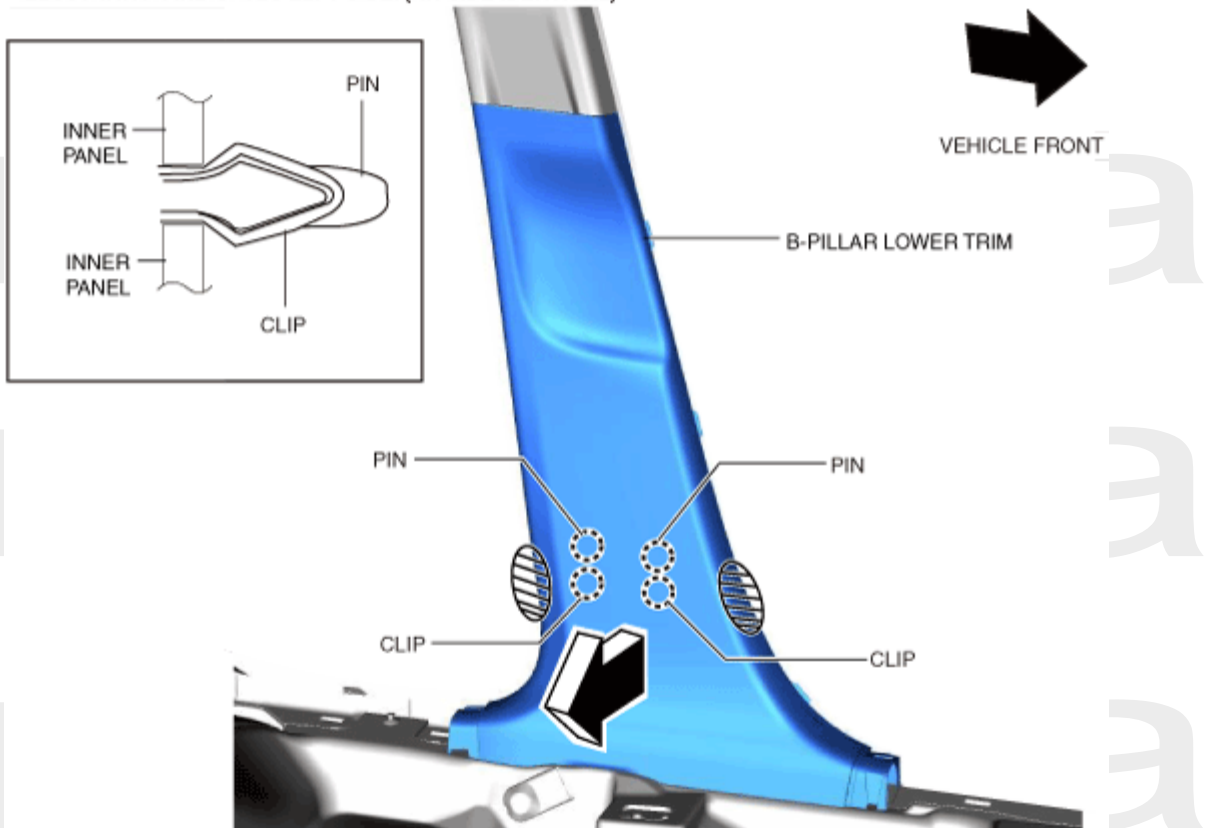

ac5uuw00006653

6. Install in the reverse order of removal.

mazDa
mazDa
mazDa