

## ■ B-PILLAR UPPER TRIM REMOVAL/INSTALLATION


id091700802100

id091700802100

### 1. Remove the following parts:

(1) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.) (2) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.) (3) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.) (4) Adjust anchor cover on the front seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.) (5) Upper anchor installation bolt on the front seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)

### 2. Partially peel back the seaming welts.

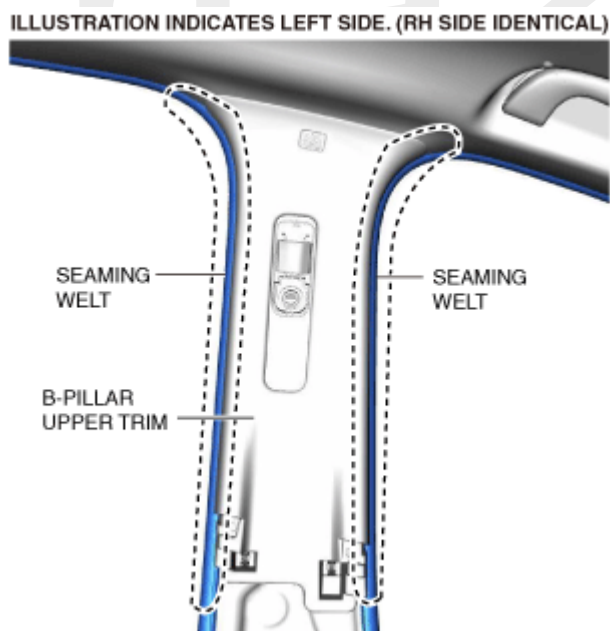


ac5uuw00006654

### 3. Hold the shaded areas shown in the figure and while pulling the B-pillar upper trim in the direction of arrow (1), remove the clips, pin A, and pin B.

#### Caution

- If the B-pillar upper trim is pulled forcibly when removing the clips, pin A, and pin B, the guide could be damaged. When pulling the B-pillar upper trim in the direction of arrow (1), be careful not to damage the guide.

ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

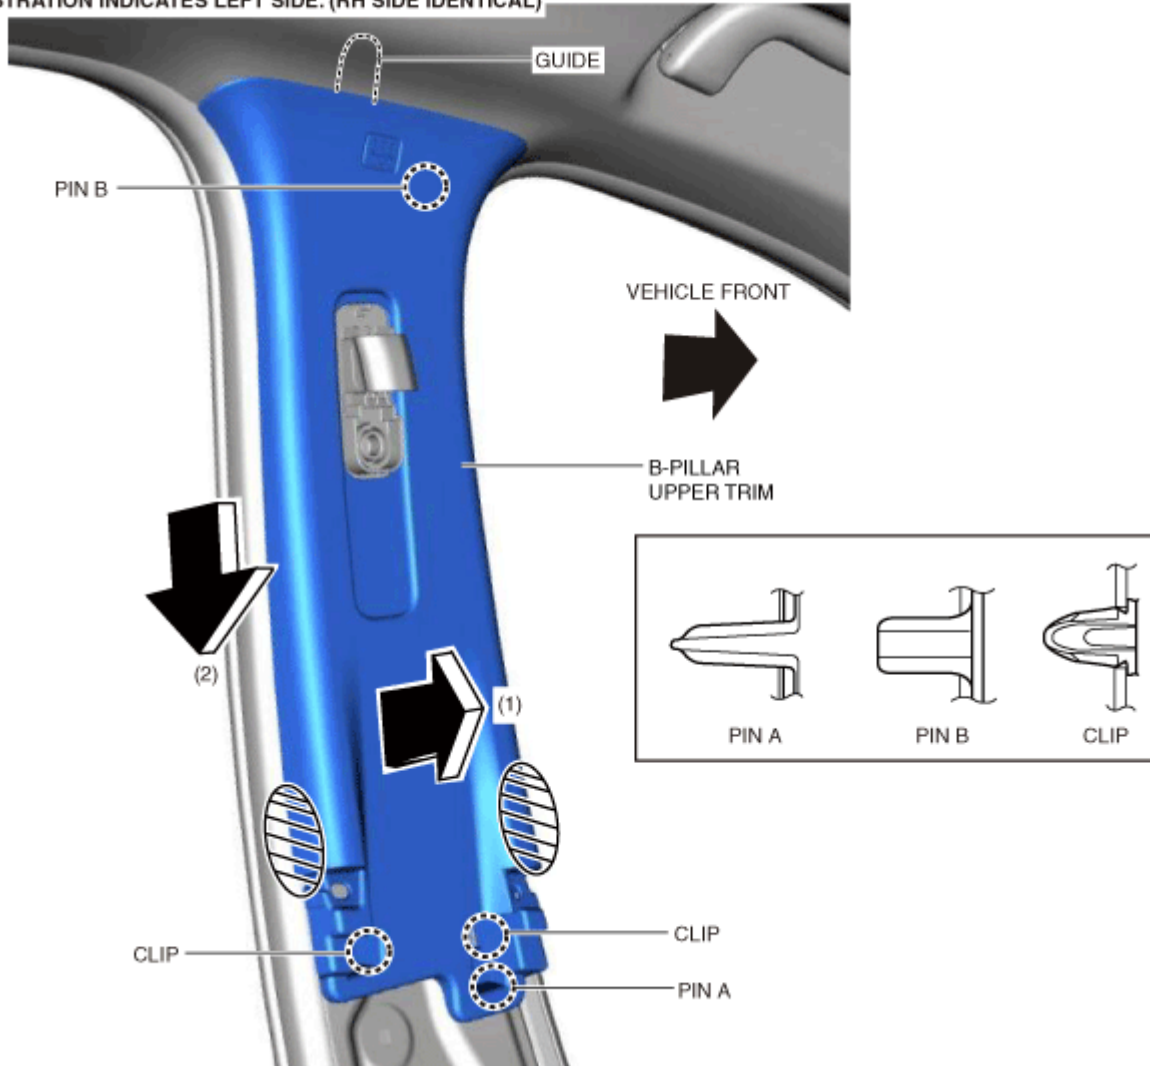

ac5uuw00006655

4. Pull the B-pillar upper trim in the direction of arrow (2) shown in the figure, and remove it while pulling out the guide.

5. Install in the reverse order of removal.