

ENGINE MOUNT [SKYACTIV-G 2.5 (WITH CYLINDER DEACTIVATION)]


id0110s7001800

Purpose, Function

- The engine mount secures the engine and transaxle to the vehicle body, reducing vibration and noise.


Construction

- The three points at the front of the engine (No.3 engine mount), one side of the transaxle (No.1 engine mount), and the rear upper part of the transaxle (No.4 engine mount) are supported.

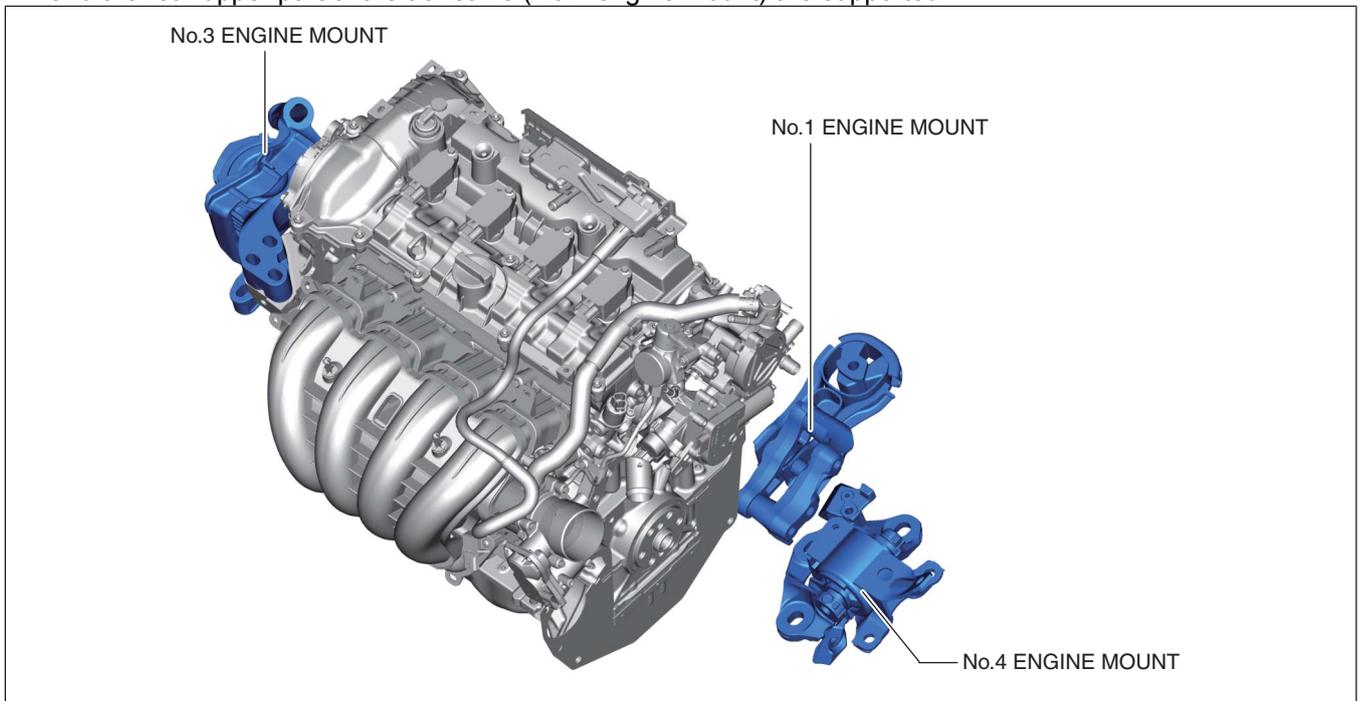

ac5wzn00004488

- The inside of the No.3 engine mount and the No. 4 engine mount rubber is filled with fluid for improved damping effect.

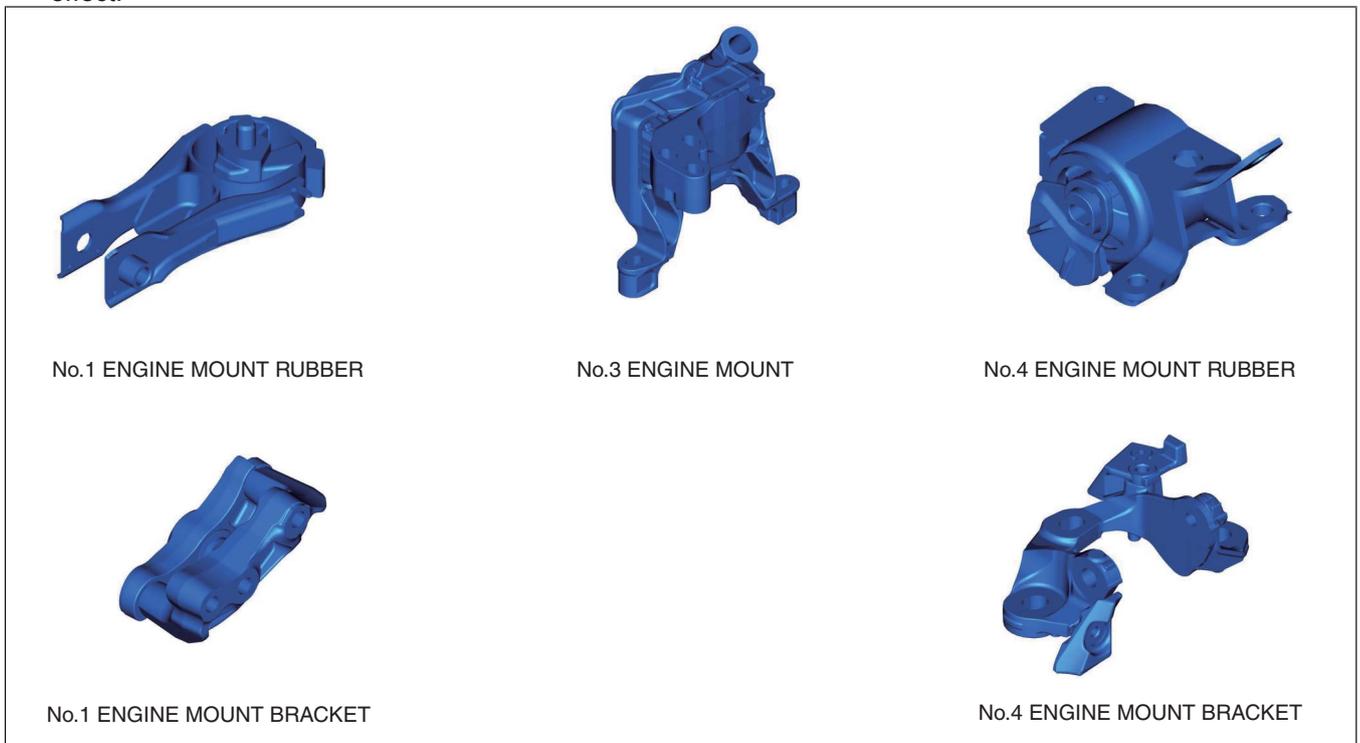

ac5wzn00004489

Operation

- By locating the one side of the transaxle (No.1 engine mount) to the transaxle lower end, the No.1 engine mount absorbs the rotation force to the powertrain generated during engine torque fluctuation. The layout is designed to disperse the rotation force to the front/back directions of the engine.

