

LIGHTING SYSTEMS

FRONT FOG LIGHT BULB REMOVAL/INSTALLATION


id091800802300

1. Disconnect the negative battery cable.
2. Slightly bend back the mudguard.
3. Disconnect the front fog light bulb connector and remove the front fog light bulb by turning it in the direction of the arrow.

Caution

- A halogen bulb generates extremely high heat when it is illuminated. If the surface of the bulb is soiled, excessive heat will build up and the life of the bulb will be shortened. When handling the bulb, hold the flange, not the glass.

4. Install in the reverse order of removal.

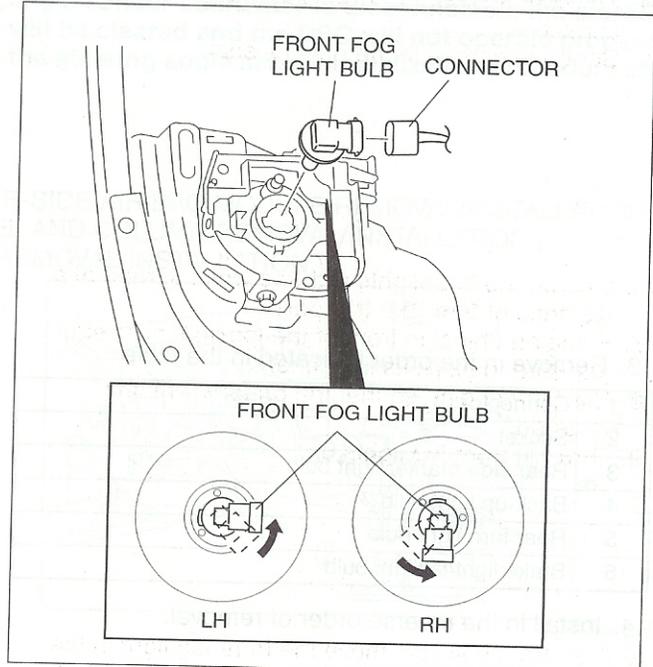


acxuuw00001720

REAR COMBINATION LIGHT REMOVAL/INSTALLATION

id091800801000

1. Disconnect the negative battery cable.
2. Remove the service hole cover.

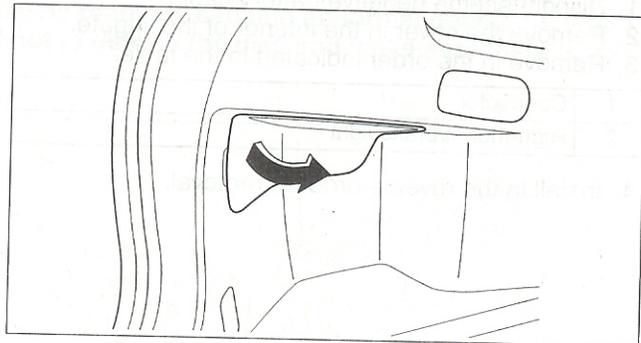


acxuuw00001722

3. Remove in the order indicated in the table.

1	Connector
2	Nut
3	Rear combination light

4. Install in the reverse order of removal.

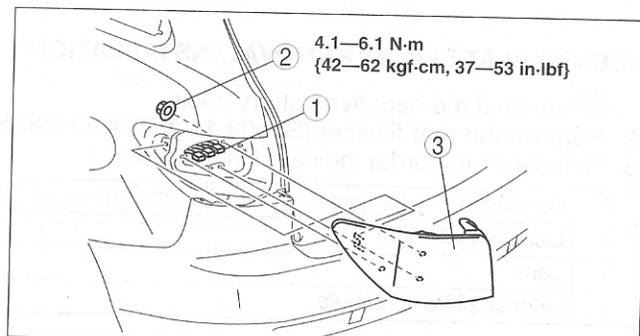

acxuuw00001723

09-18