

2016 - CX-9 - Body and Accessories


DASHBOARD DISASSEMBLY/ASSEMBLY

WARNING:

- Handling the passenger-side air bag module improperly can accidentally operate (deploy) the air bag module, which may seriously injure you. Read the SRS air bag system service warnings and cautions before handling the air bag module. (See [AIR BAG SYSTEM SERVICE WARNINGS \[TWO-STEP DEPLOYMENT CONTROL SYSTEM\]](#).) (See [AIR BAG SYSTEM SERVICE CAUTIONS \[TWO-STEP DEPLOYMENT CONTROL SYSTEM\]](#).) (See [AIR BAG SYSTEM SERVICE WARNINGS \[STANDARD DEPLOYMENT CONTROL SYSTEM\]](#).) (See [AIR BAG SYSTEM SERVICE CAUTIONS \[STANDARD DEPLOYMENT CONTROL SYSTEM\]](#).)

Dashboard Component

1. Remove the passenger-side air bag module. (See [PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION \[TWO-STEP DEPLOYMENT CONTROL SYSTEM\]](#).) (See [PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION \[STANDARD DEPLOYMENT CONTROL SYSTEM\]](#).)
2. Disassemble in the order indicated in the table.

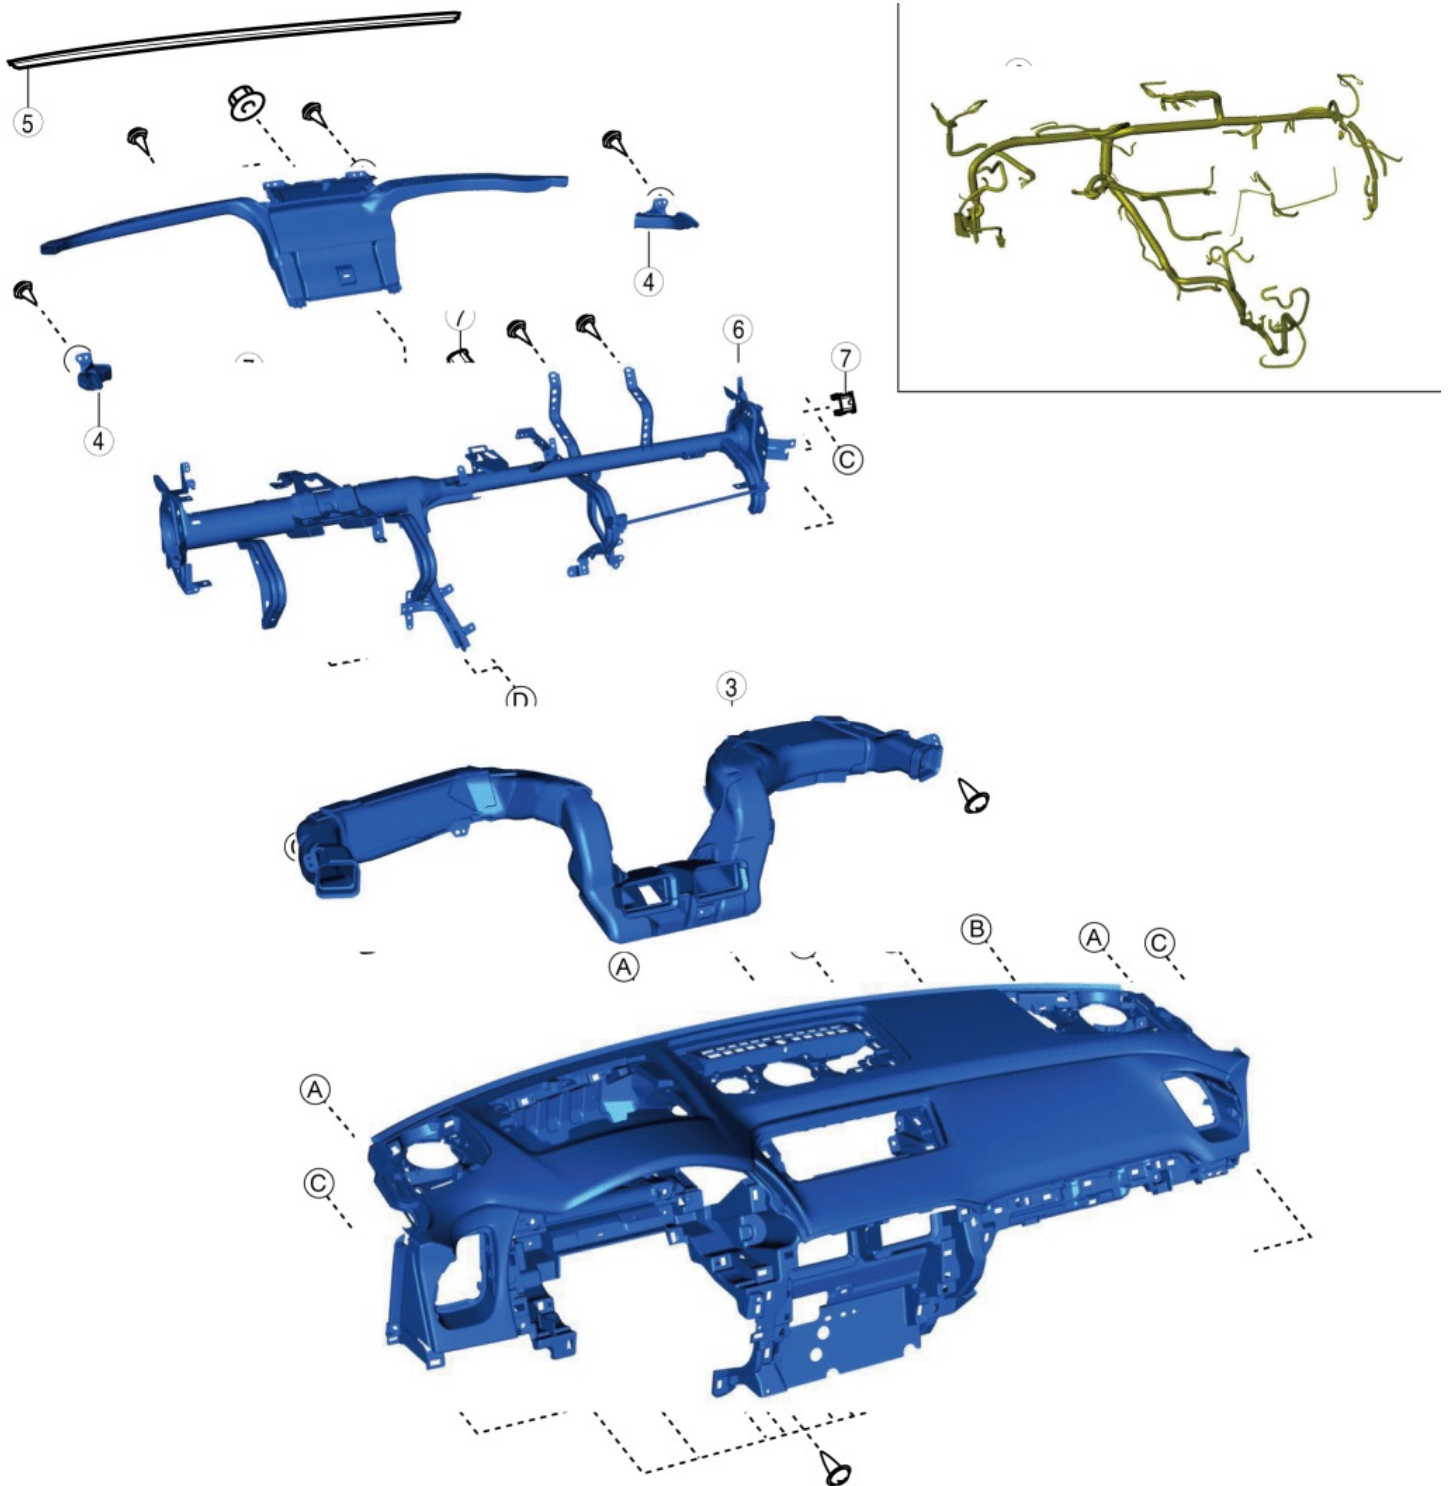

1	Center defroster
2	Dashboard pad
3	Duct
4	Side defroster
5	Seal tape
6	Dashboard member
7	Member junction
8	Wiring harness

3. When replacing the dashboard, remove the following parts:


- a. Side speaker grille (See [SPEAKER GRILLE REMOVAL/INSTALLATION.](#))
- b. Center speaker grille (See [SPEAKER GRILLE REMOVAL/INSTALLATION.](#))
- c. Front side speaker (See [FRONT SIDE SPEAKER REMOVAL/INSTALLATION.](#))
- d. Front center speaker (See [FRONT CENTER SPEAKER REMOVAL/INSTALLATION.](#))

- e. Ambient temperature sensor (With full-auto air conditioner) (See [AMBIENT TEMPERATURE SENSOR REMOVAL/INSTALLATION.](#))
- f. Keyless antenna (See [KEYLESS ANTENNA REMOVAL/INSTALLATION.](#))
- g. Parking sensor control module (See [PARKING SENSOR CONTROL MODULE REMOVAL/INSTALLATION.](#))
- h. Global positioning system (GPS) antenna (See [GLOBAL POSITIONING SYSTEM \(GPS\) ANTENNA REMOVAL/INSTALLATION.](#))
- i. GPS antenna feeder (See [GPS ANTENNA FEEDER REMOVAL/INSTALLATION.](#))
- j. Side ventilator grille (See [VENTILATOR GRILLE REMOVAL/INSTALLATION.](#))

4. Assemble in the reverse order of disassembly.

Dashboard Pad

1. Disassemble in the order indicated in the table.

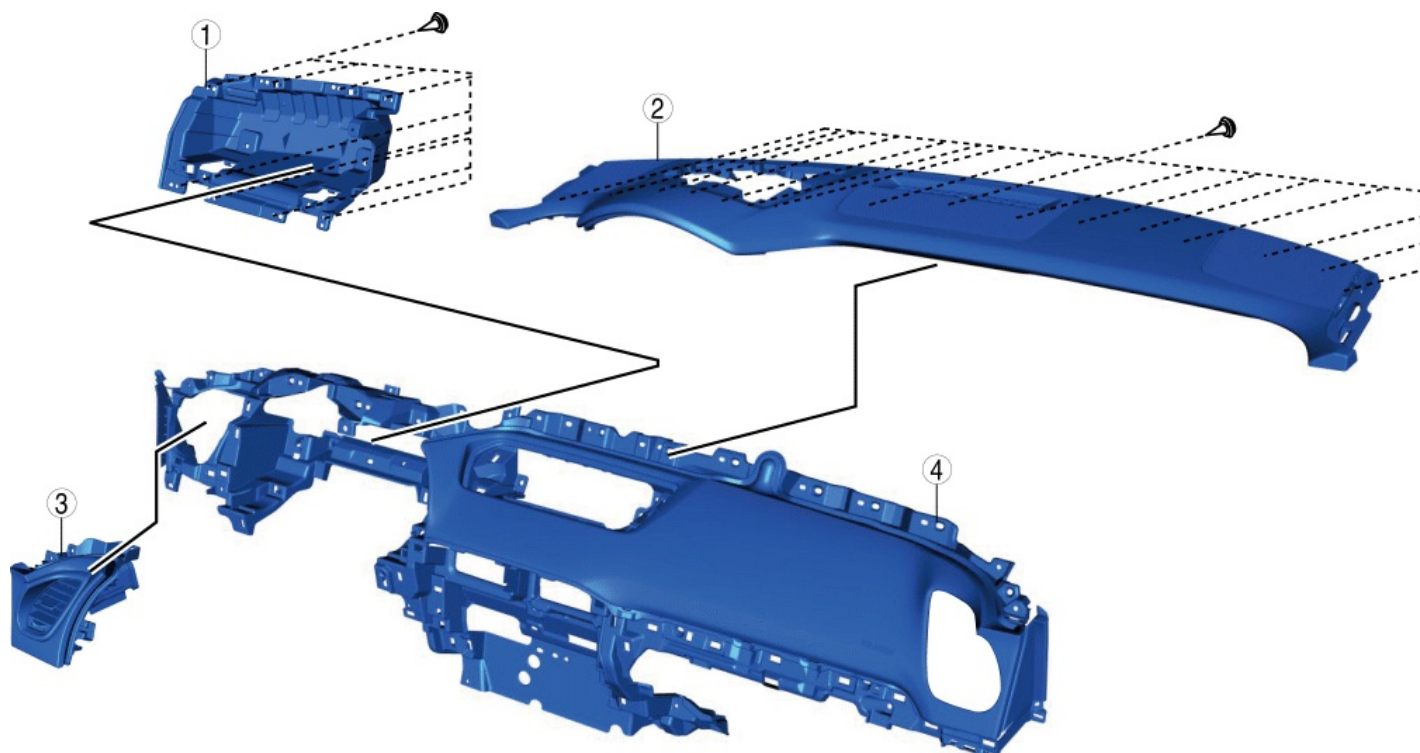

1	Dashboard box
2	Dashboard pad upper
3	Dashboard panel
4	Dashboard pad lower

2. Assemble in the reverse order of disassembly.

[< Previous](#) [Next >](#)

[Back to Top](#)