

DIFFERENTIAL OIL REPLACEMENT

id031400800200

1. Place the vehicle on level ground.
2. Remove the filler plug.
3. Remove the drain plug and drain the differential oil into a container.
4. Install a new washer and the drain plug, and tighten.

Tightening torque

40—53 N·m {4.1—5.4 kgf·m, 30—39 ft·lbf}

5. Add the specified differential oil from the filler plug until the level reaches the brim of the plug hole.

Rear differential oil type

MAZDA LONG LIFE HYPOID GEAR OIL SG1


Rear differential oil capacity (approx. quantity)

0.45 L {0.48 US qt, 0.40 Imp qt}

6. After filling with differential oil, perform oil level inspection.
7. Install a new washer and the drain plug, and tighten.

Tightening torque

40—53 N·m {4.1—5.4 kgf·m, 30—39 ft·lbf}

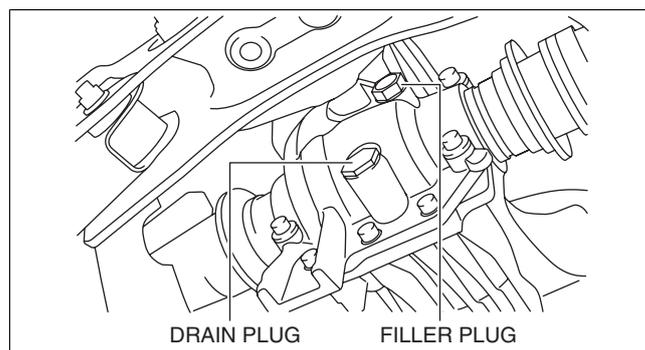

ac5uuw00000286