


0914-1C

0914-102	FRONT DOOR LATCH AND LOCK ACTUATOR (LH)	
0914-103	FRONT DOOR LATCH AND LOCK ACTUATOR (RH)	
0914-104	REAR DOOR LATCH AND LOCK ACTUATOR (LH)	
0914-105	REAR DOOR LATCH AND LOCK ACTUATOR (RH)	
0940-102B	RBCM	<p>NOT USED</p> <p>: WITH SMART BRAKE SUPPORT (SBS)</p>

Terminal	Measurement conditions	Voltage (V)
2B	Under any condition	B+
2C	Lock driver-side door lock switch from unlock	1.0 or less → B+ → 1.0 or less
	Unlock driver-side door lock switch from lock	1.0 or less
2E	Unlock driver-side door lock switch from lock	1.0 or less → B+ → 1.0 or less
	Lock driver-side door lock switch from unlock	1.0 or less
2G	Press transmitter lock button two times (double locking system operation condition)	B+ → 1.0 or less
	Except above	1.0 or less

DOOR LOCK SYSTEM (WITH KEYLESS ENTRY SYSTEM)

0914-1c

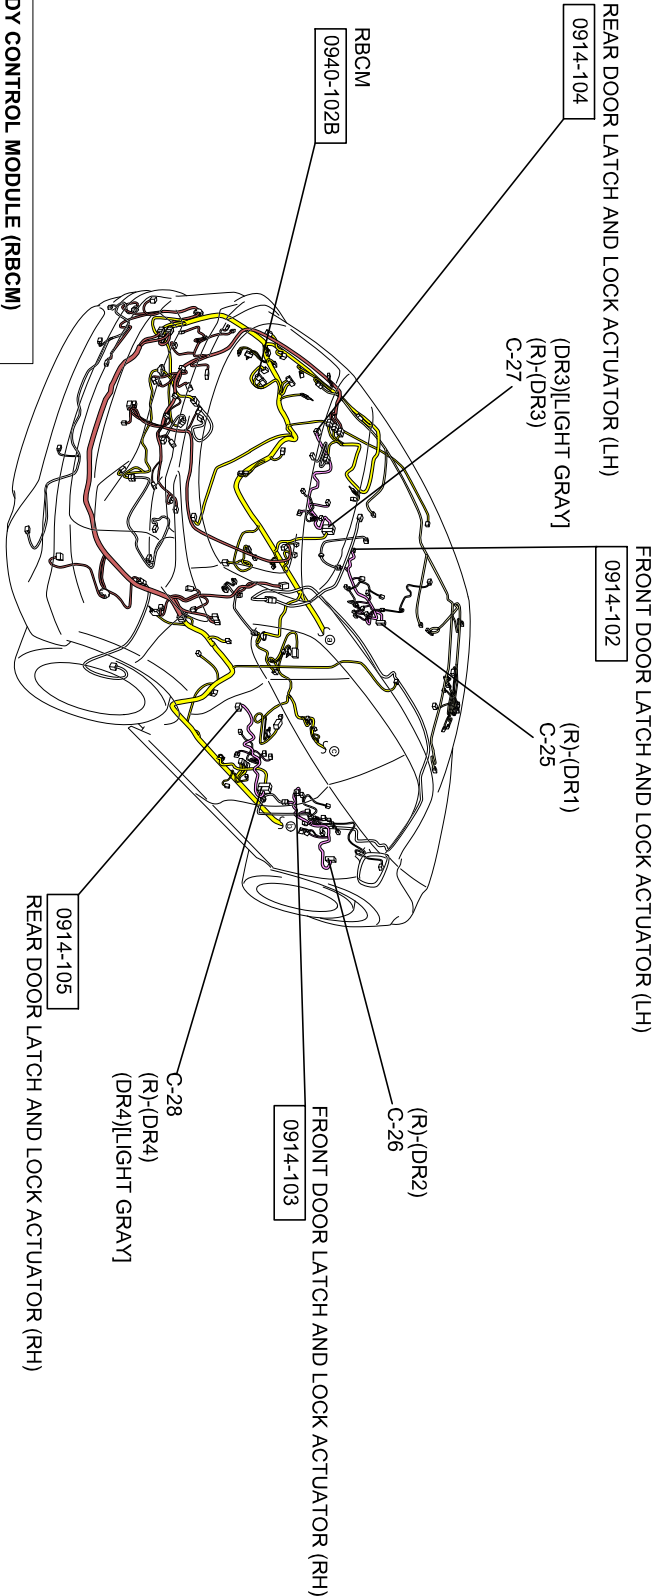

REAR BODY CONTROL MODULE (RBCM)
• The rear body control module (RBCM) controls the system based on the input/output signals.

- FRONT HARNESS
- REAR HARNESS
- REAR No. 2 HARNESS
- REAR No. 4 HARNESS
- REAR No. 5 HARNESS
- DOOR HARNESS
- INTERIOR LIGHT HARNESS
- INTERIOR LIGHT No. 2 HARNESS

