
 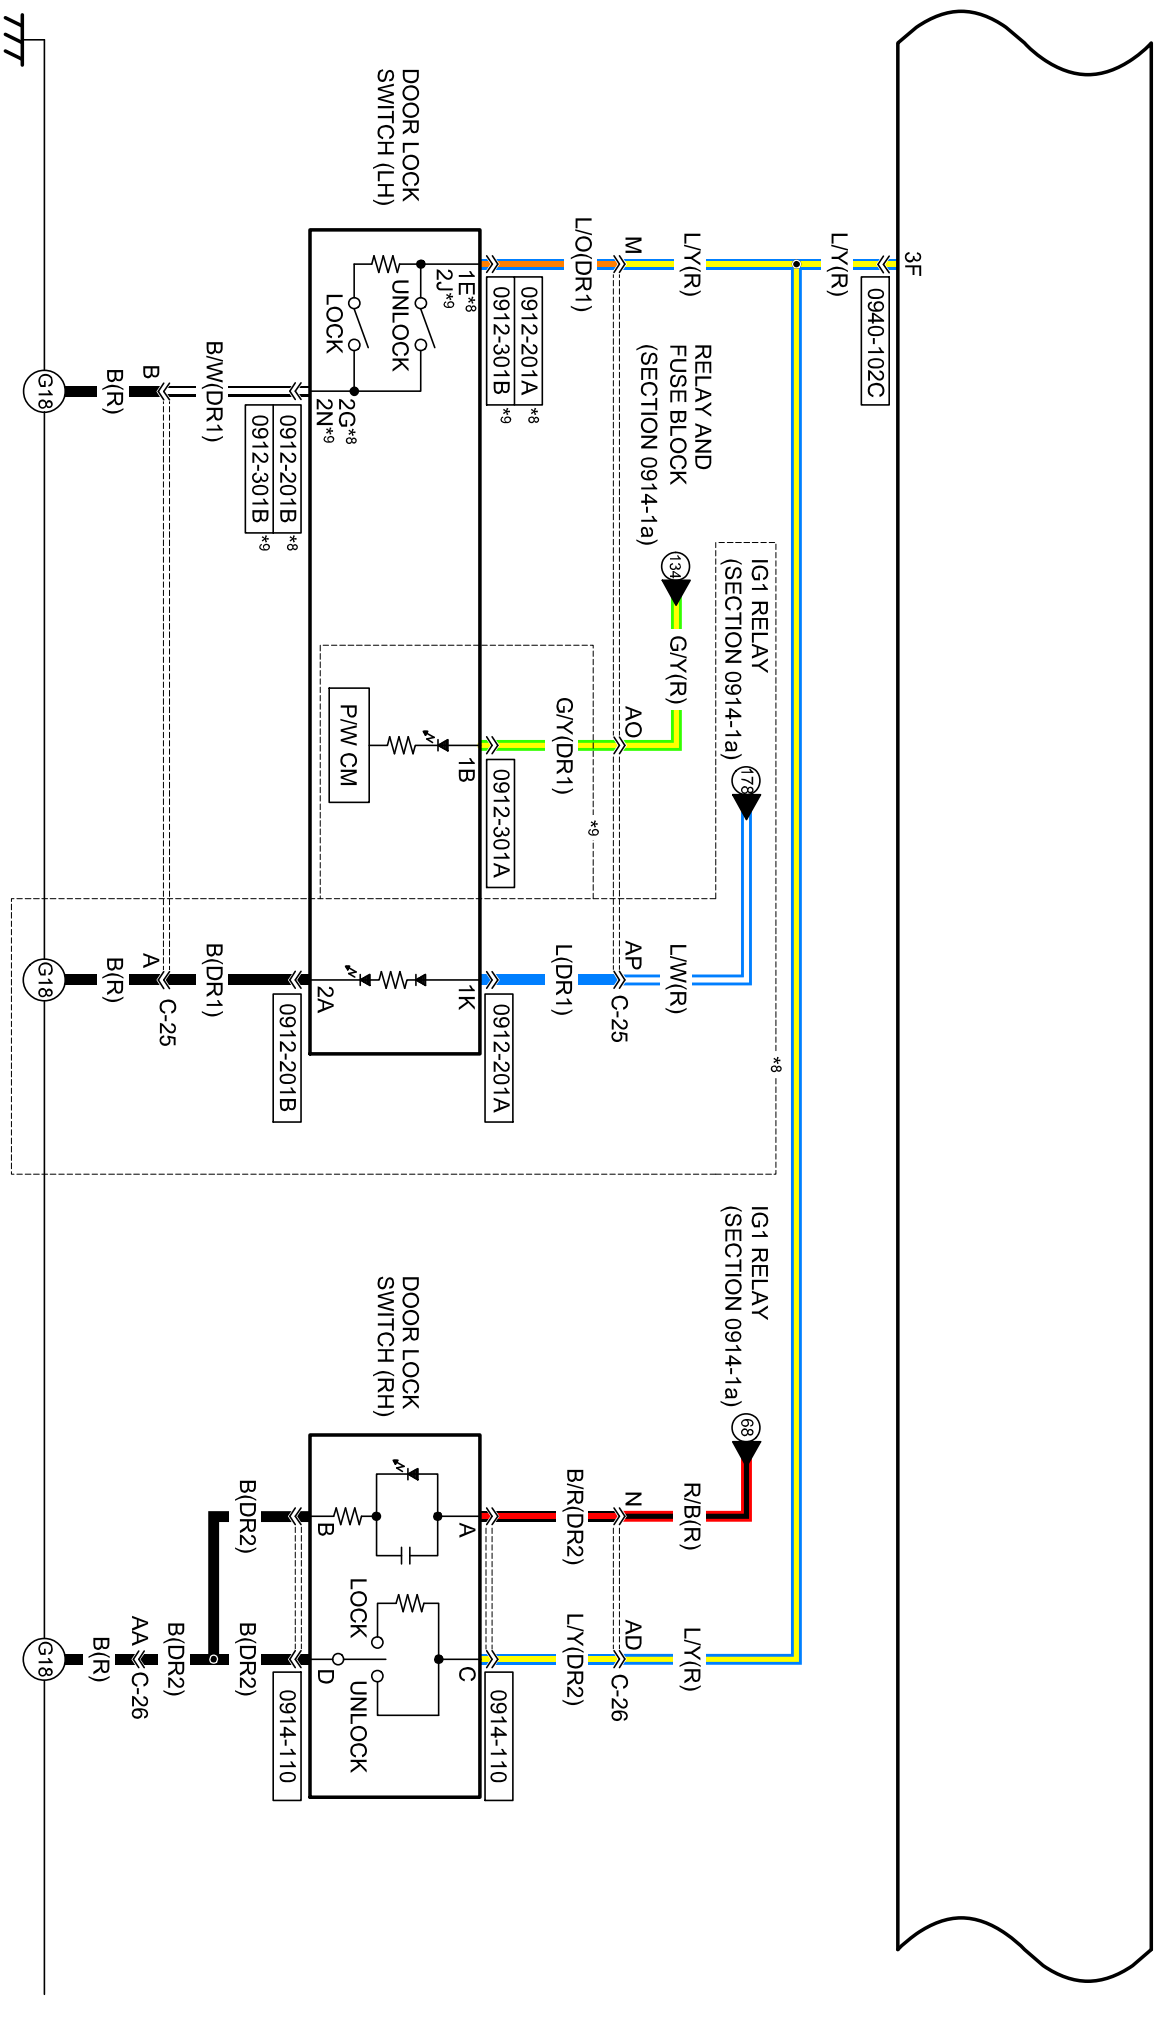



 


RBCM

\*8 : AUTO-OPEN/CLOSE FUNCTION FOR DRIVER-SIDE WINDOW  
\*9 : AUTO-OPEN/CLOSE FUNCTION FOR ALL WINDOWS



0914-1d

0914-110	DOOR LOCK SWITCH (RH)		
0912-201A	POWER WINDOW MAIN SWITCH / DOOR LOCK SWITCH (LH)		
0912-201B	POWER WINDOW MAIN SWITCH / POWER OUTER MIRROR SWITCH / DOOR LOCK SWITCH (LH)		
0912-301A	POWER WINDOW MAIN SWITCH / POWER OUTER MIRROR SWITCH / DOOR LOCK SWITCH (LH)		
0912-301B	POWER WINDOW MAIN SWITCH / POWER OUTER MIRROR SWITCH / DOOR LOCK SWITCH (LH)		

### Auto-open/close function for all windows

Terminal	Measurement condition		Voltage (V)
2J	Door lock switch ON		1.0 or less
	Other		approx. 5.0
	2N		1.0 or less
Under any condition			
Power window main switch terminal voltage table (reference)			
Auto-open/close function for driver-side window			
Terminal	Measurement condition		Voltage (V)
1E	Door lock switch ON		1.0 or less
	Other		approx. 5.0
	2G		1.0 or less
Under any condition			
Rear body control module (RBCM) terminal voltage table (reference)			
Terminal	Measurement conditions		Voltage (V)
3F	Door lock switch unlocked		1.0 or less
	Other		4.5
	Door lock switch locked		2.2

