
■ FRONT BRAKE DISC PAD REMOVAL/INSTALLATION [WITH 2-PISTON FLOATING CALIPER]

id041100002w5

id041100002w5


Oil and Chemical Type

Brake grease (Black)

Type: Daikalub grease

- 1.Remove the wheel and tire. (See WHEEL AND TIRE REMOVAL/INSTALLATION.)
- 2.Remove in the order indicated in the table.
- 3.Install in the reverse order of removal.
- 4.Depress the brake pedal a few times, rotate the wheel by hand, and verify that the brake does not drag.

1. Clean the exposed area of the piston.
2. Push the piston in using the commercially available disc brake expand tool.

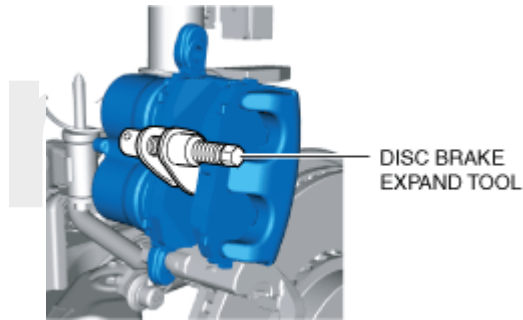

ac5wzw00009648

3. Install the disc pads to the mounting support.
4. Return the caliper to the original position and install the bolt.