


■ FRONT BRAKE DISC REMOVAL/INSTALLATION [WITH 2-PISTON FLOATING CALIPER]

id0411000001w5

id0411000001w5

- 1.Remove the wheel and tire. (See WHEEL AND TIRE REMOVAL/INSTALLATION.)
- 2.Remove in the order indicated in the table.
- 3.Install in the reverse order of removal.
- 4.Depress the brake pedal a few times, rotate the wheel by hand, and verify that the brake does not drag.

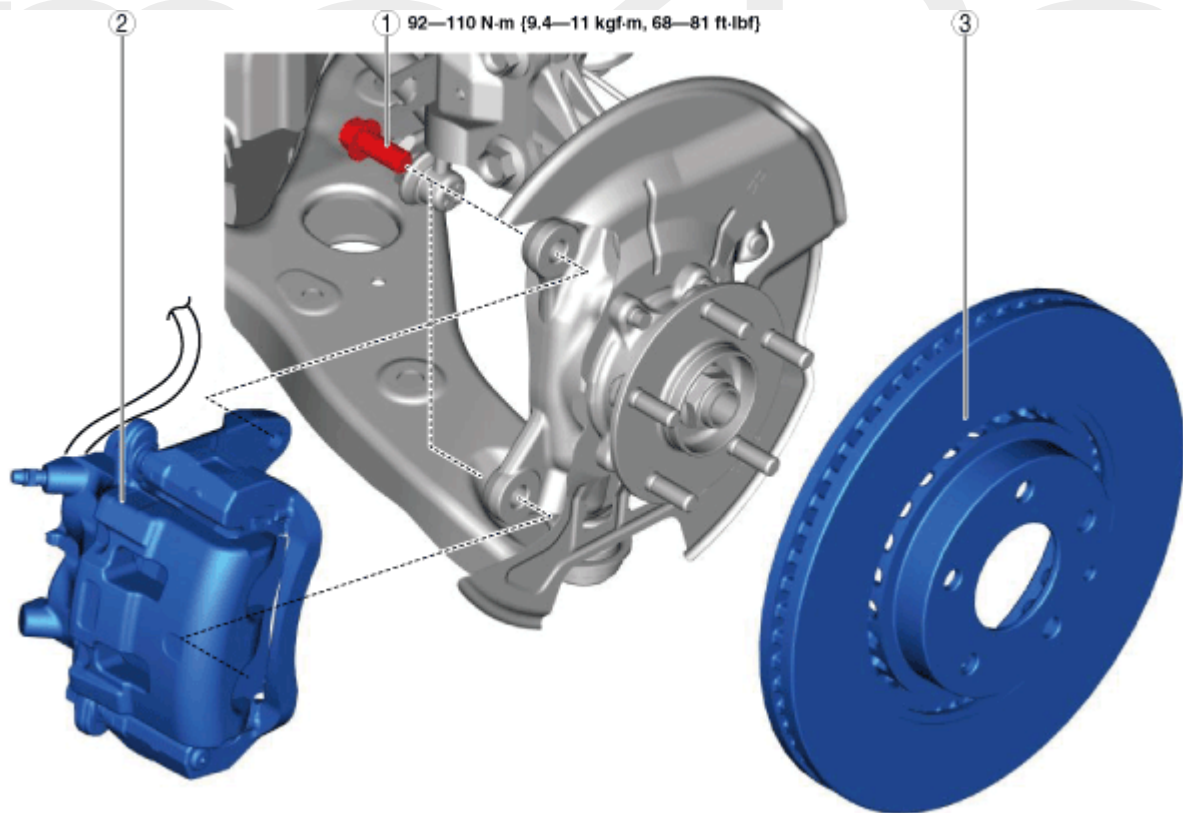


ac5wzw00009644

1	Bolt
2	Front brake caliper component (See Front Brake Caliper Component Removal Note.) (See Front Brake Caliper Component Installation Note.)
3	Disc plate

Front Brake Caliper Component Removal Note


- 1.Remove the front brake caliper component and suspend it in a place out of the way using a cable.

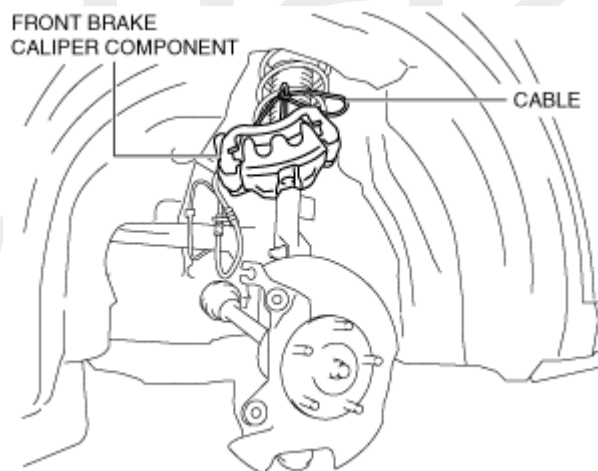

ac5wzw00009645

Front Brake Caliper Component Installation Note

- 1.Push the piston in using the commercially available disc brake expand tool.

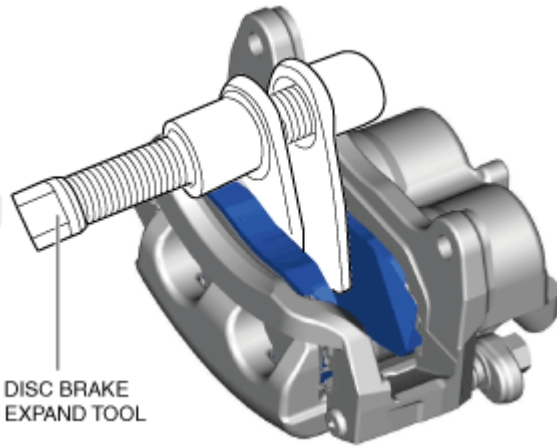

DISC BRAKE
EXPAND TOOL

ac5wzw00009646

2. Install the front brake caliper component.