


INTERIOR TRIM

CONSOLE DISASSEMBLY/ASSEMBLY

1. Disassemble in the order indicated in the table.

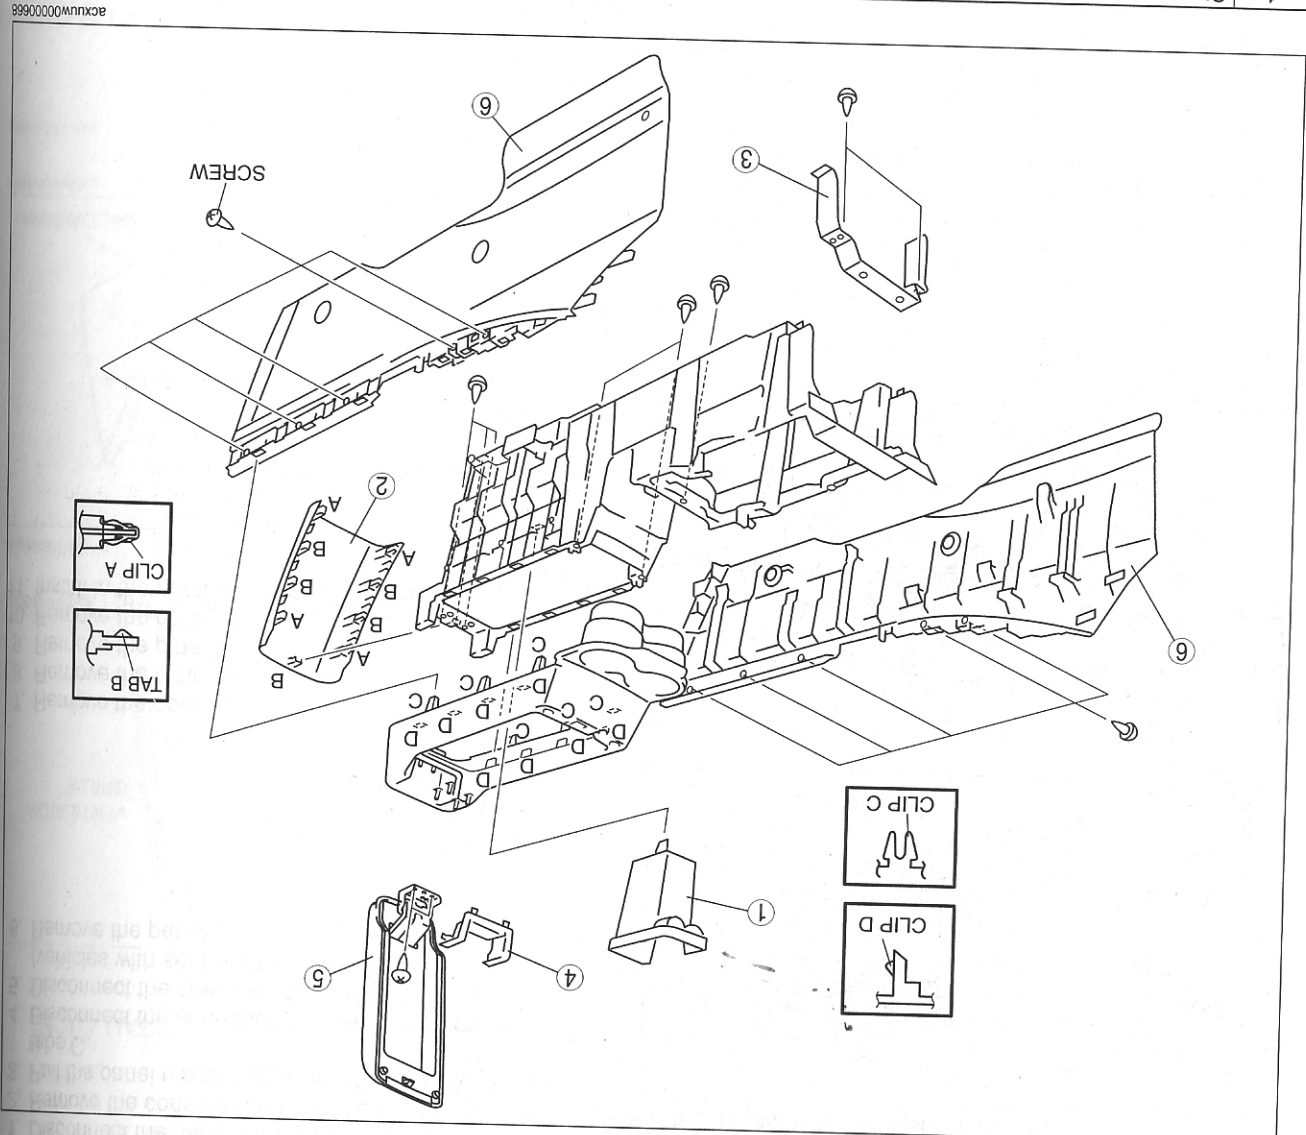

1	Storage box
2	Console cover
3	Bracket

4	Hole cover
5	Console lid
6	Console

2. Assemble in the reverse order of disassembly.

99xuuw0000666

1091700801300