


INTERIOR TRIM

CONSOLE PANEL REMOVAL/INSTALLATION

id091700804100

1. Detach clips A from the console using a tape-wrapped flathead screwdriver.
2. Remove the pin B and tab C.
3. Remove the pin D.
4. Remove the console panel.
5. Install in the reverse order of removal.

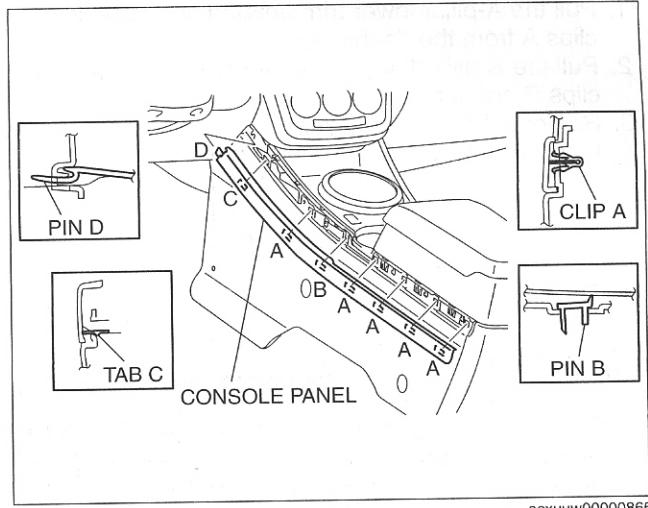


acxuuw00000865

A-PILLAR TRIM REMOVAL/INSTALLATION

id091700801900


1. Remove the A-pillar lower trim (See 09-17-16 A-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
2. Partially peel back the seaming welt.
3. Remove clips A using a fastener remover.
4. Pull the A-pillar trim outward and remove clip B from the grommet (1).
5. Slide the A-pillar trim upward and remove clip B from the A-pillar trim (2).

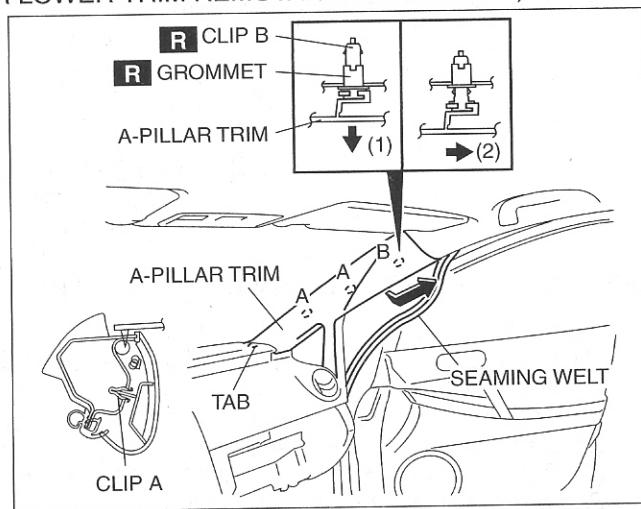

09-17

acxuuw00000676

6. Pull clip B out, then rotate 45°.
7. Pull clip B and remove it from the grommet.
8. Install clip B to the A-pillar trim.
9. Install in the reverse order of removal.

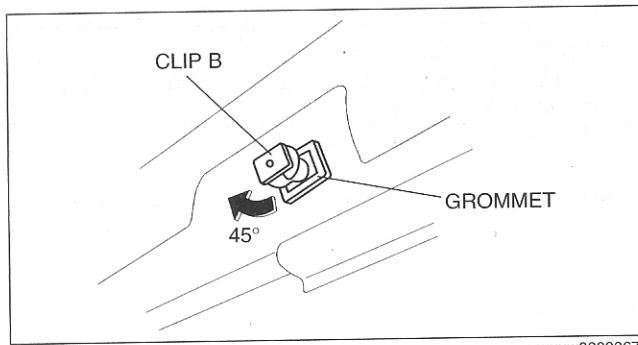

acxuuw00000677

09-17-15