
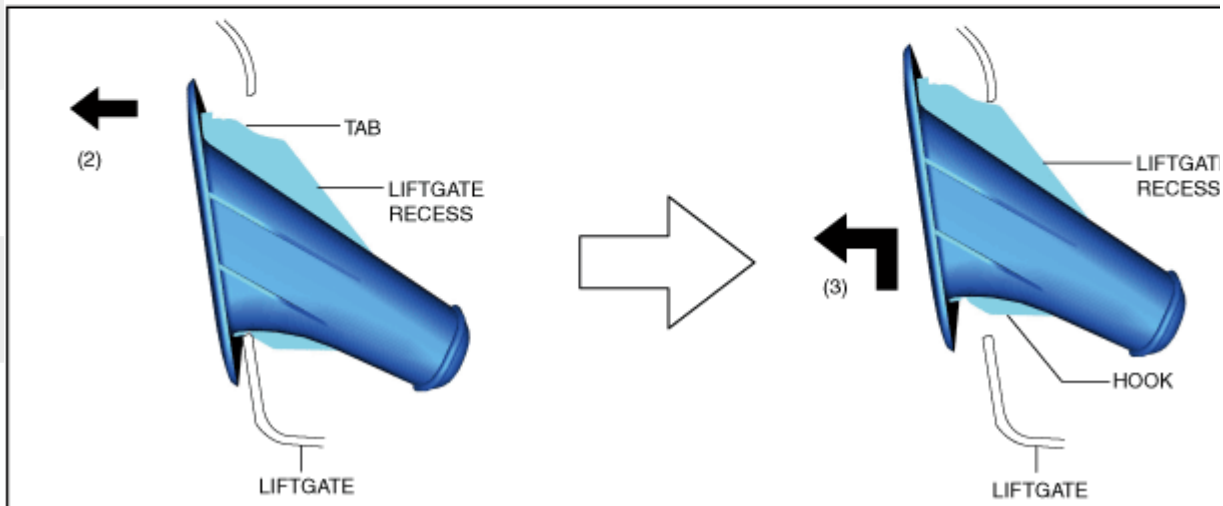


■ LIFTGATE RECESS REMOVAL/INSTALLATION

id091700467500

id091700467500

1. While pressing the liftgate recess in the direction of arrows (1) shown in the figure, move the liftgate recess in the direction of arrow (2), and detach the liftgate recess tabs.

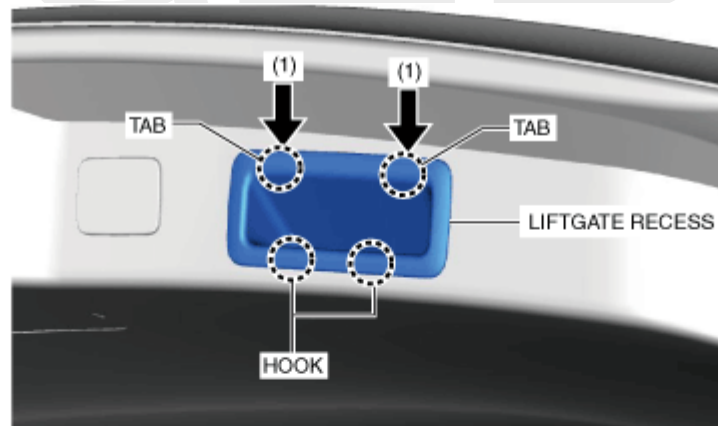

ac5uuw00006699

2. Remove the liftgate recess in the direction of arrow (3) shown in the figure while detaching the hooks of the liftgate recess.

3. Install in the reverse order of removal.