

Mazda Infotainment Firmware Update
1 Page Version – for **Versions 31.00.100A or later**

1. Turn ignition **OFF**
2. Remove SD card and all other connected devices.
3. Press the **Start** button to turn on **ACC** mode (push Start button without stepping on pedal)
4. *Wait...* for infotainment to start
5. Press **Music + Favourite + Mute** at the same time, for 2 seconds
6. Type **3**, then **Enter**, then **Clear**
7. Type **2**, then **Enter**, then **Clear**, then **Exit**
8. Press the **Start** button **twice** to turn the ignition **OFF**
9. Get out, close all doors, gate, and hood
Lock the vehicle, and keep all transmitters **5 meters away for 3 minutes**
10. Unlock the vehicle with remote
11. Press the **Start** button to turn on **ACC** mode
12. Insert USB flash drive
Wait for message that USB is recognized
13. Press **Music + Favourite + Mute** at the same time, for 2 seconds
14. Type **99**, then **Enter**
15. Select **Search**
16. Select **Update Package**
17. Select **Update**
18. *Wait...* about 30 - 40 minutes
Press the **brake** every 15 minutes (to prevent ACC from turning off)
19. *If shown, ignore message to Restart. **Do Not Restart.***
20. Press the **Start** button **twice** to turn the ignition **OFF**
21. Remove the USB flash drive
Get out, close all doors, gate, and hood
Lock the vehicle, and keep all transmitters **5 meters away for 3 minutes**
22. Unlock the vehicle with the remote
23. Press the **Start** button to turn on **ACC** mode, and wait 1 minute
Do **Not** Touch anything
24. Confirm the software version
25. Press **Start** button **twice** to turn ignition **OFF**
26. Insert Navigation SD card
27. Press **Start** button **twice** to turn ignition **ON**
28. Check all operations: Radio, Bluetooth, Navigation, Connected Services, USB, etc.)