

iPod Playback and Screen Display (1)


Notes

- After connecting the iPod to the audio system, perform all operations from the audio unit. Control is not possible from the iPod.
- The button operations indicated in the instructions are all audio unit buttons.
- These instructions are applicable to several vehicle models therefore some of the button names may be different depending on the model. If this occurs, refer to the Owner's Manual accompanying the vehicle ("CD Changer Use" in the audio section, or "CD Changer Use").

The iPod input mode changes as follows when pressing the CD button.

1. If there is no CD inserted in the audio unit:
AM/FM/MD/Cassette → 'EX' (iPod input mode)
2. If a CD is inserted in the audio unit:
AM/FM/MD/Cassette → 'CD' → 'EX' (iPod input mode)
Afterwards, it switches between 'CD' and 'EX' each time the CD button is pressed.

The following screen is displayed in the display or audio system and iPod playback begins

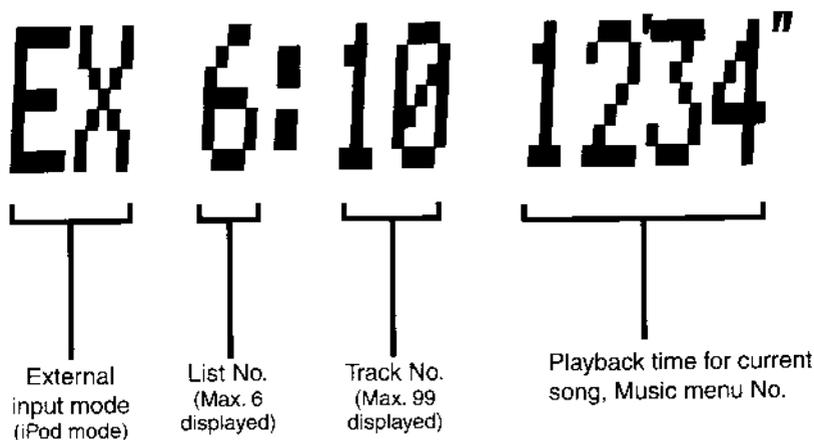

Note

- Song titles are not displayed.
- Artist and album name text display is not possible.

iPod Playback and Screen Display (2)

- After playing the iPod while disconnected from the audio system and then reconnecting it to the audio system, playback begins from the start of the same Music Menu / List / Song number of the iPod that was previously played. (Excluding the first time it is connected to the audio system)
- If the iPod is disconnected during playback and then reconnected without operating the iPod, the playback resumes from the song being played prior to disconnecting it from the audio system.
- If the iPod is disconnected and the song content in the iPod is reorganized and then the iPod is reconnected, or there is playback from a different iPod, one of the following will occur:
 - Playback begins from the start of the same number (music menu/list /song) of the iPod previously played.
 - Playback begins from the start of (Artist/List 1/Song 1).
- If the audio source is changed while the iPod is being played (CD, cassette, MD, AM/FM), or the power to the audio unit or the ACC is turned off, the song that was originally being played is temporarily stopped. When the mode is switched back to iPod mode, the playback is restored.

Song (Track) Selection

Select a song (track) by pressing the SEEK/TRACK/APC \wedge or \vee button.

- If you want to listen to the next song, press the SEEK/TRACK/APC \wedge button.
- When you want to return to the beginning of the currently played song, press the SEEK/TRACK/APC \vee button.
- If you want to listen to the previous song, press the SEEK/TRACK/APC button \vee 2 times, or press the SEEK/TRACK/APC \vee button 1 time within 1 second from the beginning of the song playback.

Notes

- If the track has more than 99 songs, '1' is displayed from the 100th song. (When 99 songs are exceeded, it starts from '1')
- If the entire song content of the selected list is listened to, playback is repeated from the first song of the same list.
- If the SEEK/TRACK/APC \vee button is pressed 2 times while the first song on the list is being played, or the SEEK/TRACK/APC \vee button is pressed 1 time within 1 second from the beginning of the song playback, playback begins from the last song on the list.
- If the SEEK/TRACK/APC \wedge button is pressed while the last song on the list is being played, playback begins from the first song on the list.

Song (Track) Fast Forward and Back

To fast forward during playback, press and hold the  button.

To fast track backwards during playback, press and hold the  button.

Release the button to end the function.

Notes

- During fast back, the system resumes normal playback when the head of a song is detected.
- Even if the head of a song is detected while fast forwarding, fast forwarding continues.
- If fast forwarding reaches the last song on the list, playback begins from the first song on the list.

Random Playback (RANDOM PLAY)

A list of songs can be played in random order.

Press the RDM button to play all songs on a list in random order.

Notes

- *During random playback, tracks are displayed in the order of 1→2→3→4. (These song numbers are random control numbers and are not the actual song numbers.)*
Display Ex: If there are 10 songs on a list: 1→2→3→4···10→1→2→3→4
- *If the RDM button is pressed again, random playback is canceled.*
- *When RDM playback is canceled, the track display returns to the former track number.*
- *Even if the RPT, SEEK/TRACK/APC \wedge \vee , DISC \wedge \vee , \lll \ggg , SCAN buttons are pressed, random playback will be canceled.*

Repeating Playback (REPEAT PLAY)

This function allows you to listen to a song again.

Pressing the RPT button repeats playback of the song currently being played.

Notes

- *Pressing the RPT button again cancels the repeat playback.*
- *Even if the RDM, SEEK/TRACK/APC \wedge \vee , DISC \wedge \vee , \lll \ggg , SCAN buttons are pressed, repeat playback will be canceled.*

Song Search (SCAN PLAY)

Press the SCAN button to play the first ten seconds of each song of all the songs on the list starting with the next song following the one currently being played. When the scanning function returns to the song where the SCAN button was pressed, normal playback resumes.

Notes

- *If the scan button is pressed while in scan play, the scan play function is canceled and normal playback begins from the song where the SCAN button was pressed.*
- *During scan play, the song number where the scan was initiated flashes in the display. After that, the song number display is updated 5 songs from where the scan ended and the scan number, "Song number-5 from scan start" is displayed. (At this time, the song number may be different from the actual song number.)*
- *If the SCAN button is pressed during random play, random play is canceled and scan play starts from the beginning of the song currently being played. At this time, the random number where the scan initiated flashes in the display, and after the scanning ends, the display switches from the random number to the song number.*

MUSIC MENU Switching

If the DISC \wedge button is pressed for 1 second or longer, or 2 times within one second, the music menu switches 1 step at a time as follows, and playback begins from the first song on the list.



If the DISC \vee button is pressed for 1 second or longer, or 2 times within one second, the music menu switches 1 step at a time in the reverse direction indicated above.

When switching the music menu, the music menu number is displayed for approximately 1 second in the location where the song playback time is displayed, and then it returns to the display of the song playback time.

<Music menu number>

1'00" : Playlists

2'00" : Artists

3'00" : Albums

4'00" : Songs

5'00" : Genres

6'00" : Composers

Notes

- Even if the DISC button is pressed for longer than 2 seconds, the music menu continues to change 1 step at a time.
- Although the list number display changes while the DISC button is being pressed, when the button is released, the list number becomes '1', and the music menu changes.
- Depending on the audio unit, playback may begin from the displayed list number at the point the DISC button is released after being pressed for 1 second or longer while switching the menu.
(Normally, playback is from list number 1)

LIST Switching

A short press of the DISC \wedge or \vee button (Within one second) switches the list.

DISC \wedge button: Playback starts from the first track of the next list following the list number currently displayed.

Ex. EX 5:10 12'34" \rightarrow EX 6:1 00'00"

DISC \vee button: Playback starts from the first track of the previous list following the list number currently displayed.

Ex. EX 5:10 12'34" \rightarrow EX 4:1 00'00"

When switching lists, the music menu number is displayed for approximately 2 seconds in the location where the song playback time is displayed, and then it returns to the display of the song playback time.

<Music menu number>

1'00" : Playlists

2'00" : Artists

3'00" : Albums

4'00" : Songs

5'00" : Genres

6'00" : Composers

Notes

- The DISC \wedge or \vee buttons are only operable when there is a list.
- If there are 6 or more lists, '1' from the 7th list is displayed. (When exceeding 6 lists, it starts from 1)
- If the entire song content of the selected list is listened to, playback is repeated from the first song of the same list.