


## ELECTRIC PARKING BRAKE MOTOR GEAR UNIT REMOVAL/INSTALLATION


id041200523100

1. Switch the ignition ON (engine off).
2. Release the electric parking brake.
3. Switch the ignition off.
4. Disconnect the electric parking brake motor gear unit connector.

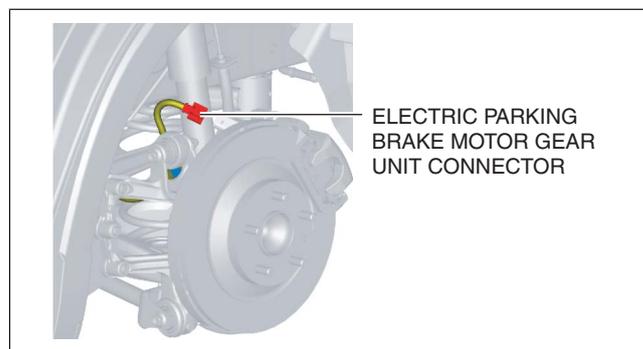

ac5uuw00004289

5. Remove the bolts.
6. Remove the electric parking brake motor gear unit.
7. Install in the reverse order of removal.

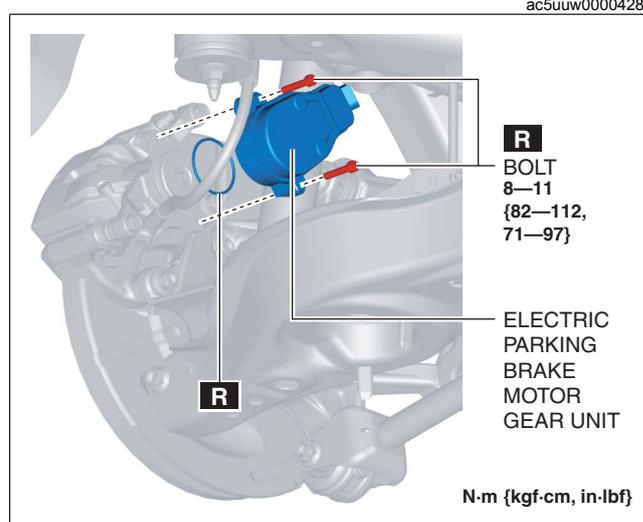

ac5uuw00004290