

Service Information

Mazda Motor Corporation

3-1, Shinchi, Fuchu-cho, Aki-gun
Hiroshima 730-8670, Japan
TEL : 81(82)287-5323
FAX : 81(82)287-5220



Category S	Repair Guidance	Ref. No. R097/13C	Page 1 of 4
Coverage <input type="checkbox"/> Distributor only <input checked="" type="checkbox"/> Please inform your dealers		Date Issued November 21, 2013	
Please convey this information to your <input type="checkbox"/> Director <input checked="" type="checkbox"/> General Manager <input checked="" type="checkbox"/> Warranty Dept. <input checked="" type="checkbox"/> Parts Dept. <input checked="" type="checkbox"/> Training Dept. <input checked="" type="checkbox"/> Field Rep.		Date Revised April 24, 2018	
Applicable Model CX-5 (KE) & Mazda6 (GJ) with power folding mirrors	Applicable Countries or Specifications Worldwide excluding North America		

REVISED


Revision Note:

- **“REPAIR INFORMATION” has been revised to additionally attach a seal tape to the electric fold-in unit.**
- **“SUBJECT VIN & PRODUCTION DATE RANGE” has been updated.**

Subject: Power outer mirror does not fold-in by switch operation

DESCRIPTION

Some vehicles may exhibit a condition where the power outer mirror will not fold in when the switch is rotated to the fold-in position.

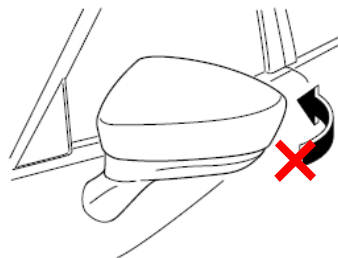

Outer mirror does not fold in by switch operation.

CAUSE

1. The worm wheel inside the electric fold-in unit may be cracked. Because of this, the motor spins and does not transmit the power.
2. Rust may occur inside the electric fold-in unit by water intrusion. Due to this, the sliding resistance increases causing to stop the folding-in operation in the middle, or the electric circuit is damaged causing to stop the operation at all.

MASS PRODUCTION CHANGE

1. Molding method of the worm wheel has been changed to increase the strength.
2. A seal cap has been installed between the harness and the electric fold-in unit to prevent water intrusion.

SUBJECT VIN & PRODUCTION DATE RANGE

**CX-5(KE)
Japan Built**

Spec.	VIN Range		Production Date Range
Australia	JM0 KE**** **	100001 - 425651	Jan. 10, 2012 - Feb. 10, 2017
General (R.H.D.)	JM6 KE**** **		
General (L.H.D.)	JM8 KE**** **		
Israel	JMZ KE**** **		
Europe (L.H.D. & UK Specs.)	JMZ KE**** **	100001 - 565480	Nov. 17, 2011 - Feb. 20, 2017
China	JM7 KE **** **	108702 - 142378	Apr. 18, 2012 - May 31, 2013
Algeria	KE**** **	105618 - 239219	Mar. 14, 2012 - Jan. 22, 2014

Mazda6 (GJ)

Spec.	VIN Range	Production Date Range	
Australia	JM0 GJ**** **	100001 - 243670	
General (R.H.D.)	JM6 GJ**** **		
General (L.H.D.)	JM7 GJ**** **		
Israel	JMZ GJ**** **		
Europe (L.H.D. & UK Specs.)	JMZ GJ**** **	100001 - 361531	Jul. 31, 2012 - Jun. 24, 2016
China	JM7 GJ**** **	100001 - 126482	Oct. 31, 2012 - Nov. 6, 2013
Algeria	GJ**** **	100001 - 201781	Apr. 2, 2013 - Jan. 14, 2015

REPAIR PROCEDURE

If the customer concern has been reproduced, replace the electric fold-in unit and the harness of the affected side power outer mirror with newly established service parts.

For CX-5 produced up to 2014/12/10 (RVM Type), refer to the attachment 1 for the procedure.

For CX-5 produced from 2014/12/11 (BSM Type), refer to the attachment 2 for the procedure.

For Mazda 6, refer to the attachment 3 for the procedure.

PARTS INFORMATION

(CX-5 produced up to 2014/12/10 (RVM Type))

Part Number	Description	Q'ty	Remark
KDY0 69 15Z	Electric Fold-in Unit Kit	1 or 2	Common part for RH and LH side outer mirror
KDY3 69 120	Base Cover Kit (RH)	1	For RHD vehicle with ADC Base Type
KDY3 69 180	Base Cover Kit (LH)	1	
KDY1 69 120	Base Cover Kit (RH)	1	For LHD vehicle with ADC Base Type
KDY1 69 180	Base Cover Kit (LH)	1	
KFY3-69-10X	Harness (RH)	1	w/o Heater and RVM
KHY7-69-10X	Harness (LH)	1	w/o Heater and RVM
KFY7-69-10X	Harness (RH)	1	w/o Heater and w/ RVM
KHY8-69-10X	Harness (LH)	1	w/o Heater and w/ RVM
KDY3-69-10X	Harness (RH)	1	w/ Heater and w/o RVM
KEY8-69-10X	Harness (LH)	1	w/ Heater and w/o RVM
KDY1-69-10X	Harness (RH)	1	w/ Heater and RVM
KEY6-69-10X	Harness (LH)	1	w/ Heater and RVM
TA01-76-100	Noise Repair Kit	1	Use 0.25mm thickness sheet from Kit

NOTE:

- Electric Fold-in Unit Kit includes "Fold-in unit (1)", "Push nut (1)" and "Seal Packing (1)".
- Use the Base Cover Kit only when the base cover of "ADC Base Type" was broken during removal, and the replacement becomes necessary.
- The Base Cover Kit includes "Base Cover (1)", "Inner Base (1)", "Seal Rubber (1)", "Push Nut (1)", "Packing (1)", "Bolt (3)" and "Screws". Discard "Push Nut" and "Packing" because they are also included in Electric Fold-in Unit Kit.

(CX-5 produced from 2014/12/10 (BSM Type))

Part Number	Description	Q'ty	Remark
K0Y0 69 15Z	Electric Fold-in Unit Kit (RH)	1	For R.H.D.
K0Y0 69 16Z	Electric Fold-in Unit Kit (LH)	1	For R.H.D.
KAYJ 69 15Z	Electric Fold-in Unit Kit (RH)	1	For L.H.D.
KAYJ 69 16Z	Electric Fold-in Unit Kit (LH)	1	For L.H.D.
KAYJ 69 10X	Harness (RH)	1	W/ TURN
KAYK 69 10X	Harness (LH)	1	W/ TURN
KAYL 69 10X	Harness (RH)	1	W/ TURN and BSM
KAYM 69 10X	Harness (LH)	1	W/ TURN and BSM
K0Y0 69 10X	Harness (RH)	1	W/ TURN and HEATER
KAYF 69 10X	Harness (LH)	1	W/ TURN and HEATER
K0Y3 69 10X	Harness (RH)	1	W/ TURN, HEATER and BSM
KAYG 69 10X	Harness (LH)	1	W/ TURN, HEATER and BSM
K0Y2 69 10X	Harness (LH)	1	W/ TURN, HEATER and CAMERA
K0Y4 69 10X	Harness (LH)	1	W/ TURN, HEATER, BSM and CAMERA
KAYB 69 10X	Harness (LH)	1	W/ TURN, BSM and CAMERA
TA01-76-100	Noise Repair Kit	1	Use 0.25mm thickness sheet from Kit

NOTE: Electric Fold-in Unit Kit includes “Fold-in unit (1)”, “Push nut (1)”, “Seal Packing (2)”, “Base Cover Upper (1)” and “Base Cover Lower (1)..”

(Mazda6)

Part Number	Description	Q'ty	Remark
GHY0-69-15Z	Electric Fold-in Unit Kit (RH)	1	For L.H.D. vehicles
GHY0-69-16Z	Electric Fold-in Unit Kit (LH)	1	
GHY1-69-15Z	Electric Fold-in Unit Kit (RH)	1	For R.H.D. vehicles
GHY1-69-16Z	Electric Fold-in Unit Kit (LH)	1	
G4YN-69-10X	Harness (RH)	1	w/o Heater and RVM
GLY9-69-10X	Harness (LH)	1	w/o Heater and RVM
G4YP-69-10X	Harness (RH)	1	w/o Heater and w/ RVM
GLY3-69-10X	Harness (LH)	1	w/o Heater and w/ RVM
GHY1-69-10X	Harness (RH)	1	w/ Heater and w/o RVM
GJY7-69-10X	Harness (LH)	1	w/ Heater and w/o RVM
GHY5-69-10X	Harness (RH)	1	w/ Heater and RVM
GKY1-69-10X	Harness (LH)	1	w/ Heater and RVM
GMY2 69 10X	Harness (RH)	1	w/ BSM
GMY3 69 10X	Harness (LH)	1	w/ BSM
GMY8 69 10X	Harness (RH)	1	w/ Heater and BSM
GMY9 69 10X	Harness (LH)	1	w/ Heater and BSM
TA01-76-100	Noise Repair Kit	1	Use 0.25mm thickness sheet from Kit

NOTE: Electric Fold-in Unit Kit includes “Fold-in unit (1)”, “Seal Packing (2)”, “Base Cover-Upper (1)” and “Base Cover-Lower (1)”.

WARRANTY INFORMATION**CX-5**

Assembly group	S - Body
Subassembly group	18 – MIRRORS & VISORS
Symptom Code	64
Damage Code	9W
Causal Part No.	****-69-15Z / ****-69-16Z (Refer to “PARTS INFORMATION”.)
Q'ty	1 or 2
Operation No. & Hours	Electric Fold-in Unit, R&R With i-stop XXK1CXRX / 0.7 Hrs. (One side) XXK1DXRX / 1.3 Hrs. (Both sides) Without i-stop XXK1CXRX / 0.7 Hrs. (One side) XXK1EXRX / 1.2 Hrs. (Both sides)
Period Covered	Normal Warranty Period
Prior approval necessary	NO

Mazda6

Assembly group	S - Body
Subassembly group	18 – MIRRORS & VISORS
Symptom Code	64
Damage Code	9W
Causal Part No.	**** 69 15Z / **** 69 16Z (Refer to “PARTS INFORMATION”.)
Q'ty	1
Operation No. & Hours	Electric Fold-in Unit, R&R With i-stop XXL52ARX / 0.8 Hrs. (One side) XXL52BRX / 1.3 Hrs. (Both sides) Without i-stop XXL52CRX / 0.7 Hrs. (One side) XXL52DRX / 1.2 Hrs. (Both sides)
Period Covered	Normal Warranty Period
Prior approval necessary	NO

Kimiaki Inooka
 Manager, Technical Information Group
 Technical Service Department
 Mazda Motor Corporation
 2C82034648(MC Internal Use)

CX-5 (KE) Vehicles produced up to 10-Dec-2014 (RVM Type)

[REMOVAL PROCEDURE]


1. Ensure the power outer mirror is set in the driving position (not in the fold-in position).
Note: The power outer mirror cannot be disassembled if it is set in the fold-in position.
2. Remove the power outer mirror according to the instructions in Workshop Manual "POWER OUTER MIRROR REMOVAL/INSTALLATION".
3. Remove the outer mirror garnish according to the instructions in Workshop Manual "OUTER MIRROR GARNISH REMOVAL/INSTALLATION".

※ Below, the procedure is explained using pictures of the LH power outer mirror. The same procedure is applicable to the RH power outer mirror.

4. Remove the seal rubber from the power outer mirror base.




5. Using pliers, remove the push nut from the power outer mirror base.

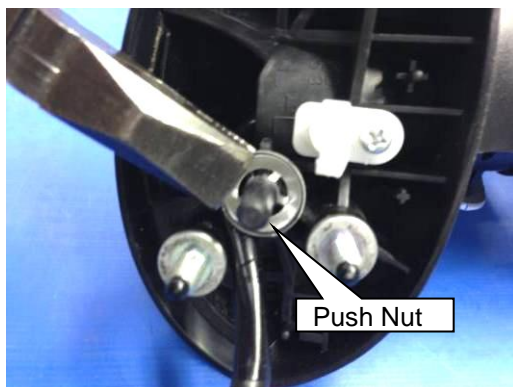


6. 《For Plastic Base Type》

Using a flathead screw driver, push the four (4) connections to disconnect as shown in figure.
Note: When working under low ambient temperatures, slightly warm the connections using a heat gun to prevent breakage.

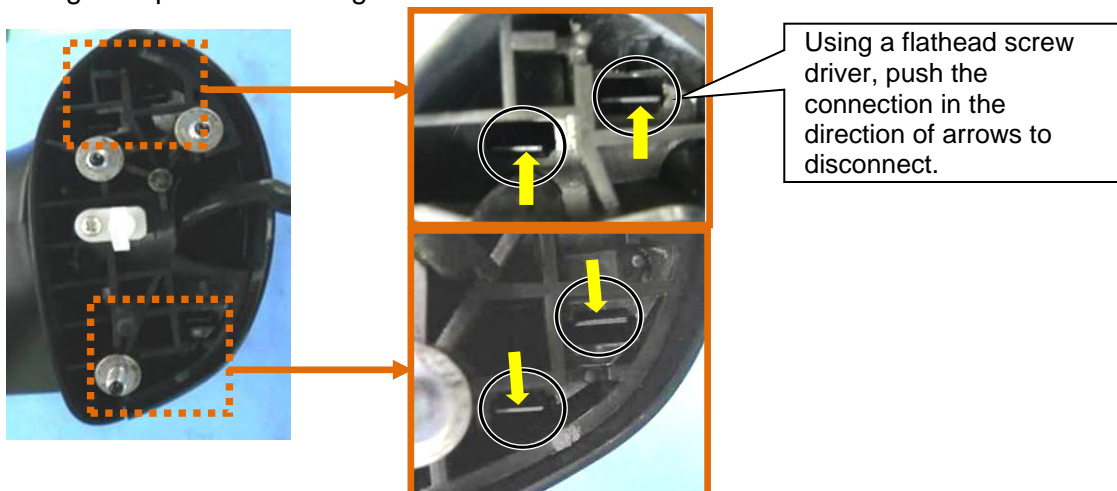

7. 《For Plastic Base Type》

Remove the base cover by pulling it in the direction of the arrow shown in the figure.

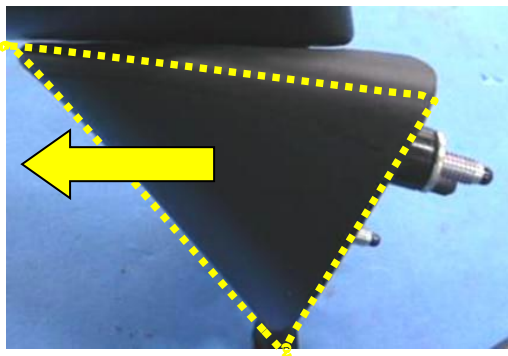


8. 《For Aluminum Die-Cast (ADC) Base Type》

Pull out the base cover in the direction of the arrow shown in the figure.




Note: The hooks indicated by circles may break during removal. Replace the base cover, if broken, with a new one included in “Base Cover Kit”.

9. Loosen three (3) screws and remove the inner base passing the harness through it.

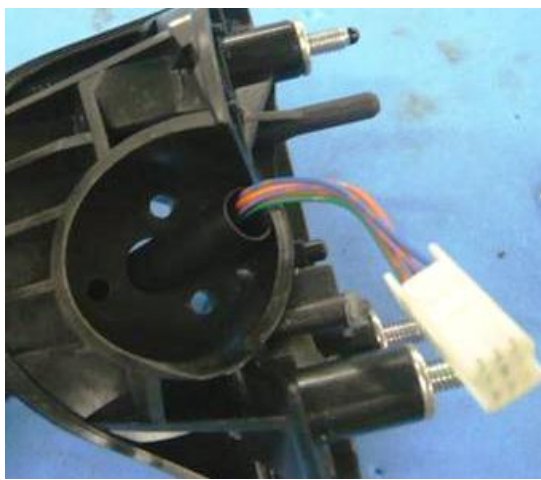


10. Peel off the seal packing from the harness.

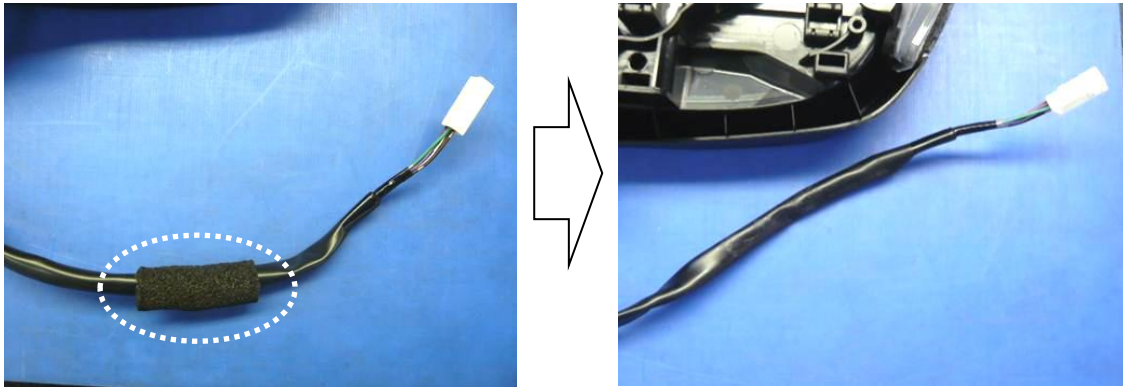

11. Remove the harness from the electric fold-in unit.


① Pull out the harness (1).

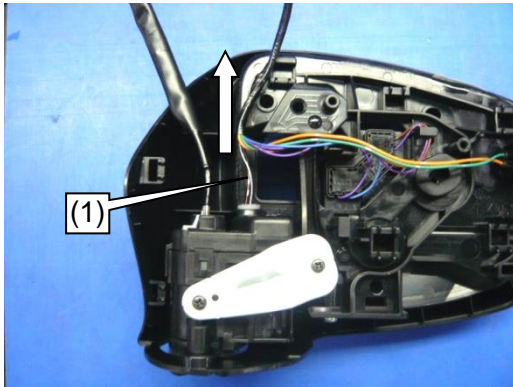

② Pull out the grommet.



③ While pushing the lock (1), pull out the connector.


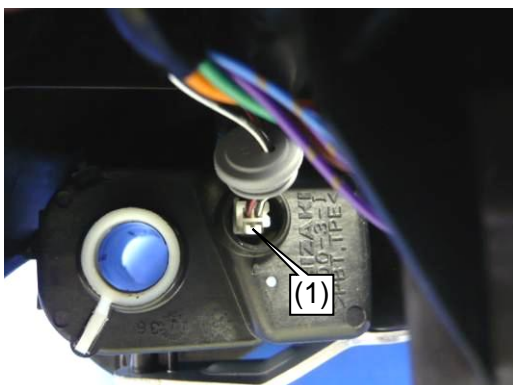


12. Remove the electric fold-in unit.



① 《For outer mirror of earlier production》

Remove the bracket by loosening five (5) screws shown in the figure.


Note: Outer mirror of later production uses a different shape of bracket, and which is shown later in this document.

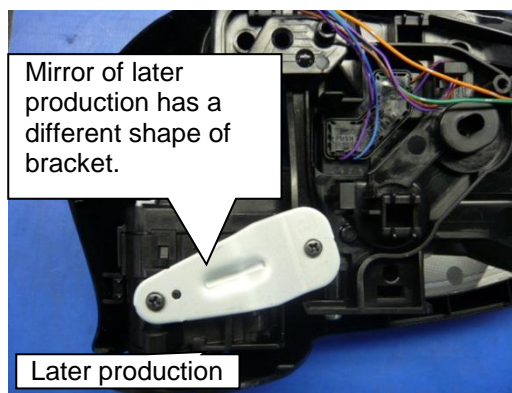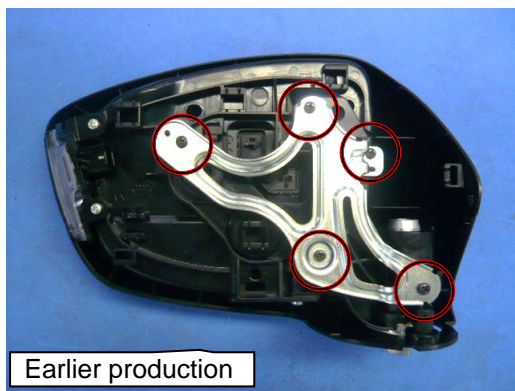

② Remove four (4) screws as shown in the figures.

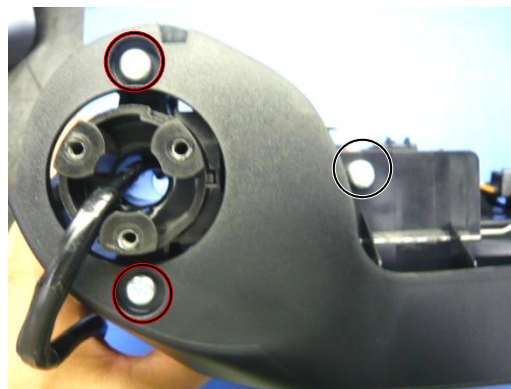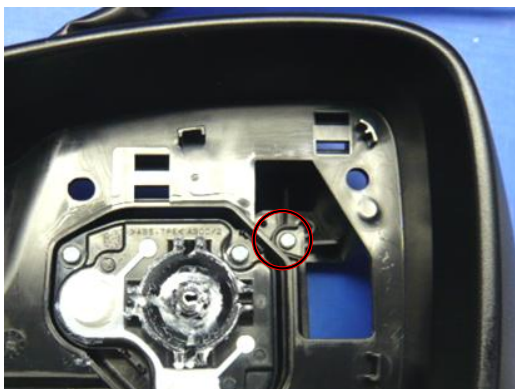

③ Push the electric fold-in unit upward to remove it from the outer mirror.

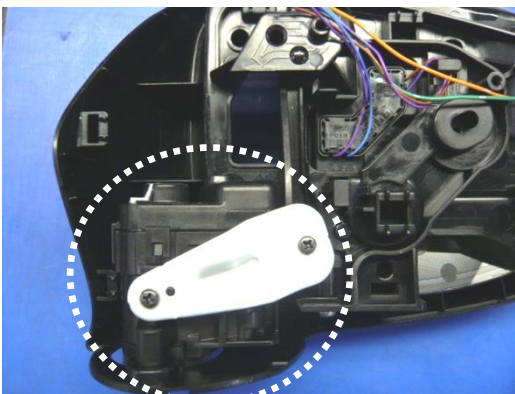

④ 《For outer mirror of later production》

Loosen two screws and remove the bracket (1) from the electric fold-in unit (2).




[INSTALLATION PROCEDURE]


1. Attach a seal tape if the new electric fold-in unit to use does not have it.

NOTE: Electric fold-in units with newer production have the seal tape attached and those with older do not have it. Both have the same part number.

① Select a 0.25mm thickness sheet from the “Noise Repair Kit” (TA01-76-100) and cut it into the size shown in figure. (One piece for one side).

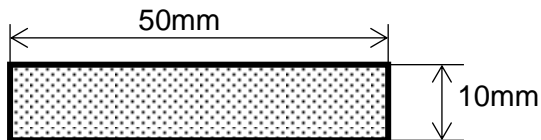


1) Clean the electric fold-in unit and attach the sheet to the side facing the mirror glass by first aligning one edge corner with the position (1) indicated in figure.

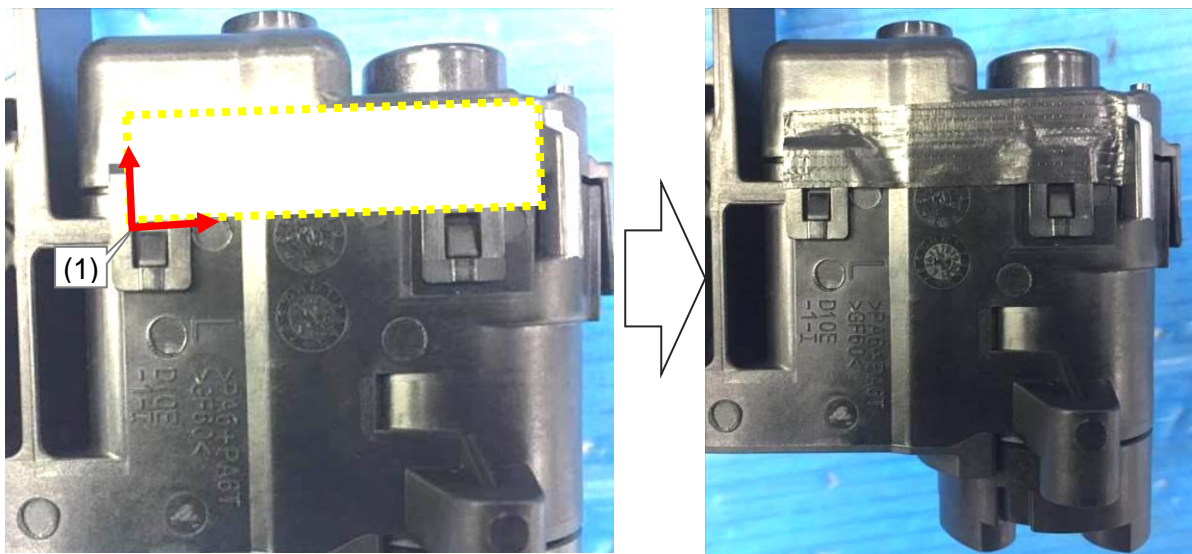


《For outer mirror of later production》

2. Install the bracket to a new electric fold-in unit (included in Electric Fold-in Unit Kit).


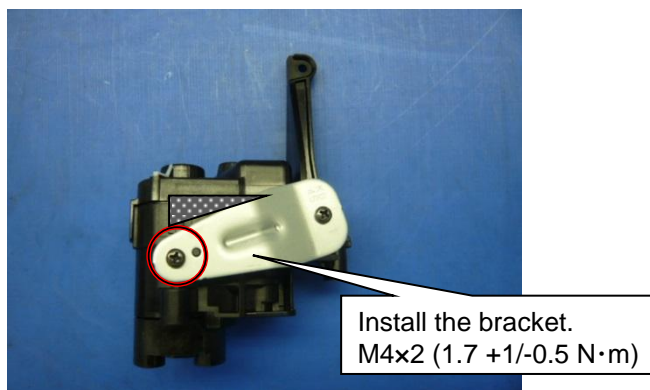


3. Install the electric fold-in unit to the outer mirror.


- ① Position the electric fold-in unit by aligning the locators (1).

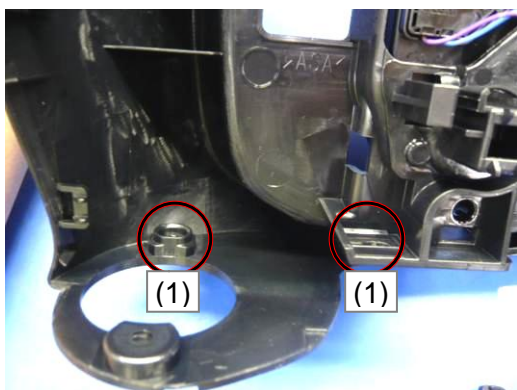



- ② Tighten four (4) screws shown in the figures.

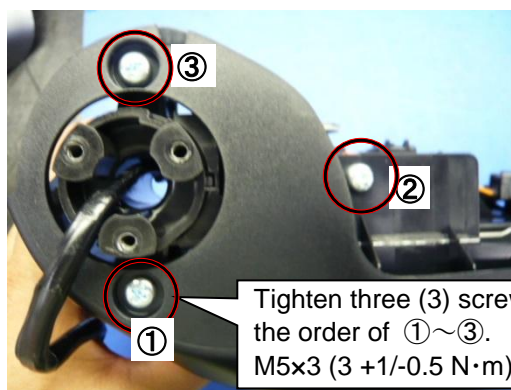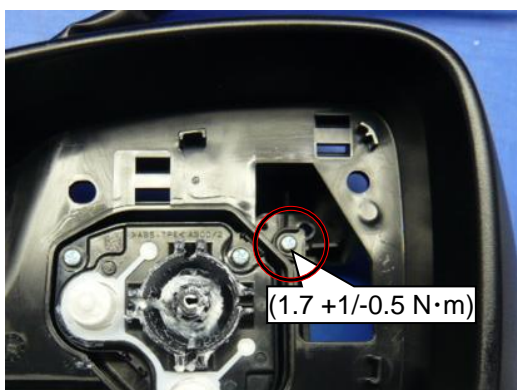


4. 《For outer mirror of earlier production》 Install the bracket by tightening it with five (5) screws.

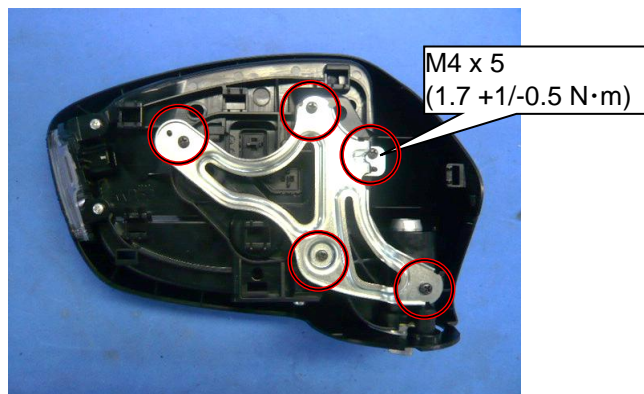

5. Install a new modified harness.

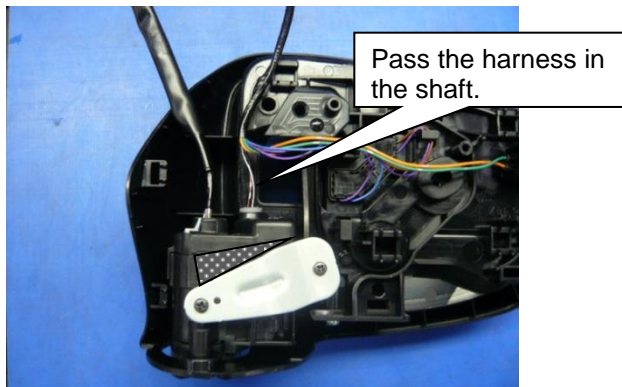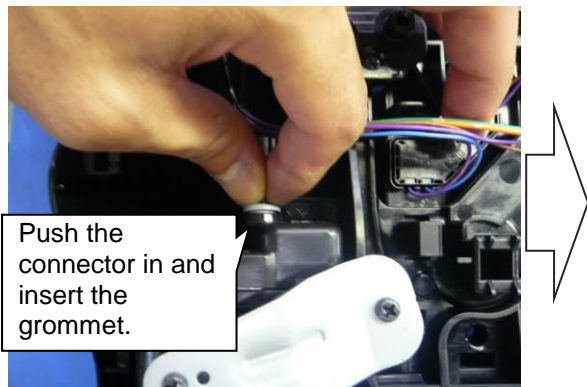

6. Install the seal cap.

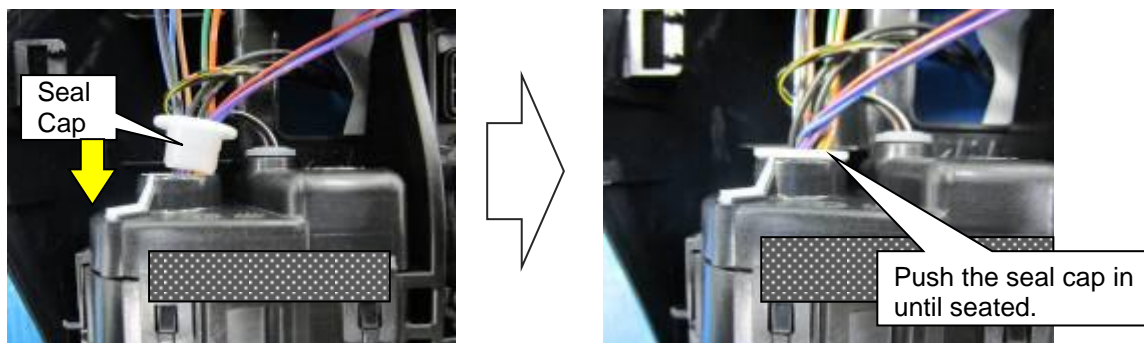

7. Install the inner base.

《ADC Base Type》

Install the inner base.


Note: In case where the base cover was broken during the removal work and a new base cover is installed, install a new inner base included in “Base Cover Kit”.

《Plastic Base Type》

Install the inner base (old).


Note: The pictures show the ADC type.

① Align the locators (red circled in the figure) at the outer mirror and the inner base.



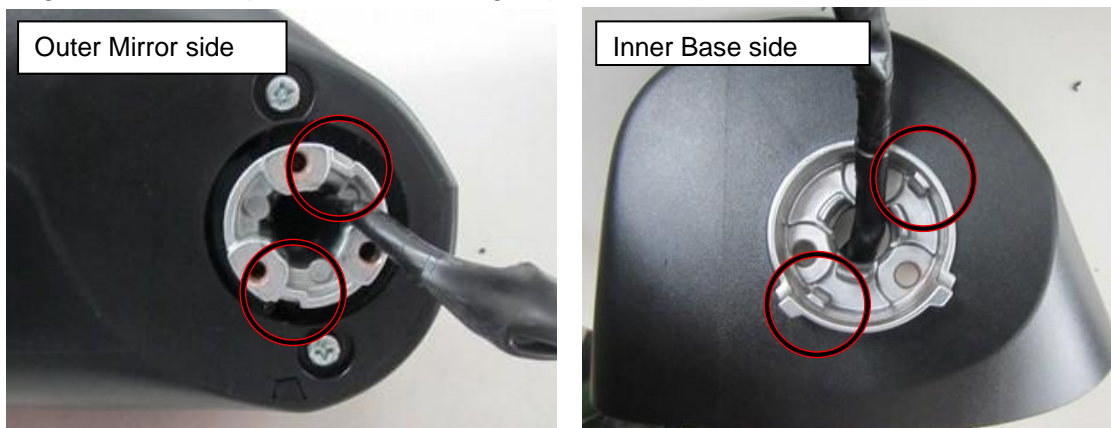


② Use new three (3) screws from the kit and tighten them.

Note: Be careful not to pinch the harness.

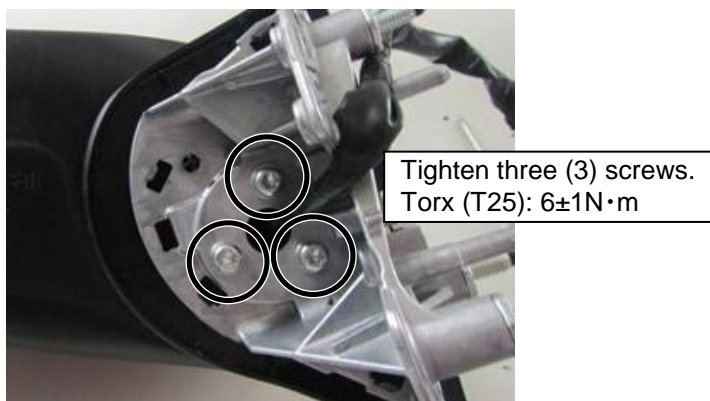

8. Place the harness as shown in the figure and install a new push nut.

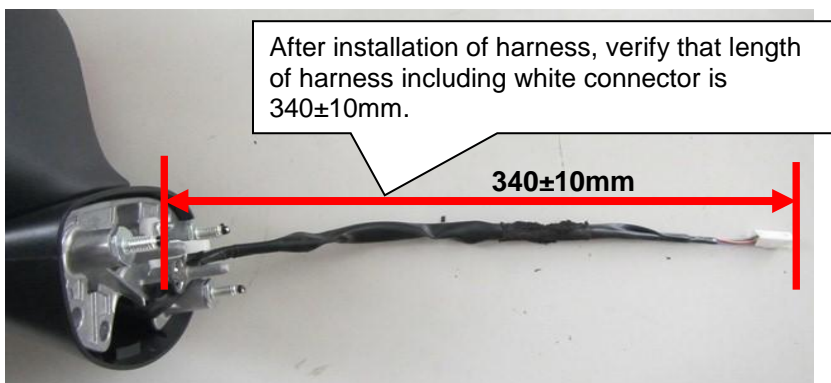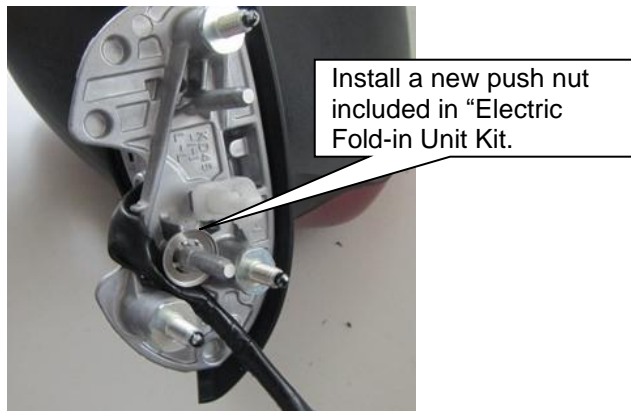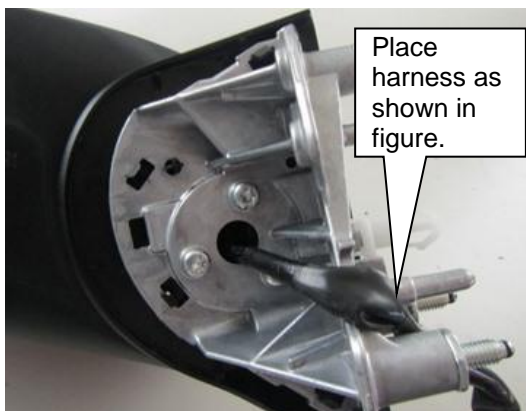


9. Install the base cover.

《ADC Base Type》


Aligning the locators shown in the figures, install the base cover.

Note: If the base cover was broken during removal, use a new base cover included in "Base Cover Kit".

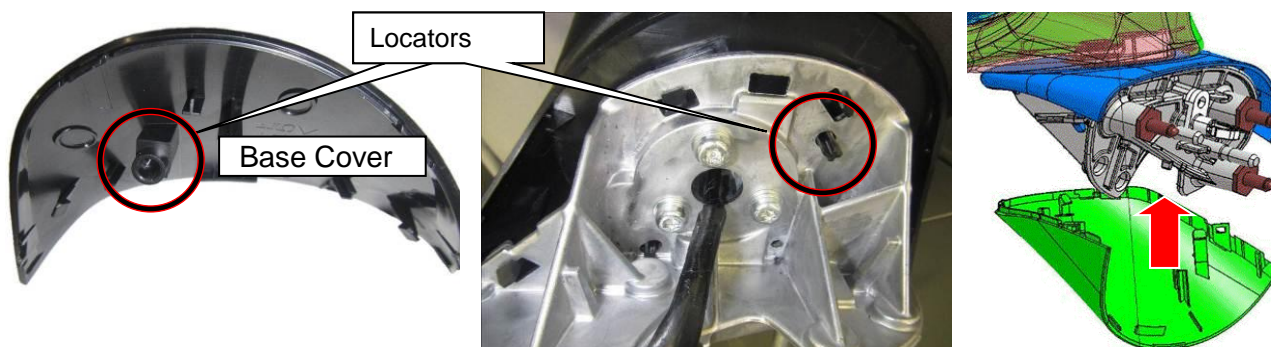

《Plastic Base Type》

Aligning the locators shown in the figure, install the base cover.

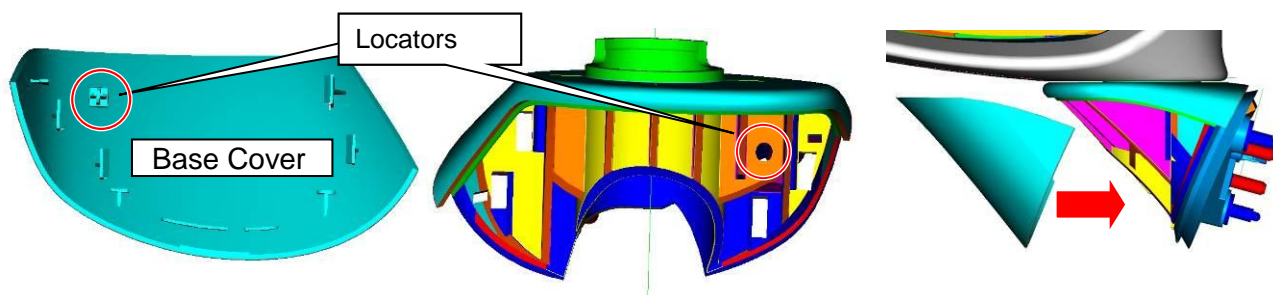


10. Install the seal rubber.

Note: Use a new one included in “Base Cover Kit” when the Kit is used.



11. Attach the packing included in “Electric Fold-in Unit Kit” to the harness.

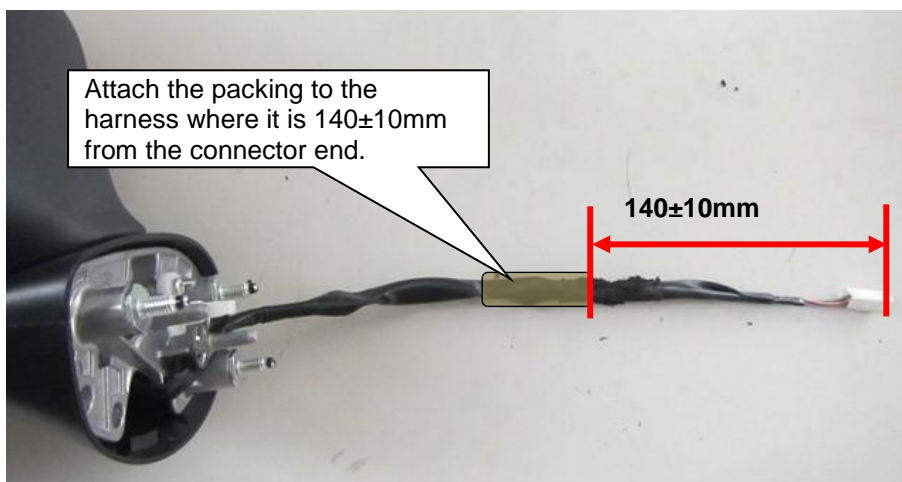


12. Install the outer mirror garnish according to the instructions in Workshop Manual “OUTER MIRROR GARNISH REMOVAL/INSTALLATION”.



13. Install the power outer mirror according to the instructions in Workshop Manual “POWER OUTER MIRROR REMOVAL/INSTALLATION”.

Mazda6 (GJ) [REMOVAL PROCEDURE]


1. Ensure the power outer mirror is set in the driving position (not in the fold-in position).
Note: The power outer mirror cannot be disassembled if it is set in the fold-in position.
 2. Remove the power outer mirror according to the instructions in the Workshop Manual "POWER OUTER MIRROR REMOVAL/INSTALLATION".
 3. Remove the outer mirror glass and garnish according to the instructions in Workshop Manual "OUTER MIRROR GLASS REMOVAL" and "OUTER MIRROR GARNISH REMOVAL/INSTALLATION".
- ※ Below, the procedure is explained using pictures of the LH power outer mirror. The same procedure is applicable to the RH power outer mirror.
4. Remove the seal rubber from the power outer mirror base passing the harness through it.
Note: Some vehicles of specific production dates are without the seal rubber, but are with the push nut. In this case, remove the push nut using pliers.

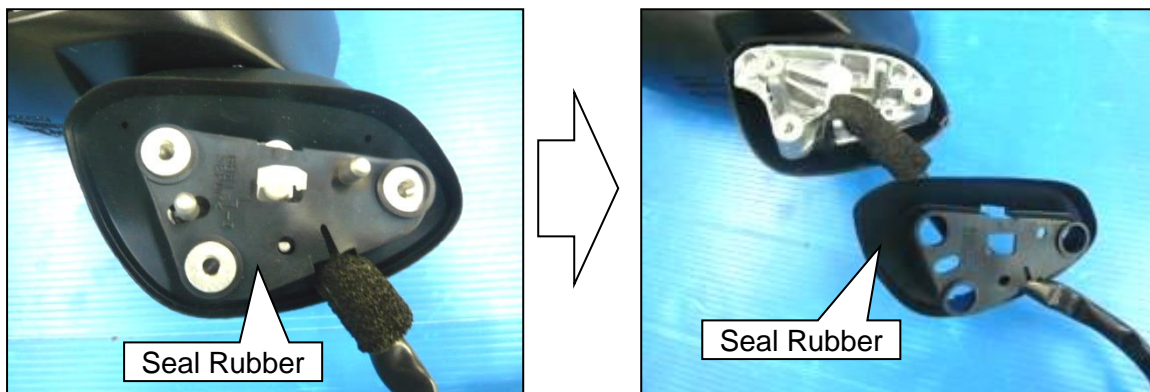


5. Pull to remove the base cover in the direction of the arrow in the figure.




6. Peel off two seal packing from the harnesses.

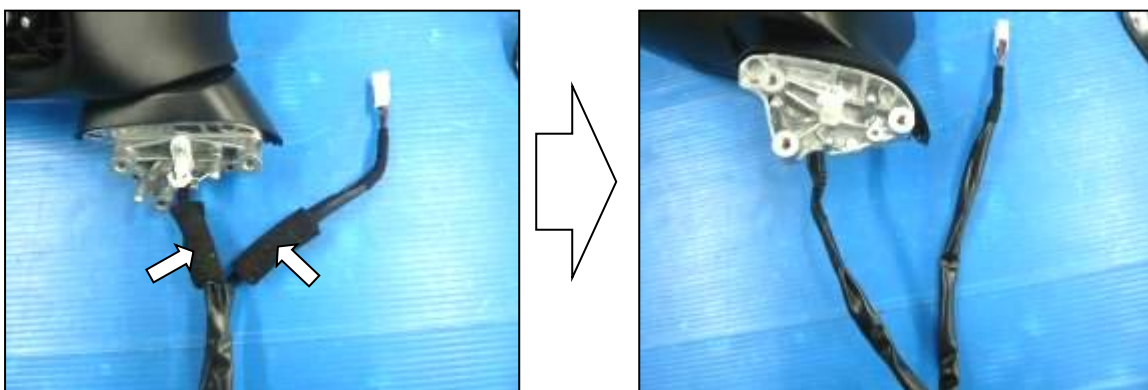

7. Remove three (3) screws then remove the inner base passing the harness through it.

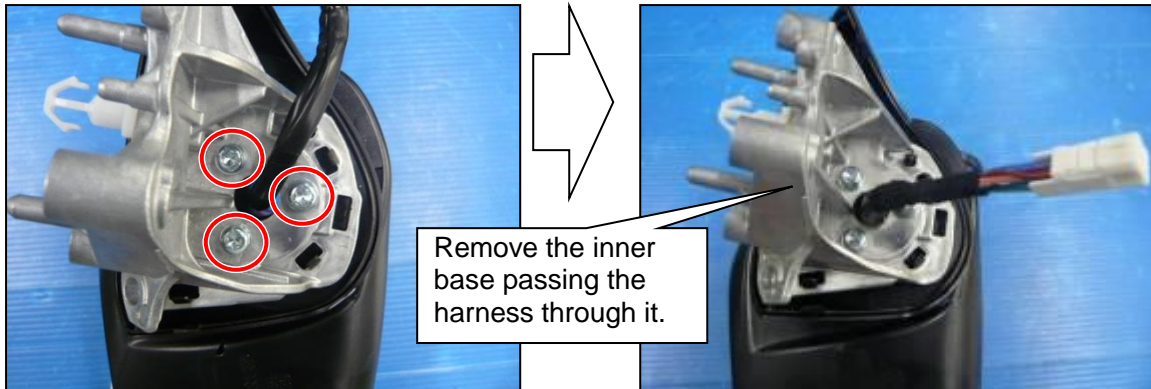


8. Disengage four (4) tabs then remove the base cover-upper from the inner base.

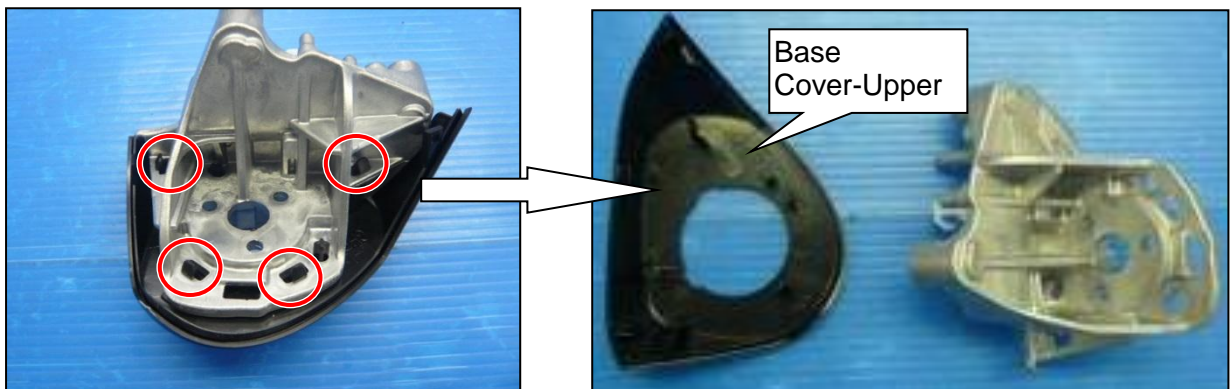


9. Remove the electric fold-in unit.


- 1) Pull out the harness from the shaft.

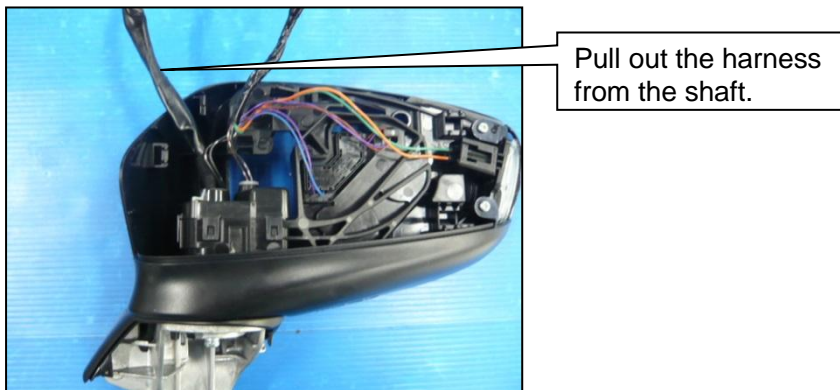


- 2) Remove the grommet.

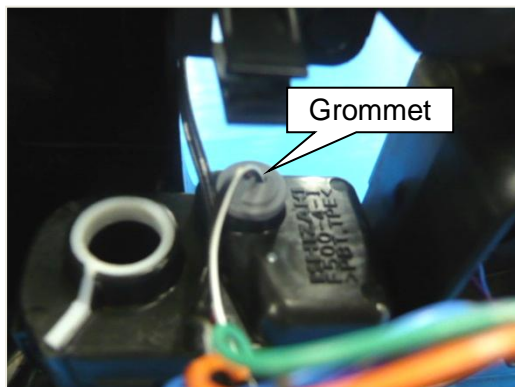

3) While pushing the lock, disconnect the connector.

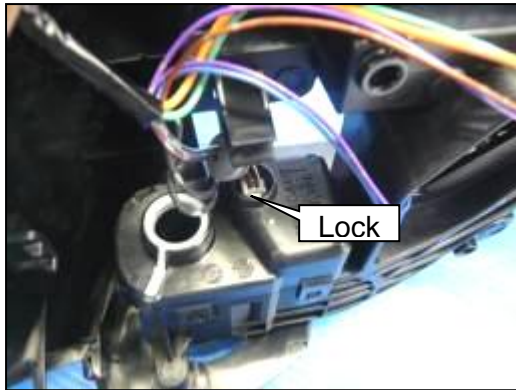

4) Disconnect the connectors to ACTUATOR and TURN LAMP then remove the harness.

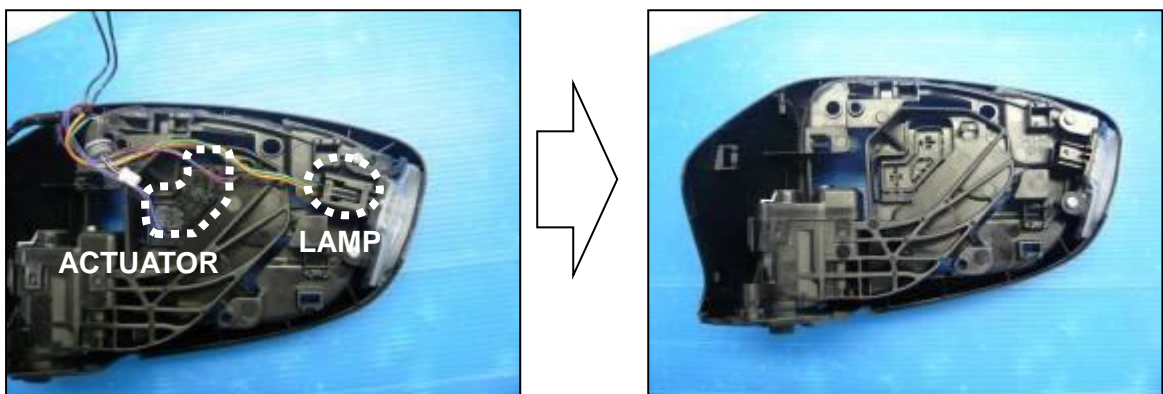


5) Remove the electric fold-in unit.


① Remove three (3) screws.



② Remove two (2) screws then remove the electric fold-in unit.

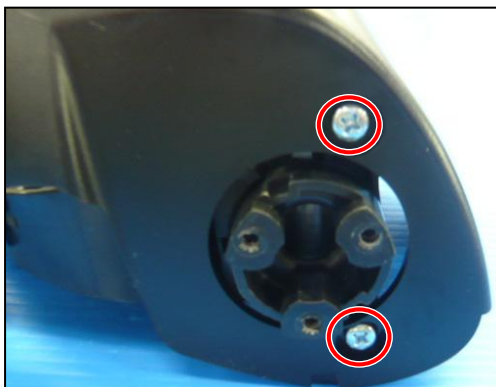


- ③ Remove three (3) screws then remove the actuator from the electric fold-in unit.

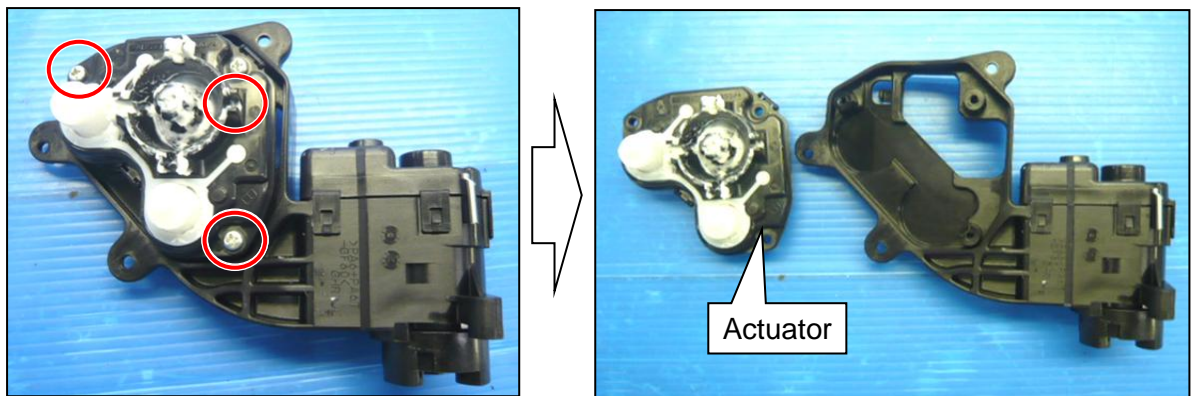


[INSTALLATION PROCEDURE]

1. Attach a seal tape if the new electric fold-in unit to use does not have it.
NOTE: Electric fold-in units with newer production have the seal tape attached and those with older do not have it. Both have the same part number.
- 1) Select a 0.25mm thickness sheet from the “Noise Repair Kit” (TA01 76 100) and cut it into the following size (One piece for one side).

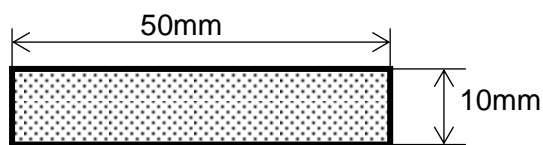


- ② Clean the electric fold-in unit and attach the sheet to the side facing the mirror glass by first aligning one edge corner with the position (1) indicated in figure.

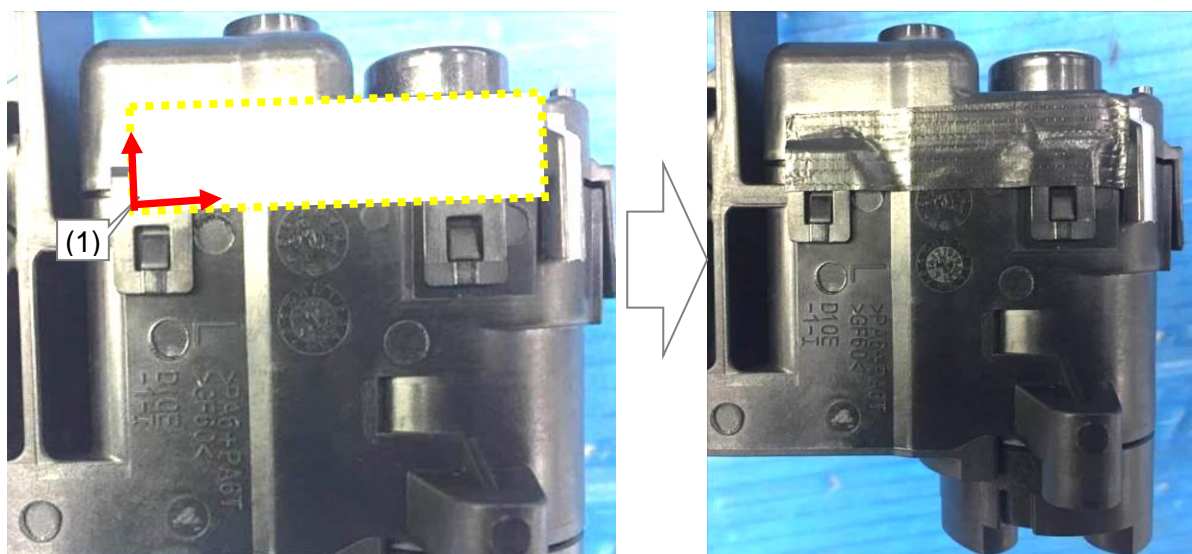

2. Install a MODIFIED new electric fold-in unit.

1) Install the actuator to the electric fold-in unit with three (3) screws. $1.7 \pm 0.5 \text{ N}\cdot\text{m}$

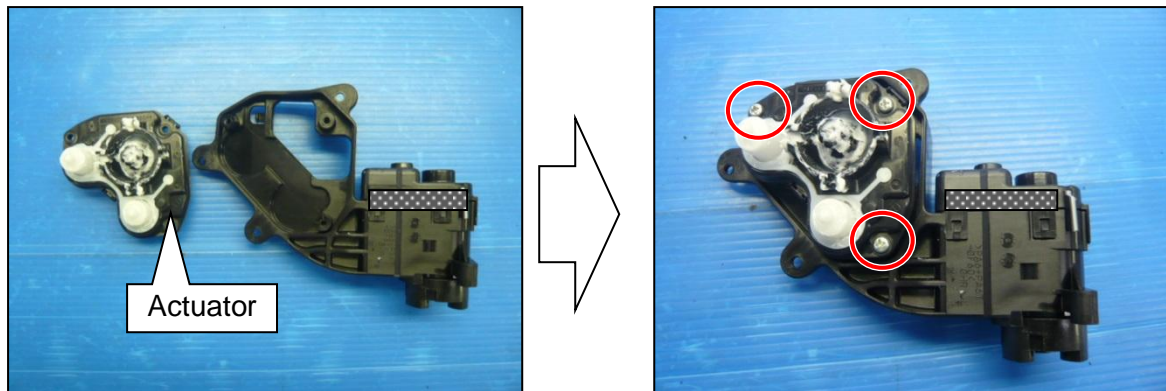


2) Install the electric fold-in unit to the door mirror body.


① Align the locator and install the electric fold-in unit.



② Tighten three (3) screws. $1.7 \pm 0.5 \text{ N}\cdot\text{m}$

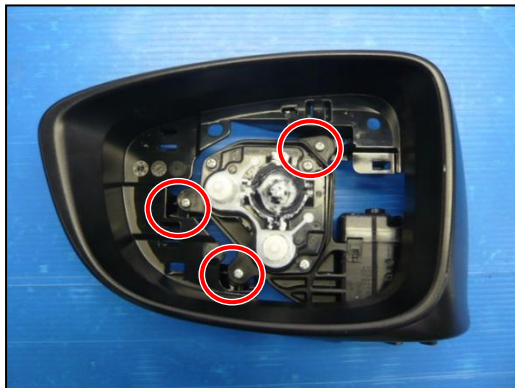


③ Tighten two (2) screws. $3.0 \pm 0.5 \text{ N}\cdot\text{m}$

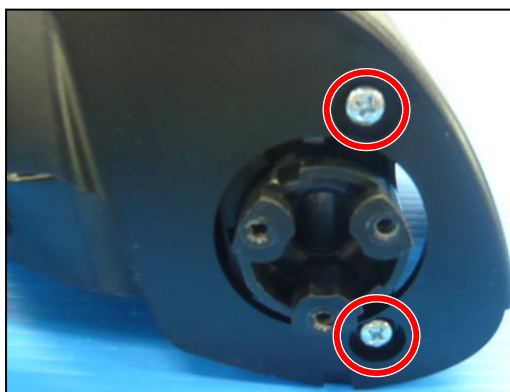


3. Install a MODIFIED new harness.


1) Connect the connectors to ACTUATOR and TURN LAMP then fit the harness in the clip.

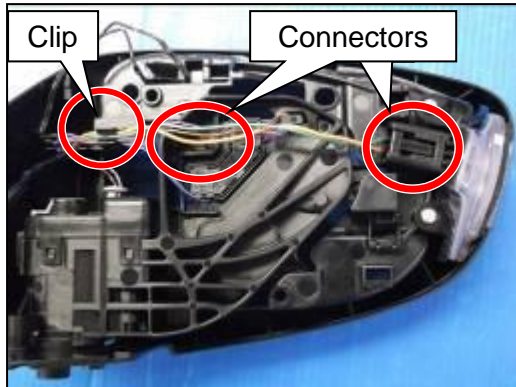


2) Connect the connector and then install the grommet.

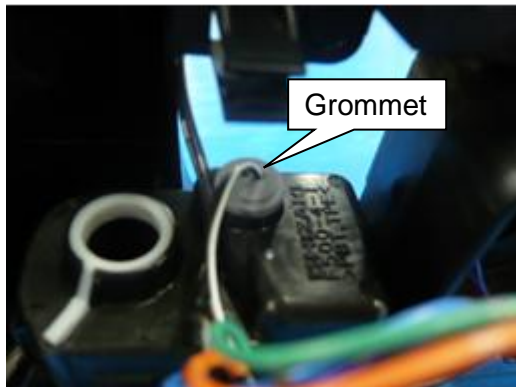

3) Pass the harness through the shaft.

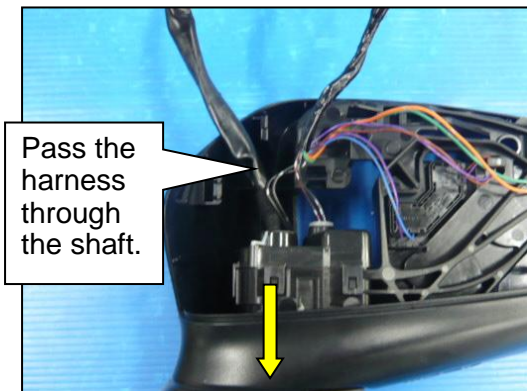

4) Push the seal cap in until seated.

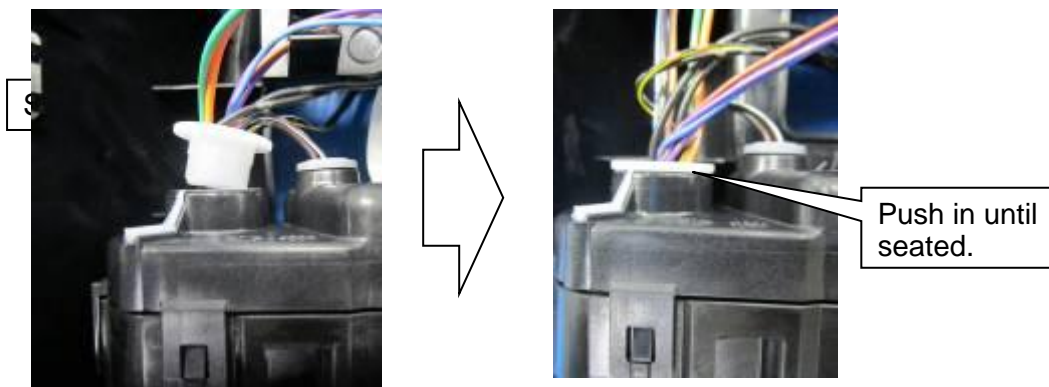

4. Install the new base cover-upper included in “Electric Fold-in Unit Kit” to the inner base aligning the two locators.




Base Cover-Upper



Inner Base


NOTE: Verify that four tabs are securely engaged.

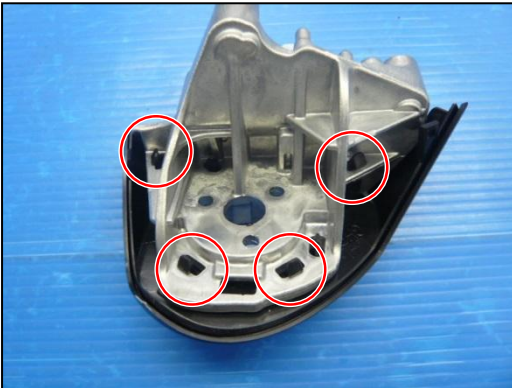


5. While aligning the two locators, install the inner base to the outer mirror taking caution not to clamp the harness.



Tighten three (3) screws. $6\pm 1\text{N}\cdot\text{m}$

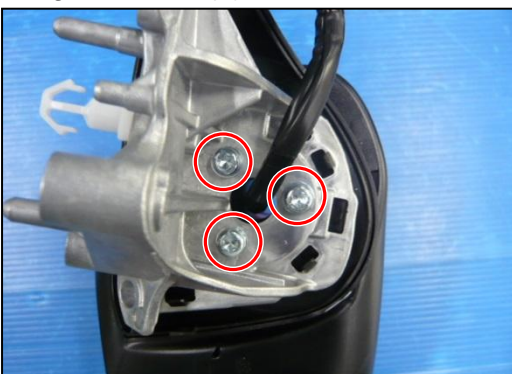

6. Attach the seal packing included in “Electric Fold-in Unit Kit” to the harness in the position indicated in the figure.

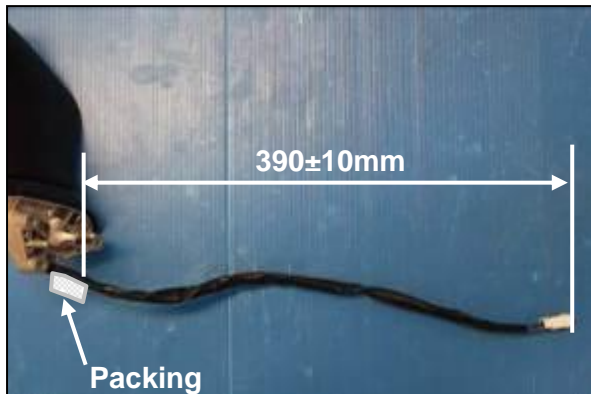

7. While aligning the locator, install the new base cover-lower included in “Electric Fold-in Unit Kit”.



8. Install the seal rubber.


- 1) Position the harness as shown in the figures.



- 2) Install the seal rubber and pull out the harness through the slit as shown in the figure.



9. Attach the seal packing to the harness where it is $140\pm 10\text{mm}$ from the connector end as shown in the figure.

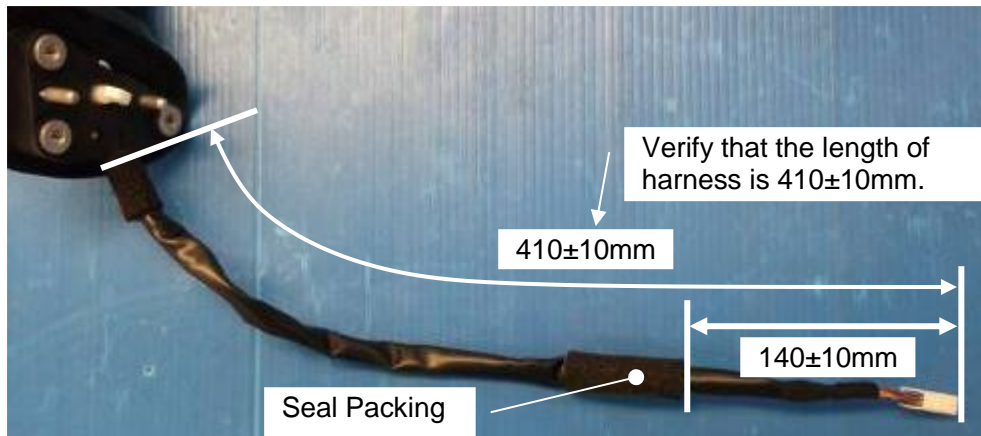

10. Install the outer mirror glass and garnish according to the instructions in the Workshop Manual "OUTER MIRROR GLASS INSTALLATION" and Glass REMOVAL" and "OUTER MIRROR GARNISH REMOVAL/INSTALLATION".
11. Install the power outer mirror according to the instructions in the Workshop Manual "POWER OUTER MIRROR REMOVAL/INSTALLATION".

CX-5 (KE)


Vehicles produced from 11-Dec-2014 (Blind Spot Monitoring (BSM)Type)

[REMOVAL PROCEDURE]


1. Ensure the power outer mirror is set in the driving position (not in the fold-in position).
Note: The power outer mirror cannot be disassembled if it is set in the fold-in position.
2. Remove the power outer mirror according to the instructions in Workshop Manual "POWER OUTER MIRROR REMOVAL/INSTALLATION".
3. Remove the outer mirror garnish according to the instructions in Workshop Manual "OUTER MIRROR GARNISH REMOVAL/INSTALLATION".

※ Below, the procedure is explained using pictures of the LH power outer mirror. The same procedure is applicable to the RH power outer mirror.

4. Remove the seal rubber from the power outer mirror base.

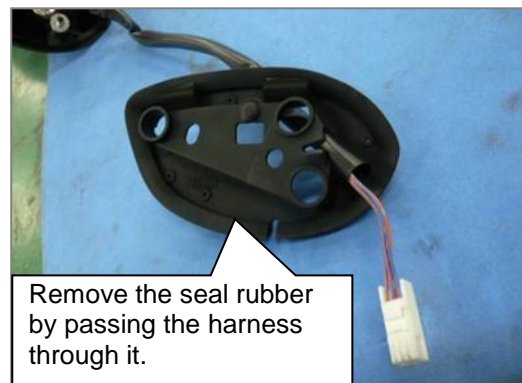

5. Using pliers, remove the push nut from the power outer mirror base.

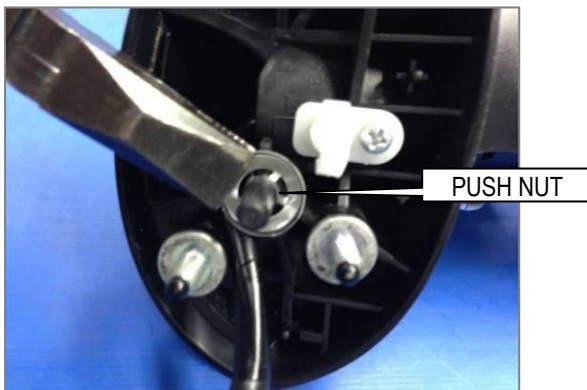


6. Pull out the base cover in the direction of the arrow shown in the figure.



NOTE: Replace the base cover with a new one from " Electric Fold-in Unit Kit".


7. Peel off the seal packing from the harness at one or two locations depending on the vehicle..

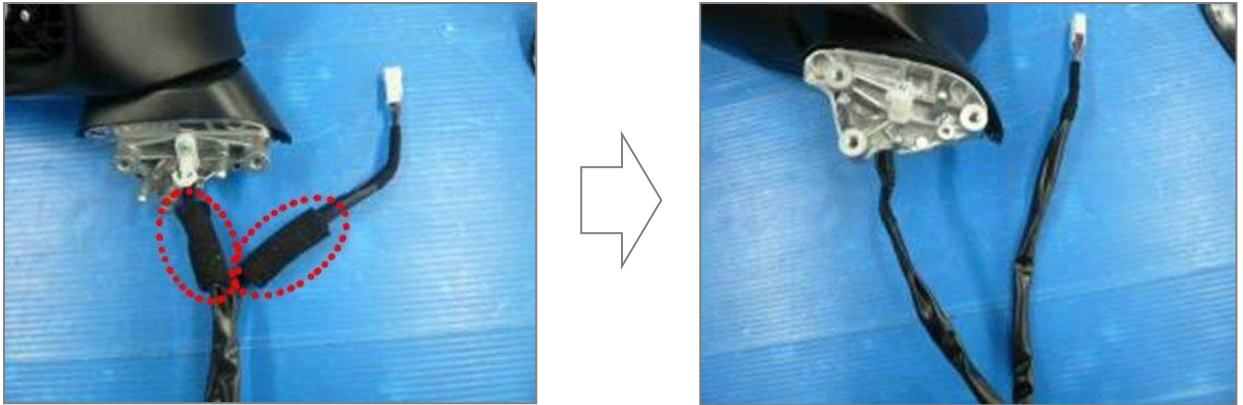

8. Loosen three screws indicated with circle in figure and remove the mirror base.




9. Disengage four (4) tabs then remove the base cover-upper from the inner base.

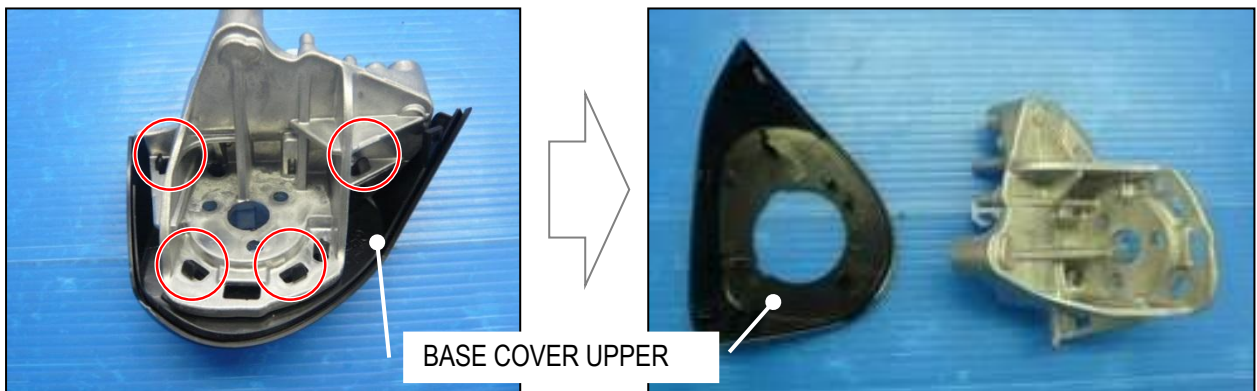



10. Remove harnesses.

- 1) Pull out the harness


(1).

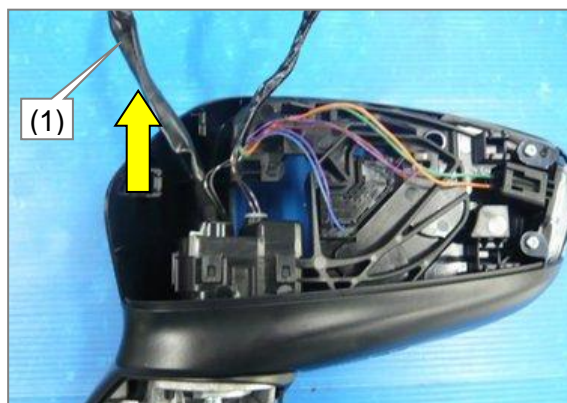


2) Remove the grommet (1). While pushing the lock (2), pull out the harness.

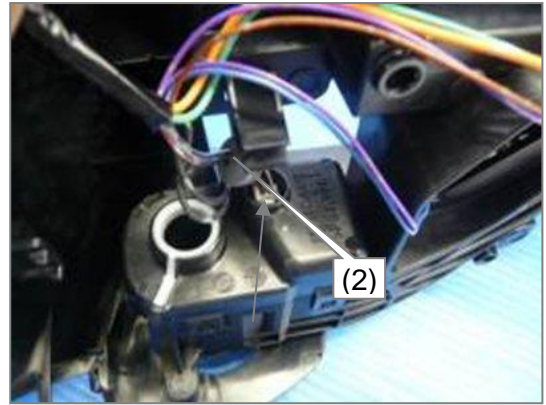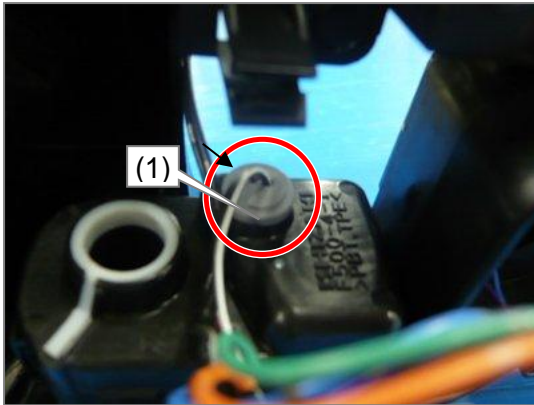


3) Remove the harness and discard it.

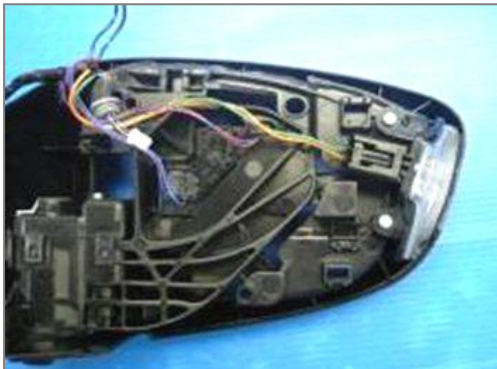

11. Remove the electric fold-in unit.
1) Remove screws shown in figure.

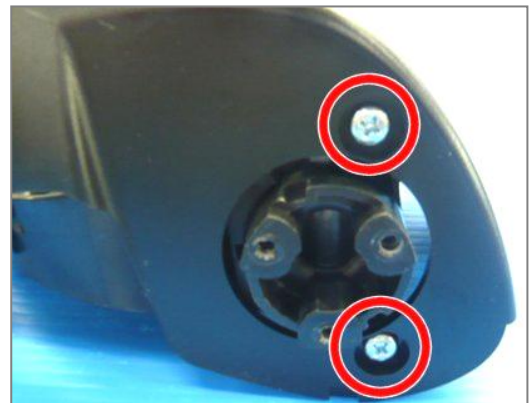


2) Remove three screws and remove the actuator from the electric fold-in unit.

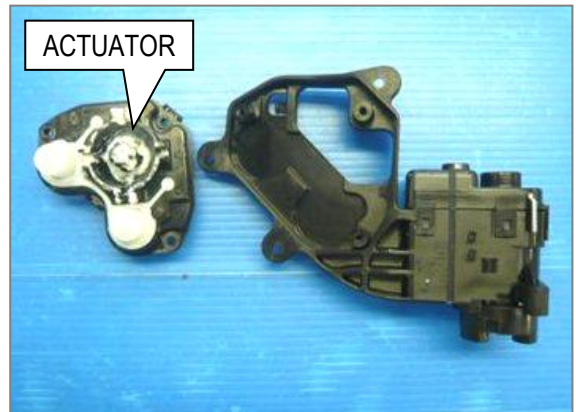


[INSTALLATION PROCEDURE]


1. Attach a seal tape if the new electric fold-in unit to use does not have it.
NOTE: Electric fold-in units with newer production have the seal tape attached and those with older do not have it. Both have the same part number.
- 2) Select a 0.25mm thickness sheet from the “Noise Repair Kit” (TA01 76 100) and cut it into the following size (one piece for one side).

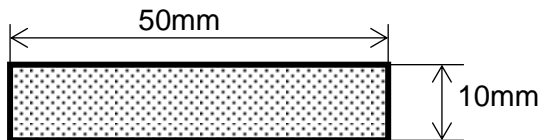

- 2) Clean the electric fold-in unit and attach the sheet to the side facing the mirror glass by first aligning one edge corner with the position (1) indicated in figure.

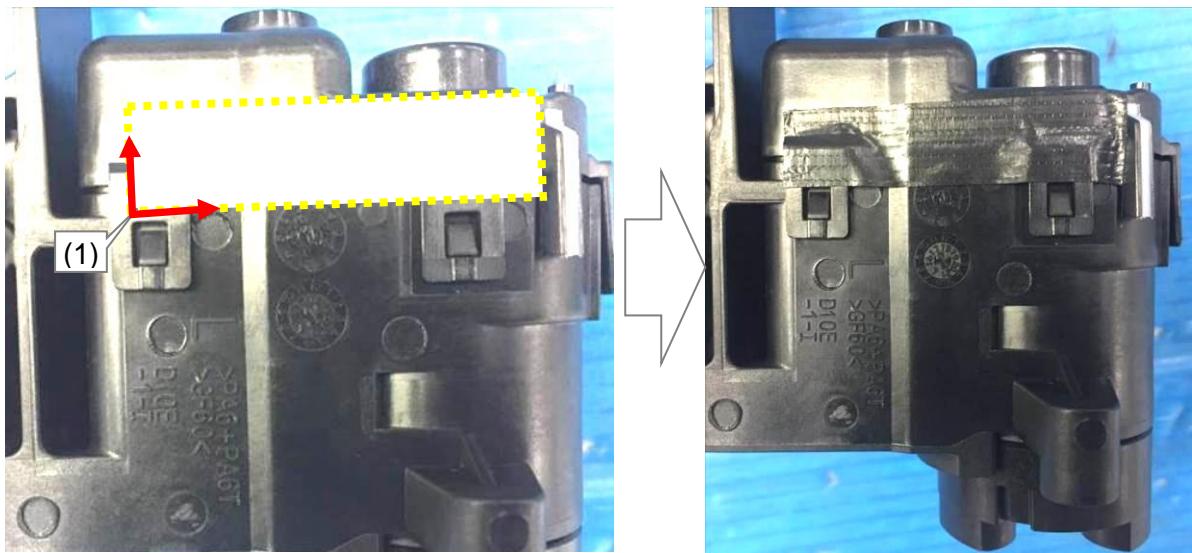

2. Install the electric fold-in unit.
- 3) Install the actuator to the electric fold-in unit with three (3) screws. **1.7 +1/-0.5 N·m**

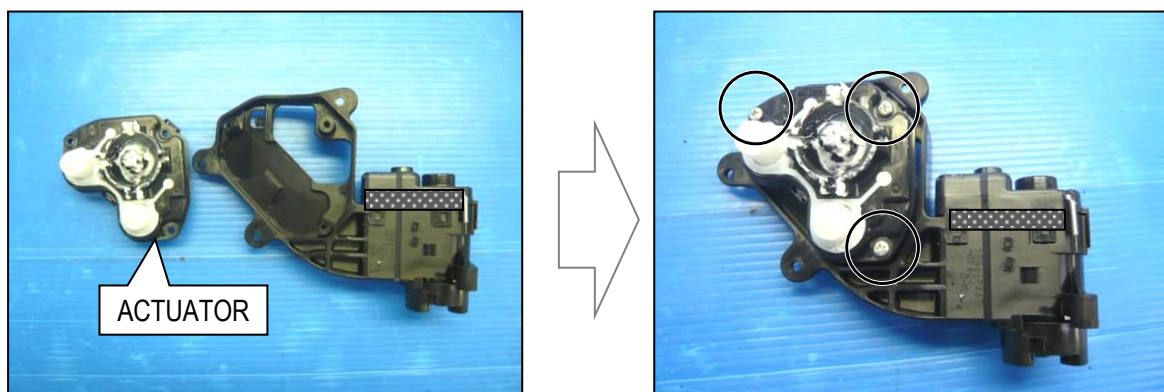


- 4) Aligning the locator, install the electric fold-in unit to the door mirror body and tighten screws..



Locator at door mirror side




$1.7 +1/-0.5 \text{ N}\cdot\text{m}$

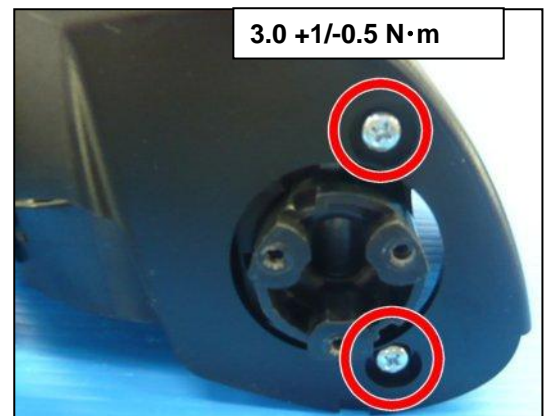


$3.0 +1/-0.5 \text{ N}\cdot\text{m}$

3. Install a MODIFIED new harness in "Electric Fold-in Unit Kit".

- 1) Connect the connectors to ACTUATOR and TURN LAMP then fit the harness in the clip.

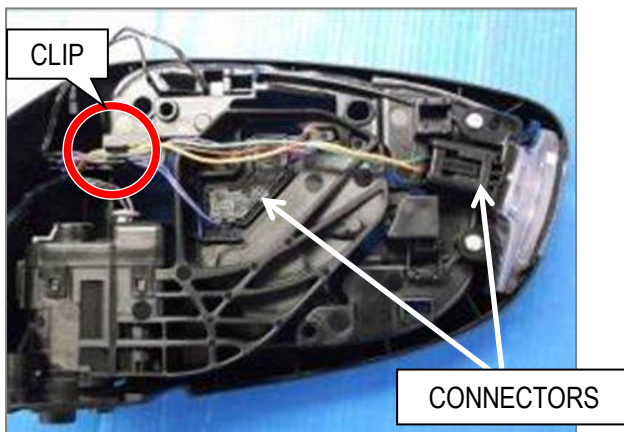


- 2) Connect the connectors and then install the grommet.

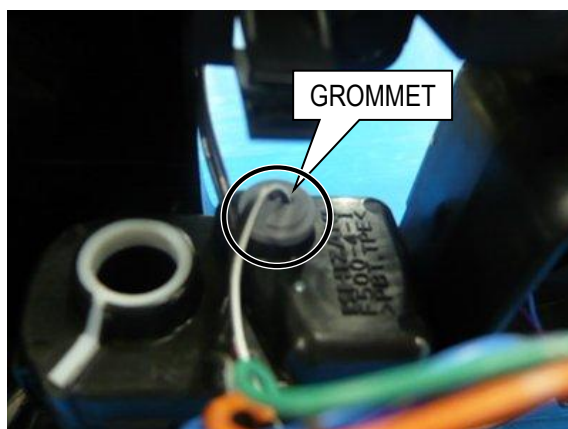


GROMMET

3) Pass the harness through the shaft.

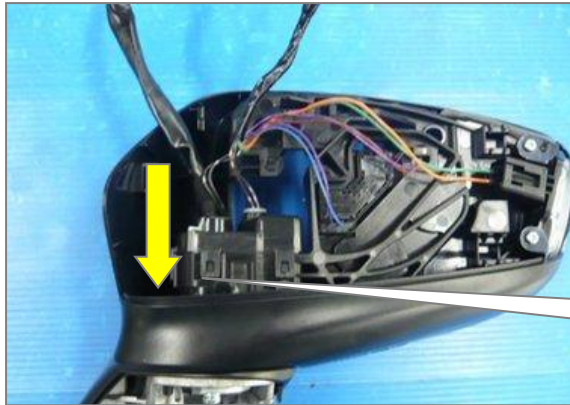

Pass harness through shaft.

4) Push the seal cap in until properly seated.

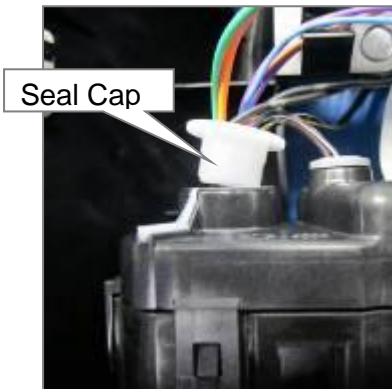

Push in until seated.

4. Install the new base cover-upper included in "Electric Fold-in Unit Kit" to the inner base aligning the two locators.

Base Cover-Upper (In the kit)



Inner Base



NOTE: Verify that four tabs are securely engaged.



5. While aligning the two locators, install the inner base to the outer mirror taking caution not to clamp the harness.




Mirror side




Inner Base side


Tighten three (3) screws. $6 \pm 1 \text{ N}\cdot\text{m}$

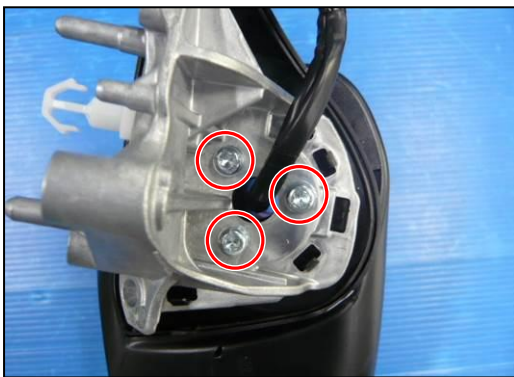

6. Attach the seal packing from "Electric Fold-in Unit Kit" to the harness in as shown in in figure. Then install a new push nut from "Electric Fold-in Unit Kit".

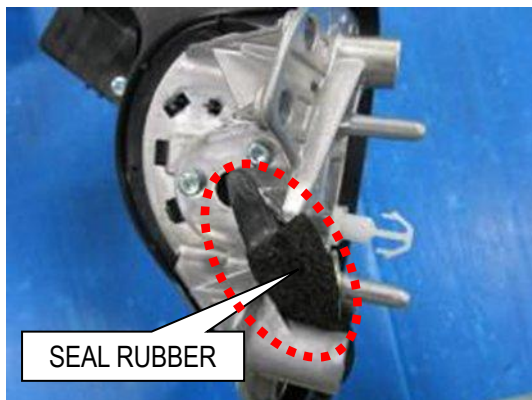

7. Confirm that the length of harness in figure is $340 \pm 10 \text{ mm}$.

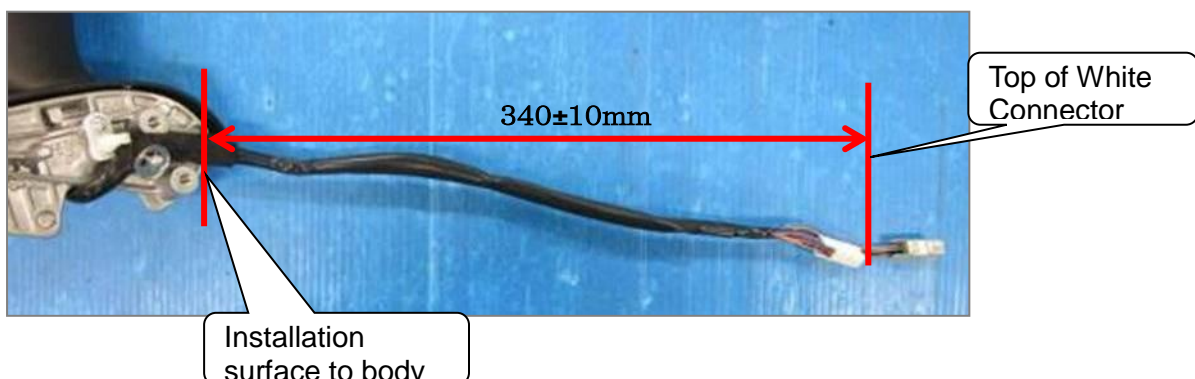

8. While aligning the locator, install the new base cover-lower from “Electric Fold-in Unit Kit”.




9. Install the seal rubber.


Note: Use a new one included in “Base Cover Kit” when the Kit is used.



10. Attach the seal packing from “Electric Fold-in Unit Kit” to the harness.

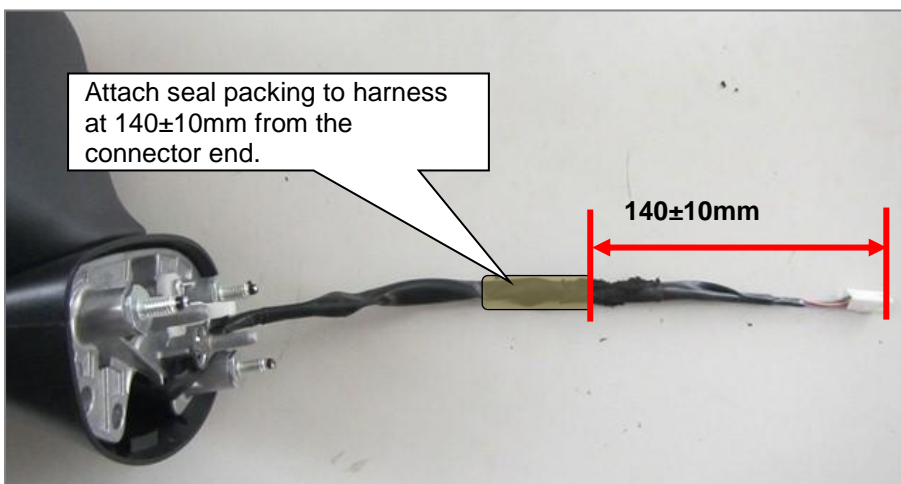


11. Install the outer mirror garnish according to the instructions in Workshop Manual "OUTER MIRROR GARNISH REMOVAL/INSTALLATION".

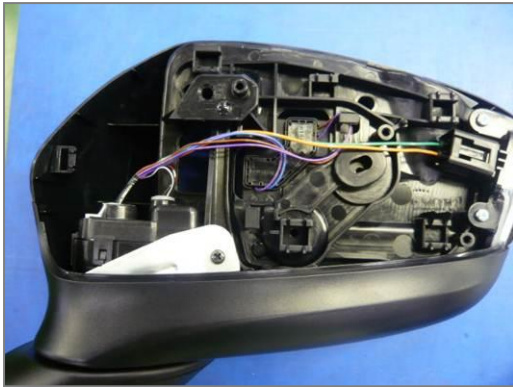

12. Install the power outer mirror according to the instructions in Workshop Manual "POWER OUTER MIRROR REMOVAL/INSTALLATION".

Electric fold-in unit KIT

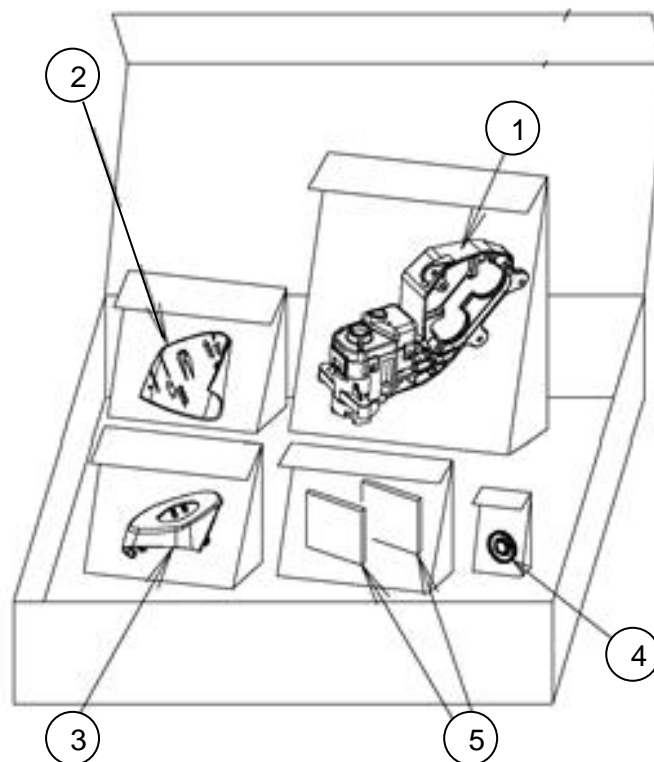

1. Electric Fold-in Unit
2. Base Cover-Upper
3. Base Cover-Lower
4. Push Nut
5. Seal Packing