



## ENTERTAINMENT

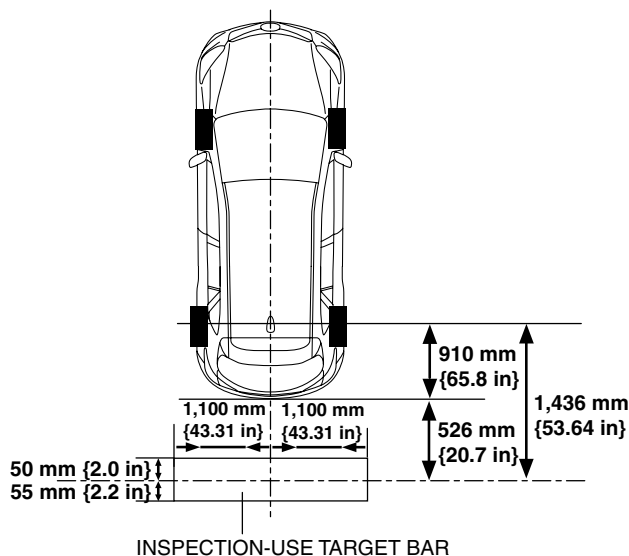


ac5wzw0000380

9. Select the adjustment mode No.1 screen CHK.
10. Input the inspection password.
  - Switch the light switch in the following order while the selector lever is shifted to the R position (ATX)/put in reverse (MTX).

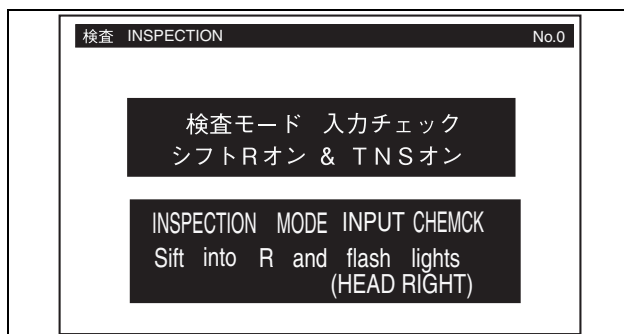

ac5wzw0000331

11. Verify that the distance reference line for the inspection is above the inspection-use target marker, and select OK.
  - If it is not above the inspection-use target marker, select NG and perform the initialization again.
12. Switch the ignition OFF (LOCK).
13. Launch the initialization setting (calibration) mode. (See 09-20-71 Initialization setting (calibration) mode launching procedure.)

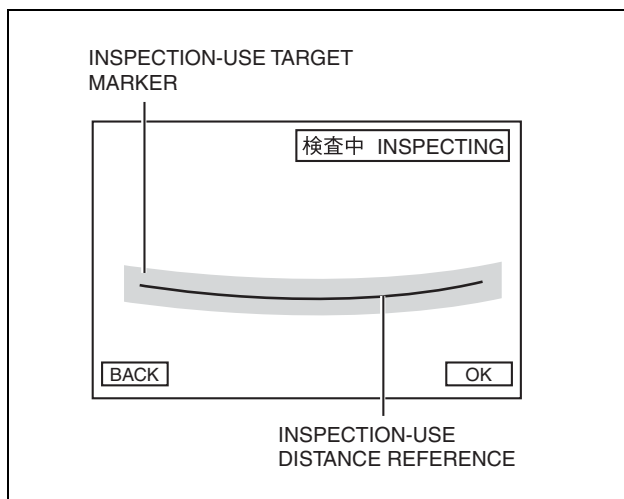

ac5wzw0000292