


REAR SCUFF PLATE REMOVAL/INSTALLATION

id091700801500

id091700801500

1. Hold part A shown in the figure, open the rear scuff plate in the direction of arrow (1), move it in the direction of arrow (2), and detach tab A of the rear scuff plate from the B-pillar lower trim.

ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

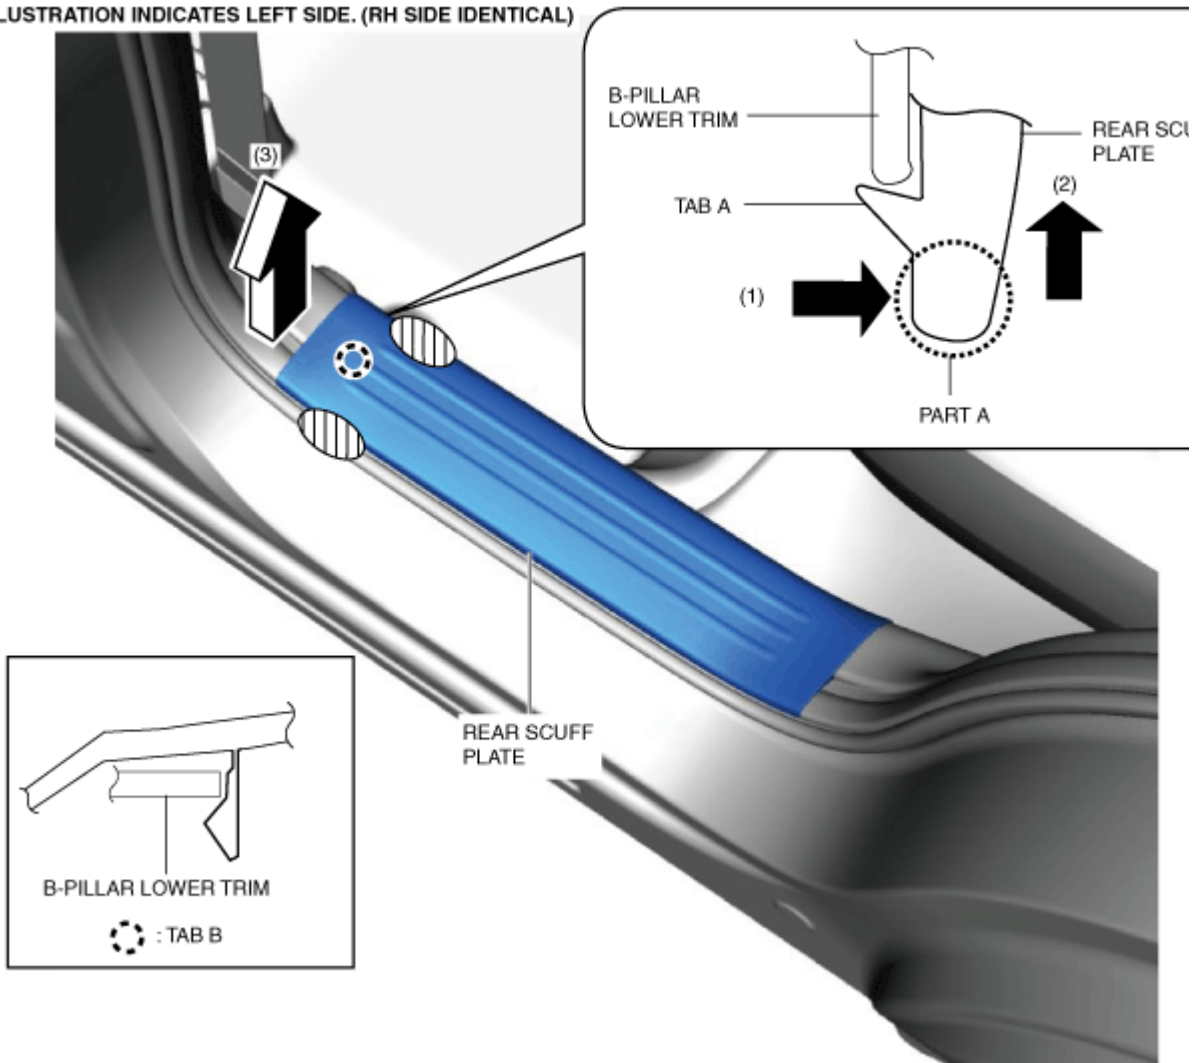


ac5uuw00005379

2. Hold the shaded areas shown in the figure, move the rear scuff plate in the direction of arrow (3), and detach tab B of the rear scuff plate from the B-pillar lower trim.

3. Hold the shaded areas shown in the figure, move the rear scuff plate in the direction of arrow (1), detach the clip from the inner panel, and pull out the pin.

ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

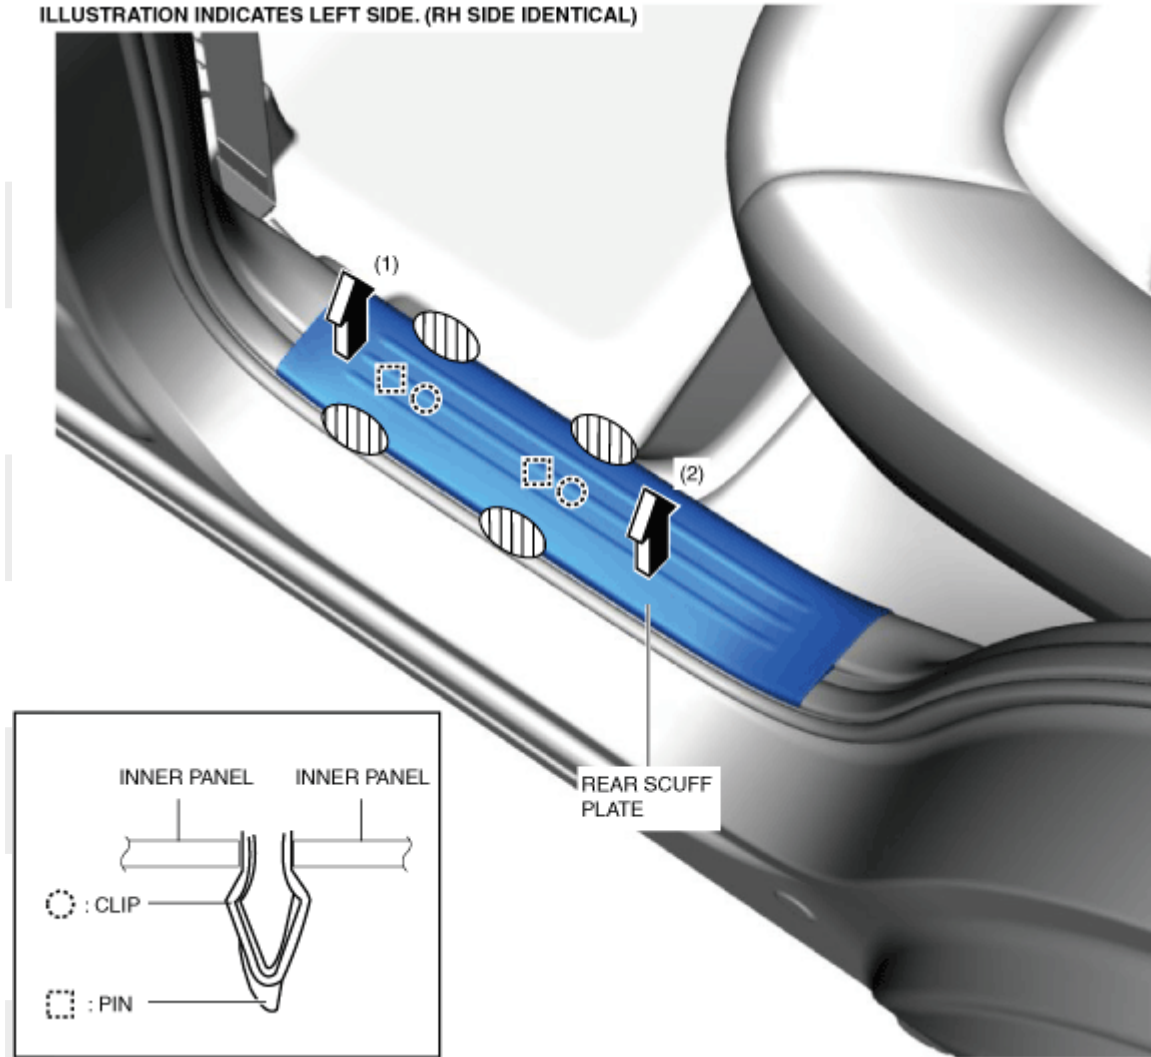


ac5uuw00005380

4. Hold the shaded areas shown in the figure, move the rear scuff plate in the direction of arrow (2), detach the clip from the inner panel, and pull out the pin.

5. Hold part A shown in the figure, open the rear scuff plate in the direction of arrow (1), move it in the direction of arrow (2), and detach tab A of the rear scuff plate from the trunk side trim.

ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

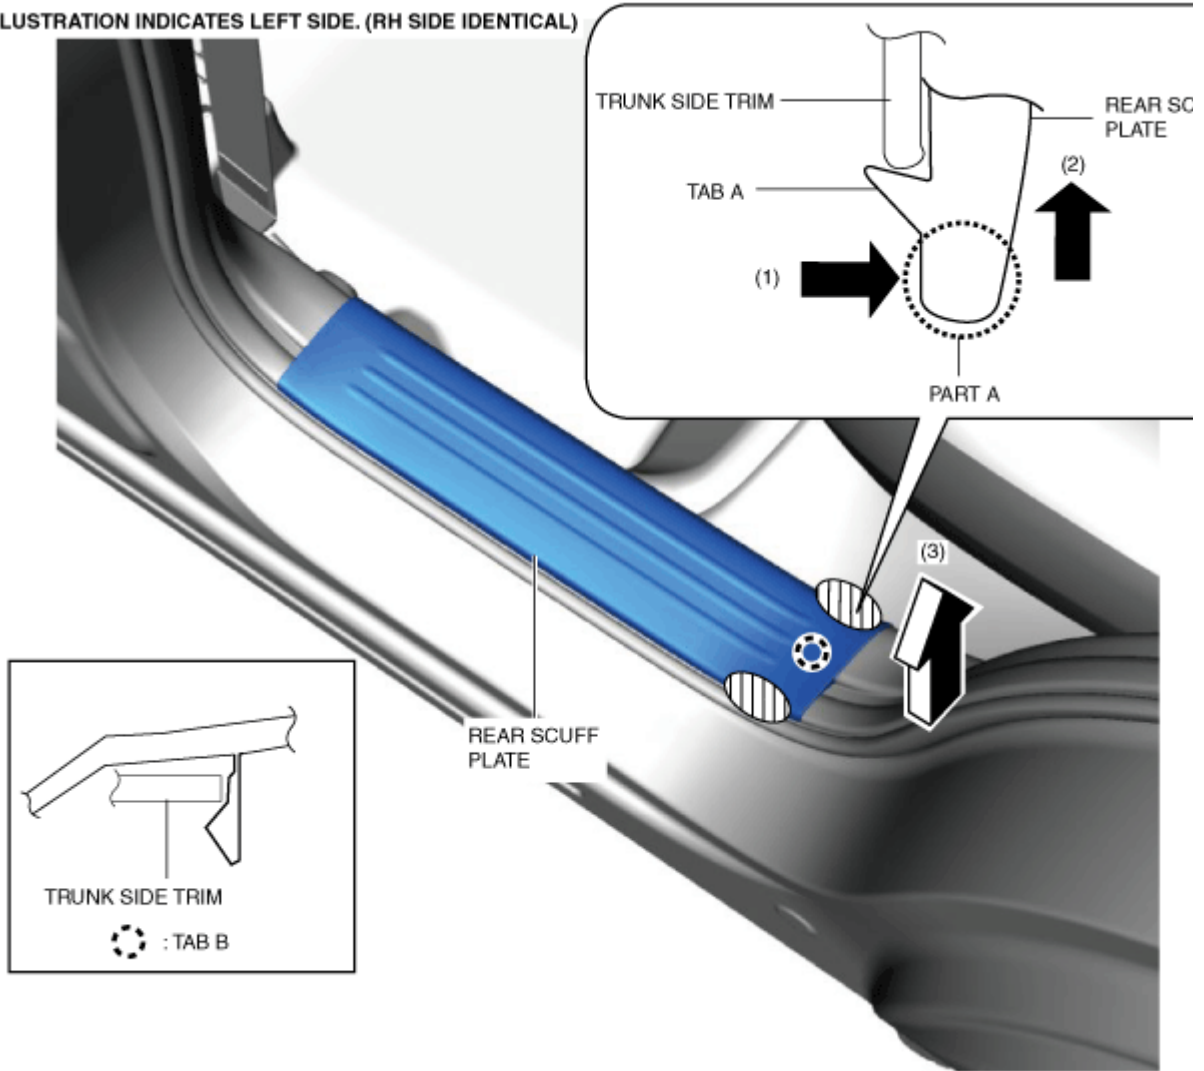

ac5uuw00005381

6. Hold the shaded areas shown in the figure, move the rear scuff plate in the direction of arrow (3), and remove it while detaching tab B of the rear scuff plate from the trunk side trim.

7. Install in the reverse order of removal.