


## ■ SWITCH PANEL REMOVAL/INSTALLATION

id091700460400

id091700460400


1. Disconnect the negative battery terminal. (See NEGATIVE BATTERY TERMINAL DISCONNECTION/CONNECTION.)
2. Remove the console side panel. (See CONSOLE SIDE PANEL REMOVAL/INSTALLATION.)
3. Using a remover tool, move the switch panel in the order of arrows (1), (2), (3), and (4) shown in the figure, detach the clips, and remove the switch panel.

With commander switch

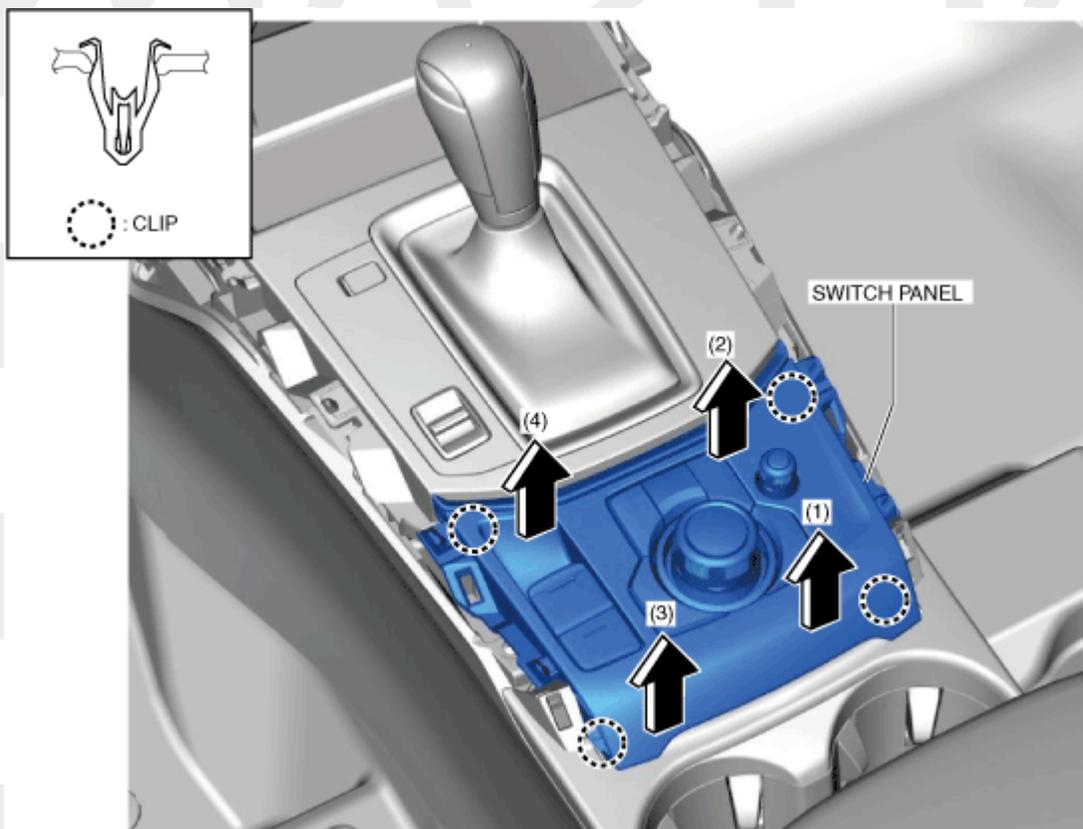

ac5uuw00005251

Without commander switch

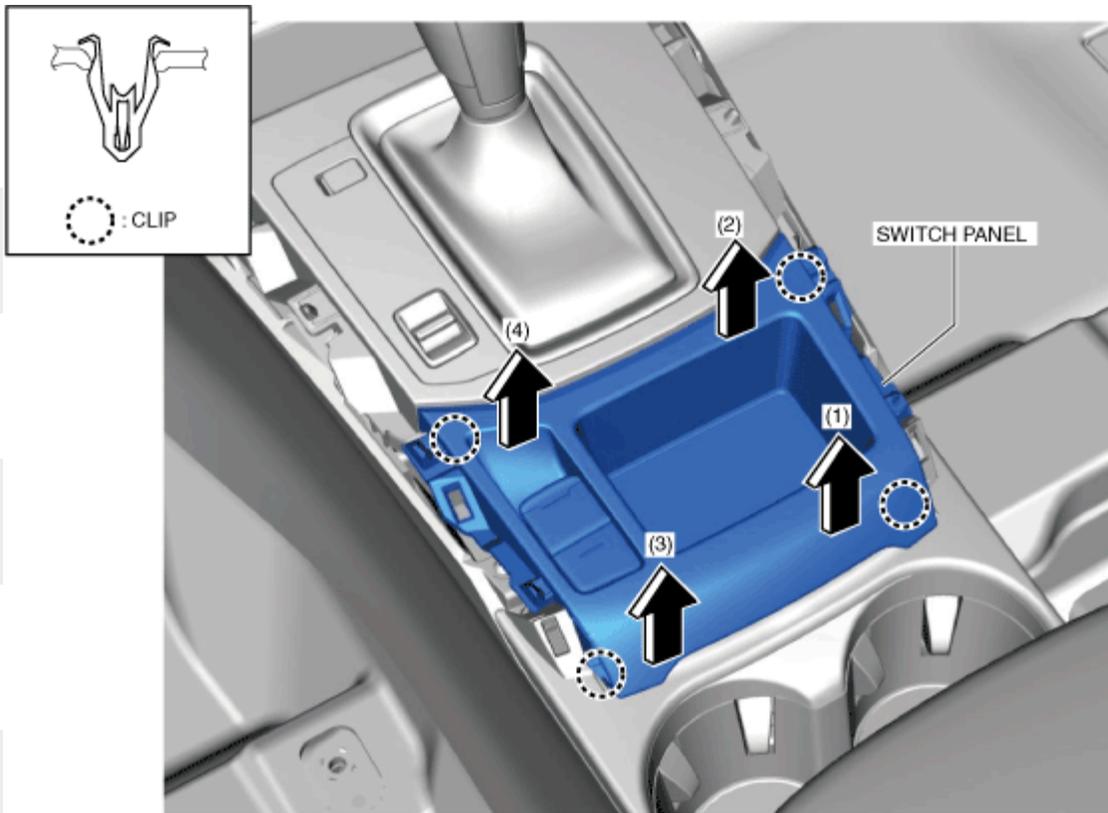

ac5uuw00005541

4. Disconnect the commander switch connector. (With commander switch)

5. Disconnect the electric parking brake switch connector.

Note

- When replacing the switch panel, remove the electric parking brake switch. (With commander switch) (See ELECTRIC PARKING BRAKE SWITCH REMOVAL/INSTALLATION.)

6. Install in the reverse order of removal.