


## EXTERIOR TRIM


### ROOF RAIL REMOVAL/INSTALLATION

1. Slide the covers in the direction of the arrows and remove them.
2. Remove the nuts.
3. Remove the roof rail.
4. Install in the reverse order of removal.

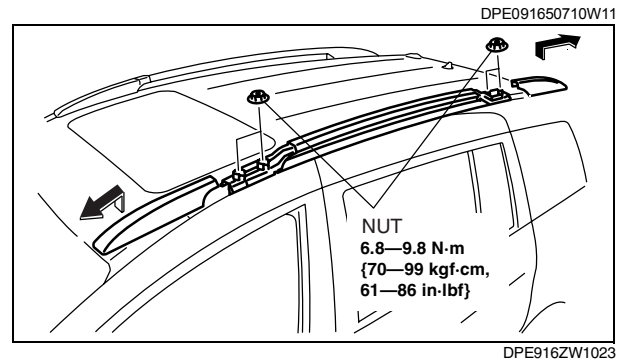


### FRONT BELTLINE MOLDING REMOVAL/INSTALLATION

1. Remove the inner garnish. (See 09-17-12 INNER GARNISH REMOVAL/INSTALLATION.)
2. Remove the power outer mirror. (See 09-12-32 POWER OUTER MIRROR REMOVAL/INSTALLATION.)
3. Fully open the front door glass.
4. Remove clip B using a protective tape-wrapped flathead screwdriver.
5. Lift (partially peeling back) the front beltline molding in the direction of the arrow and then remove tabs A.
6. Remove the front beltline molding by sliding it to the vehicle rear.
7. Install in the reverse order of removal.

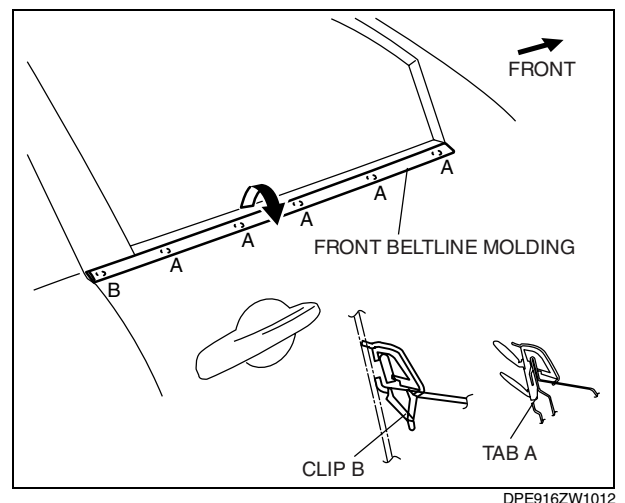

### REAR BELTLINE MOLDING REMOVAL/INSTALLATION

1. Fully lower the rear door glass.
2. Remove clip A using a protective tape-wrapped flathead screwdriver.
3. Lift (partially peeling back) the rear beltline molding in the direction of the arrow and then remove tabs B.
4. Remove the rear beltline molding by sliding it to the vehicle front.
5. Install in the reverse order of removal.

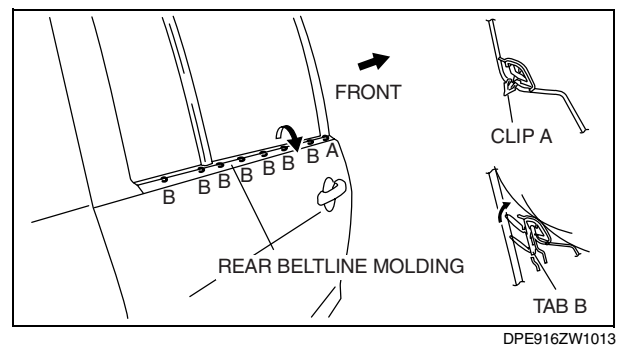

### ROOF MOLDING REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Partially peel back the seaming welt.
3. Remove the following parts:
  - (1) Roof rail. (vehicles with roof rail) (See 09-16-9 ROOF RAIL REMOVAL/INSTALLATION.)
  - (2) A-pillar trim (See 09-17-15 A-PILLAR TRIM REMOVAL/INSTALLATION.)
  - (3) Front scuff plate inner (See 09-17-19 FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
  - (4) Rear scuff plate (See 09-17-19 REAR SCUFF PLATE REMOVAL/INSTALLATION.)
  - (5) B-pillar lower trim (See 09-17-16 B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
  - (6) Front seat belt upper anchor installation bolt (See 08-11-1 FRONT SEAT BELT REMOVAL/INSTALLATION.)
  - (7) B-pillar upper trim (See 09-17-16 B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)

DPE091650641W03