





k) Remove bolt, attachment clip, and plastic screw connector for the air director located behind left fog lamp / headlamp housing. Remove the air director.

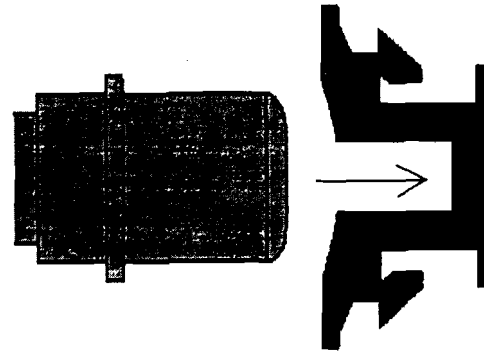


l) From the inlet pipe that was previously removed, remove the blue plastic breather hose clip from the breather nipple by carefully prying up on the two small tabs on both sides of the clip.

3. Installation of Cold Air Intake


a) When installing the intake system, do **not** completely tighten the hose clamps or mounting tab hardware until told to.

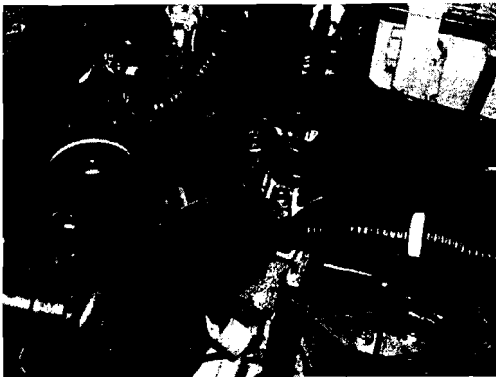

b) Install the 45 degree coupler onto the stock turbo inlet tube and secure using a #40 hose clamp.

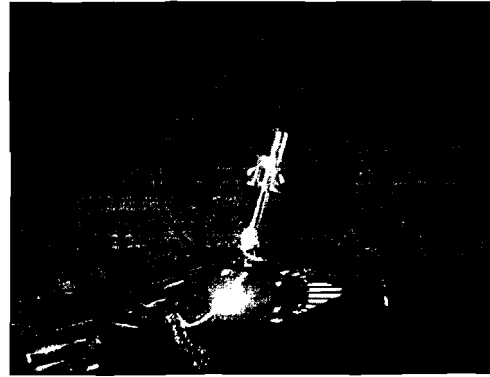

c) Install the previously removed (Step 2l) plastic breather hose clip onto the nipple on the upper intake pipe as shown. Simply slide the clip over the end until it snaps into place.

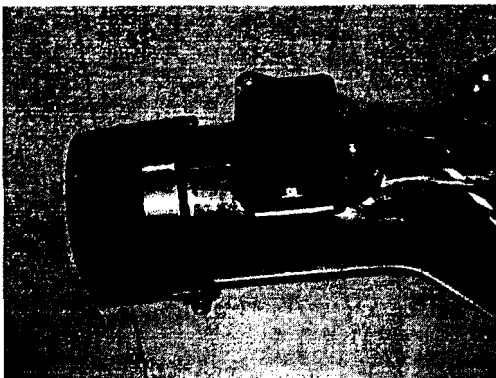

d) Using the two supplied 8-32 bolts, install the MAF sensor into the upper intake pipe. Next, install the 2.75" straight coupler onto the MAF end of the pipe as shown.



e) With the coupler on the pipe, slide the supplied airflow straightener into the end of the pipe and align the slots with the MAF sensor as shown.