


**GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.**  
**\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\***

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	D-224	1 1/4 BALLMOUNT
2	1	F-4	1/2" DIA. PIN & CLIP
3	1	CM-438-FW	7/16 " FISHWIRE TOOL
4	4	7/16-14	HEX FLANGE NUT
5	4	7/16-14 x 1 1/4	CARRIAGE BOLT
6	4	CM-SP2	.250 x .88 x 2.25" SQUARE HOLE SPACER

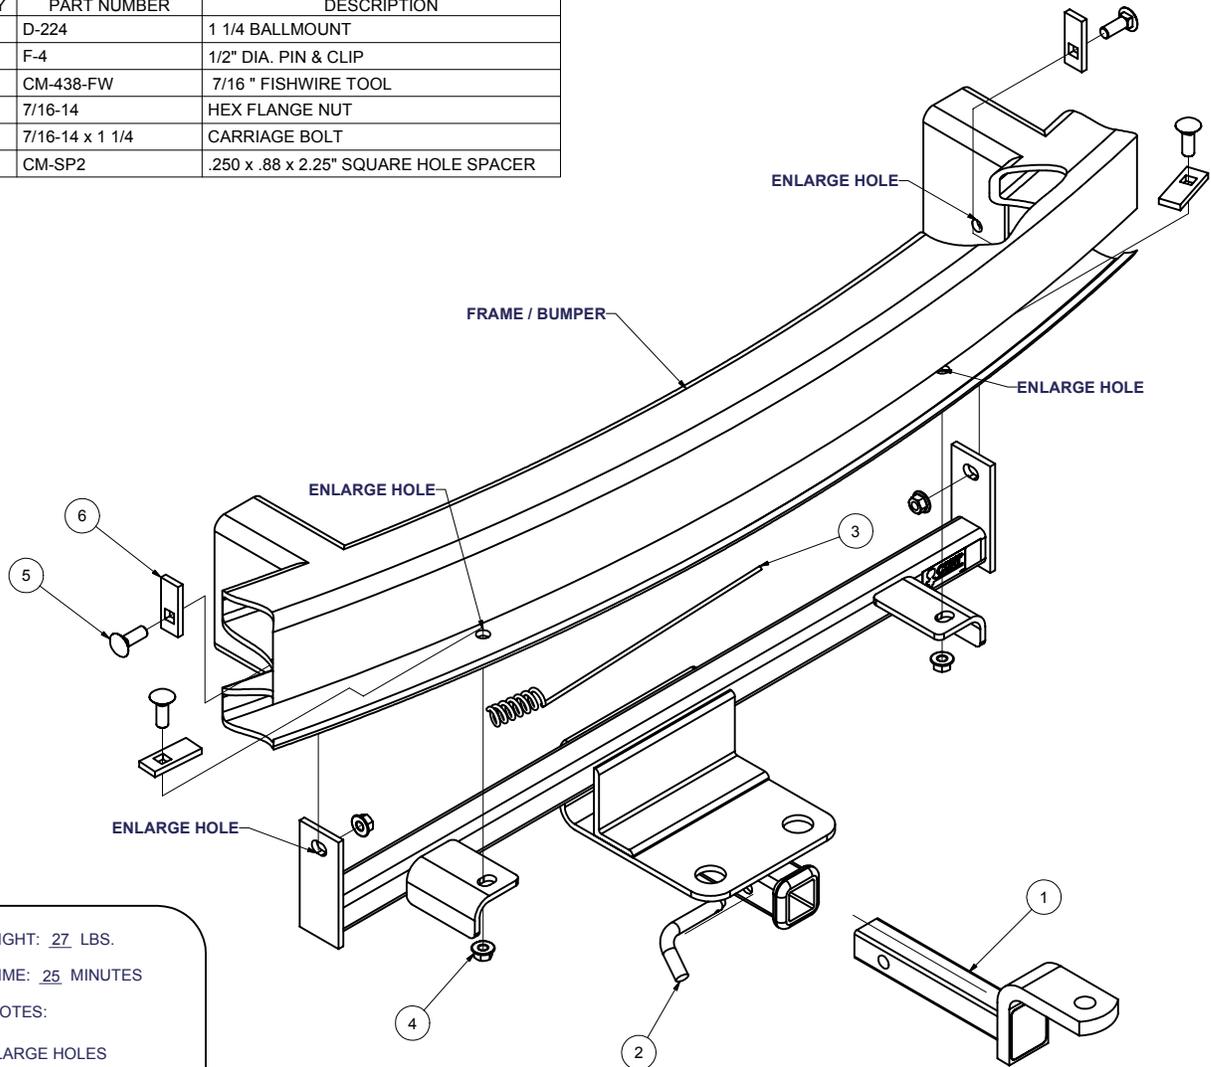

HITCH WEIGHT: 27 LBS.

INSTALL TIME: 25 MINUTES

INSTALL NOTES:

-ENLARGE HOLES

### **INSTALLATION STEPS**

- 1) Remove the two plastic fasteners from the lower fascia.
- 2) Enlarge the four attachment holes using 1/2" drill bit.
- 3) Fishwire bolts and square hole spacers into place through the end of the frame.
- 4) Raise hitch into position and snug fasteners.
- 5) Fishwire remaining bolts and spacers into position through the end of the inner bumper structure.
- 6) Reinstall plastic fascia fasteners.
- 7) Torque all fasteners to 50 lb - ft.

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**