




Genuine Accessories
Installation Instructions

Part Numbers:
0000-89-C31-XX

Rear Skirt

Applicable Models:
2003.5>MAZDASPEED

Kit Contents

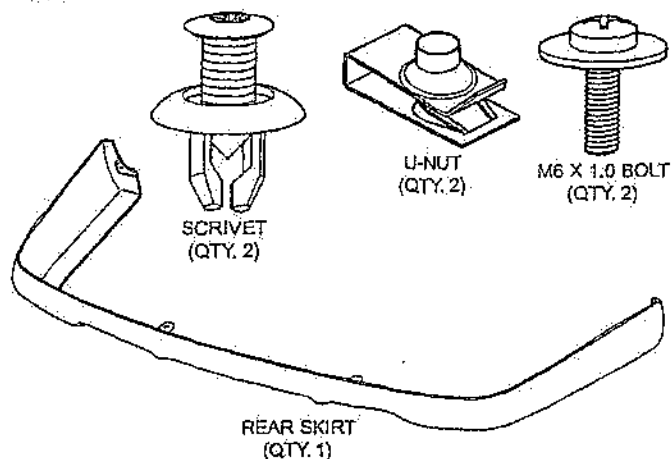


Tools Required

1. #2 Phillips Screwdriver
2. Flat Head Screwdriver
3. Rubbing Alcohol
4. Fixture
5. Wax Pencil
6. Measuring Tape


1 Before Installation

1. Read entire installation instruction before proceeding.
2. Be careful not to damage the paint or the part.
3. Be careful not to have the tape-backing snag and peel off when removing skirt from protective sock.
4. Note fixing positions (A, B).
5. Vehicle surface temperature must be at least room temperature. To ensure proper adhesion after installation do not expose vehicle to extreme cold or weather (i.e. rain/snow).

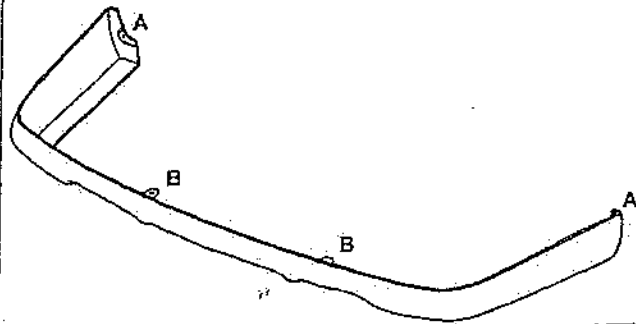

2 Prep Vehicle for Installation

1. Using rubbing alcohol, clean lower surface of bumper.
2. Using a flat head screwdriver, remove plastic fasteners from rear bumper (position B).
3. Install "U" nuts on vehicle as shown.

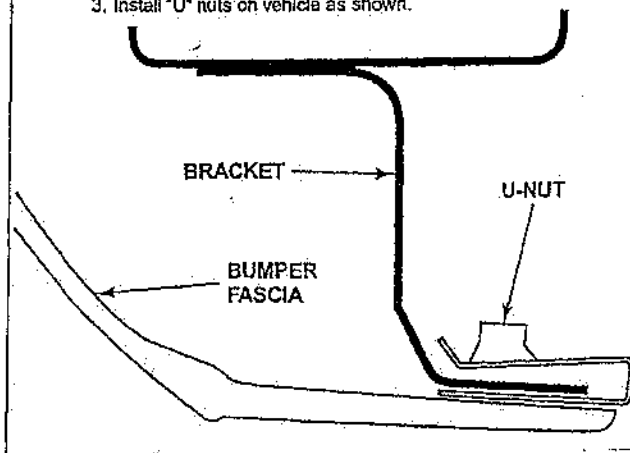

3

Install Skirt

1. Peel approximately 1" of backing from tape on both ends of the (3) strips and flip to outer side of skirt as shown in Figure 1. (Be careful not to contaminate the tape with dust, grime or fingerprints.)

2. Using a Phillips screwdriver, install bolts into U-nuts at position B (shown in Block 1.)

NOTE: Make sure the skirt is above the muffler tip.

3. While holding the rear skirt to the bumper, install the scrivenets in position A and firmly press in place.

4. Push rear skirt upward.

5. Fit to minimize gaps. With a measuring tape, measure from the bottom of the skirt to the floor at each corner and adjust skirt to make sure each dimension is the same.

6. Peel tape from one side, then apply pressure for at least 30 seconds to ensure a good fit.

7. Repeat on other side.

8. Check alignment, then pull center tape and apply pressure.

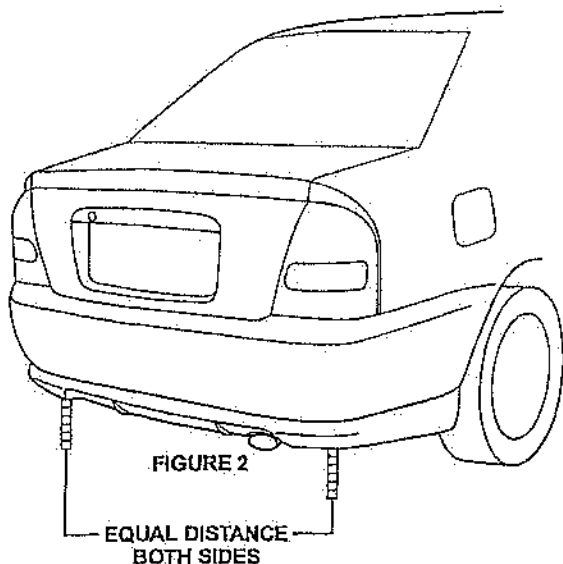


FIGURE 2

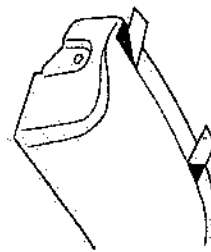



FIGURE 1
(3) PLACES, (6) TABS TOTAL

4

Finish Installation and Quality Checks

1. Check area gaps with feeler gauge where shown and adjust by pressing on area's to ensure tape is adhered.

2. Clean area free of any fingerprints with rubbing alcohol and soft cloth.

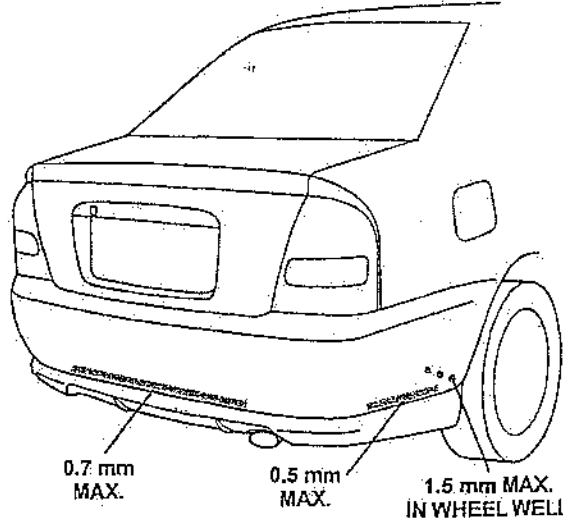

0.7 mm
MAX.

0.5 mm
MAX.

1.5 mm MAX.
IN WHEEL WELL