

NOTE: Refer to Page 2 for IDC Wire Tap Procedure and Wire color code information.

14 EMERGENCY OVERRIDE/PROGRAMMING BUTTON MOUNTING

1. Locate the previously removed driver's side kick panel cover.
2. Drill a 9/32" hole at the top of the panel, exactly 12 mm down and 95 mm from the far edge.
3. Route the emergency override/programming button from the remote start harness down to the kick panel.
4. Mount the emergency override/programming button in the drilled hole from behind and screw the mounting cap in place. (FIGURE VV)

NOTE: DISCARD THE LOCK WASHER FROM THE EMERGENCY OVERRIDE/PROGRAMMING BUTTON, IT IS NOT USED ON THIS MODEL.

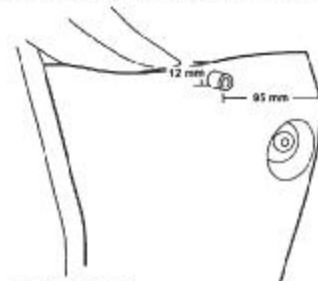


FIGURE VV