



GENUINE Base Rack


INSTALLATION AND USER'S INSTRUCTIONS


Vehicle: Mazda5
Part number: CC43 V4 701G

Thank you for purchasing this genuine Mazda accessory.
Before you begin, please read these instructions carefully.
Please read the contents of this booklet and make sure that you are familiar with the contents in order to properly install and use this Base Rack.

WARNING

- There are several  **WARNING** and  **CAUTION** sections in this booklet concerning safety when installing or removing this Base Rack. Always read and follow them in order to properly install and use this Base Rack. Always read and follow them in order to prevent injuries, accidents, and possibilities of damaging the vehicle.

 **WARNING** : indicates a situation in which serious injury or death could result if the warning is ignored.

 **CAUTION** : indicates a situation in which body injury or damage to the vehicle could result if the caution is ignored.

- Do not install this Base Rack in any way other than described in the following instruction.
- Do not modify this Base Rack.
- If you have any question about the use of this Base Rack, consult your Mazda dealer for proper advice before using it.
- Mazda and its suppliers are not responsible for injuries, accidents, and damage to persons and property that arise from the failure of the dealer or installer to follow these instructions.
- Be careful not to lose removed parts, and be sure that they are kept free from scratches, grease or dirt.

NOTE


To the dealer

Please turn over these instructions to the customer after installation.

To the customer

Please keep these instructions after installation. The instructions may be necessary for installing other optional parts or removal of this accessory. Should the vehicle or this accessory be re-sold, always leave these instructions with it for the next owner.

INSTALLATION CHART

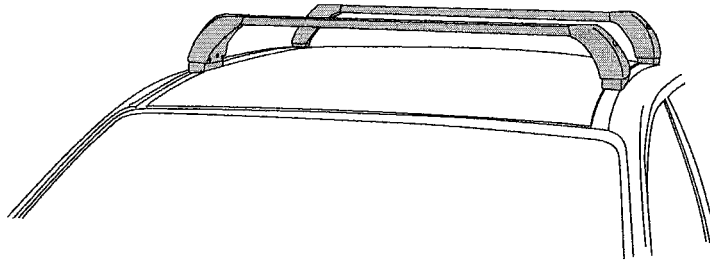

REQUIRED TOOLS (Be sure to have these ready before installation.)


Clean rag




Tape measure



Cutting knife



Scissors



Mild soap



PARTS




CAUTION

Check that all of the parts in the following table are present, and that they are free of dirt, scratches and damage.


No.	Parts name	Qty.
①	FRONT BASE RACK : 930mm	1
②	REAR BASE RACK : 885mm	1
③	RUBBER PAD : Front / Right	1
④	RUBBER PAD : Front / Left	1
⑤	RUBBER PAD : Rear / Right	1
⑥	RUBBER PAD : Rear / Left	1
⑦	FOOT COVER	4
⑧	BOLT	4
⑨	PLASTIC KNOB	4
⑩	SQUARE WASHER	4

No.	Parts name	Qty.
⑪	STICKER	1
⑫	KEY	4
⑬	NOISE REDUCTION SPOILER (short)	3
⑭	NOISE REDUCTION SPOILER (long)	1
⑮	ROOF PROTECTION	2
⑯	CAUTION LABEL	1
⑰	INSTALLATION INSTRUCTION	1
⑱	STICKER FOR SPOILER	1

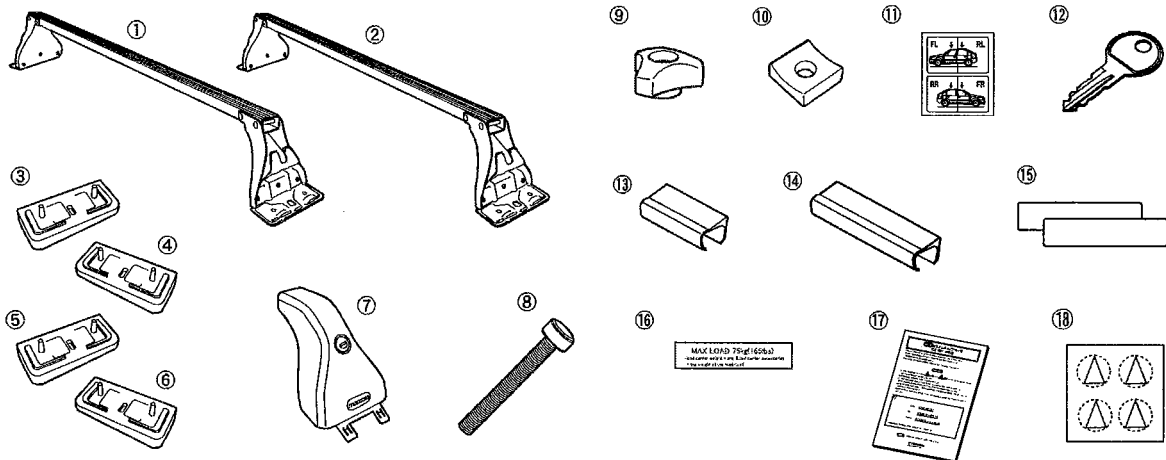


PREPARATION BEFORE INSTALLATION


CAUTION

- A. Please pay attention to  sections. These are highly important directions for installation. Be careful while installing.
- B. Two persons should do the installation and the removal.

1. Clean contact area on vehicle's roof

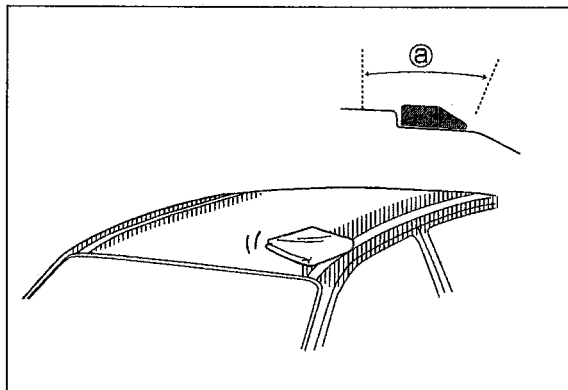


Clean dirt and grease off contact area of vehicle's roof and roof molding with mild soap, and dry thoroughly.

* Clean space  as well.

CAUTION

Do not use thinner, benzine or any kind of solvent.

2. Remove lid of roof molding

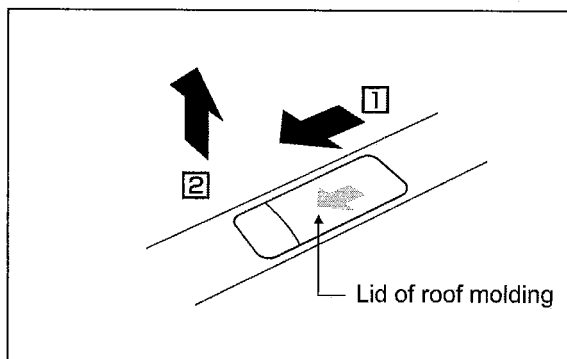


Refer to illustration. Slide lid of roof molding and remove.

CAUTION

Please keep lids.

3. Attach ROOF PROTECTION FILM

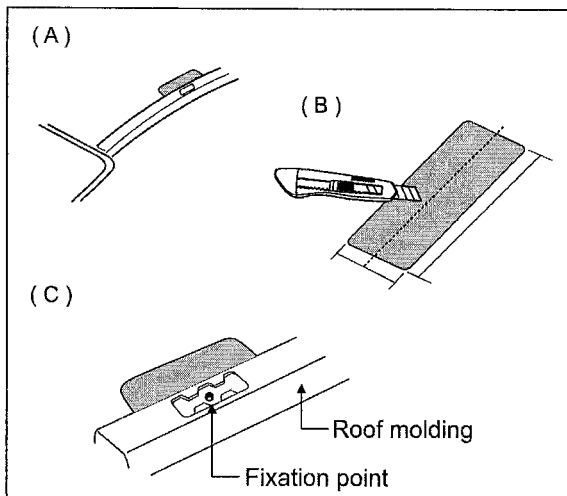

1. Polish around the installation area with wax.

* (A)

2. Cut ROOF PROTECTION FILM in half using a cutting knife.


* (B)

3. Attach a piece of ROOF PROTECTION FILM to vehicle's roof by the side of installation points.

* (C)


ASSEMBLE BASE RACK

1. Check and confirm rubber pads number and location.

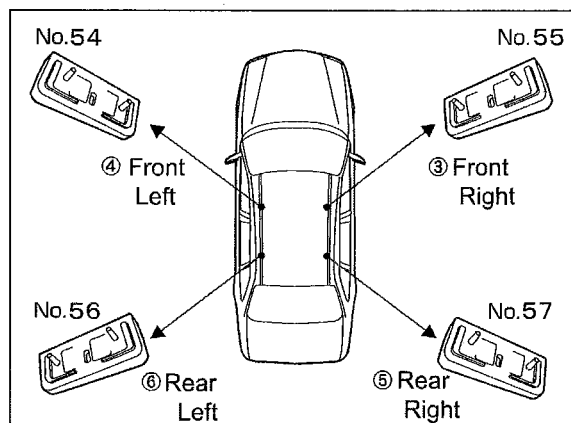

Refer to illustration, and confirm location and number of RUBBER PAD.

2. Install RUBBER PAD to BASE RACK.

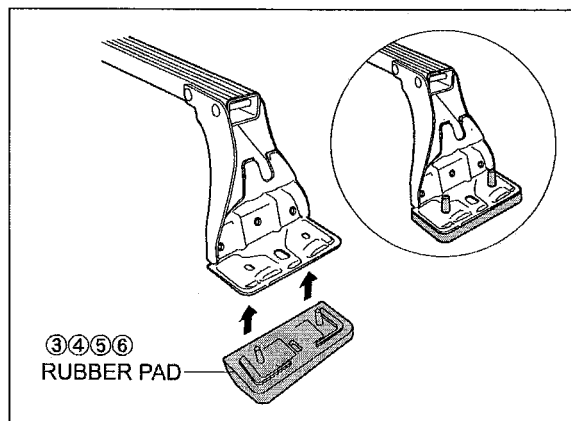


Install RUBBER PAD ③④ to FRONT BASE RACK ①, and RUBBER PAD ⑤⑥ to REAR BASE RACK ②.



CAUTION

Make sure the correct RUBBER PADS are attached to the BASE RACK.


3. Install small parts to base rack.

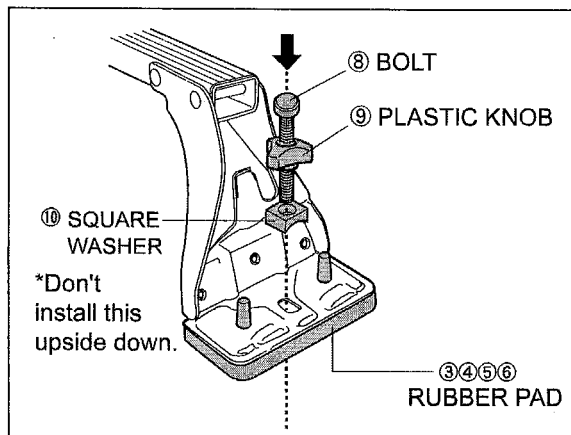

Refer to illustration, and assemble BOLT ⑧, PLASTIC KNOB ⑨ and SQUARE WASHER ⑩ to BASE RACK ① ② step by step. Slide bolt into the hole located in the middle of rubber pad.

ATTACH TO VEHICLE

1. Set BASE RACK

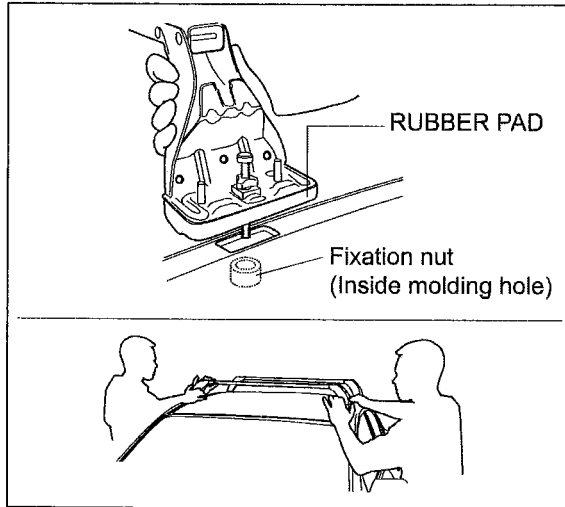


Refer to illustration, and two people should hold BASE RACK. Place the BASE RACK to the proper attaching point on vehicle's roof.

! CAUTION

1. Two people should do the installation on vehicle, and be careful not to drop the BASE RACK and thereby damaging vehicle's roof.
2. Make sure the BASE RACK direction is correct. (left and right side)
3. This BASE RACK is designed to fit accurately to the profile of vehicle's roof. Install BASE RACK only in the location designated in this booklet.

2. Fix BASE RACK

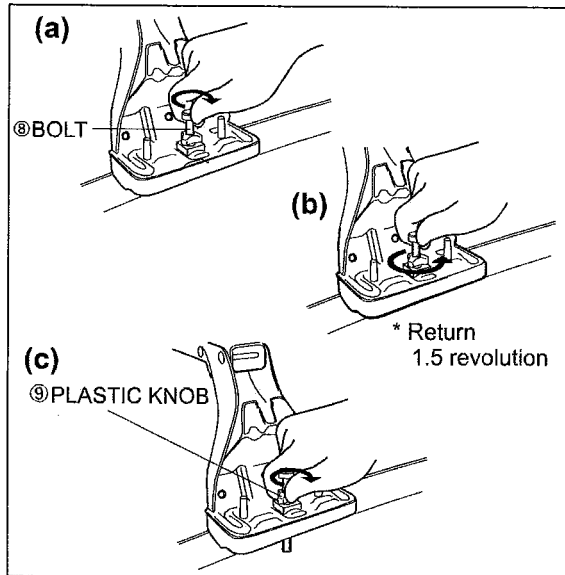

- (a). Tighten BOLT ⑧ completely by hand, and loosen BOLT ⑧ 1.5 revolutions.

! CAUTION

Never use any tools when tightening. Vehicle's roof would be damaged if tightened by a tool.


- (b). Tighten PLASTIC KNOB ⑨ equally and mutually on the right and left side by hand. Please hold BOLT ⑧ using the other hand to avoid turning when PLASTIC KNOB ⑨ is tightened.

- (c). Tighten PLASTIC KNOB ⑨ firmly by hand.

! CAUTION


Confirm that there is no gap between vehicle's roof and RUBBER PAD after tightening.

3. Attach STICKER

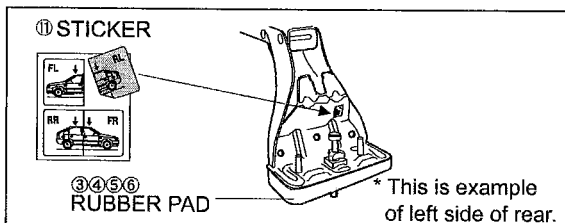


Attach STICKER ⑪ to the correct location on base rack.

4. Install FOOT COVER

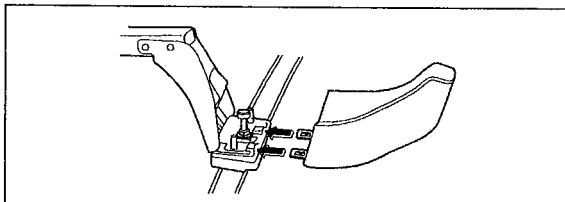

Install FOOT COVER ⑦ to foot part of FRONT and REAR BASE RACK.

4. Attach CAUTION LABEL

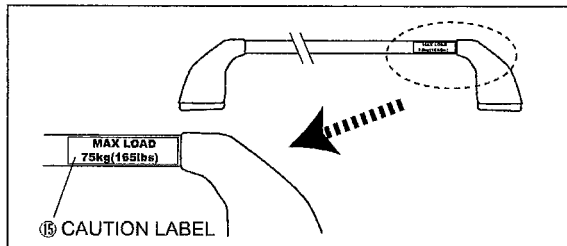

Attach CAUTION LABEL^⑮ to the front face of the Front base rack.





CAUTION

Always attach this CAUTION LABEL.




5. Installation of WIND NOISE REDUCTION SPOILER

In case of driving with only BASE RACK (without attachments), install WIND NOISE REDUCTION SPOILERS^⑬, ^⑭ to reduce wind noise.


* Remove all SPOILERS installed when attachments are installed.

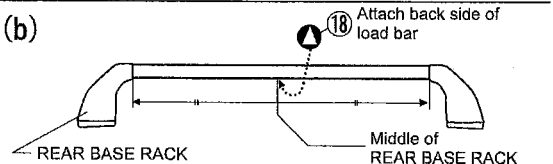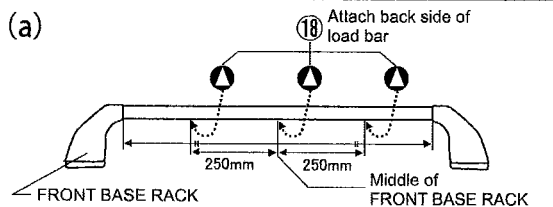

(Installation chart)

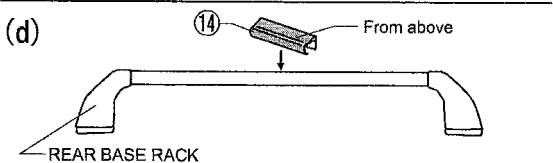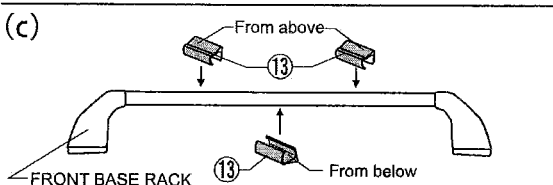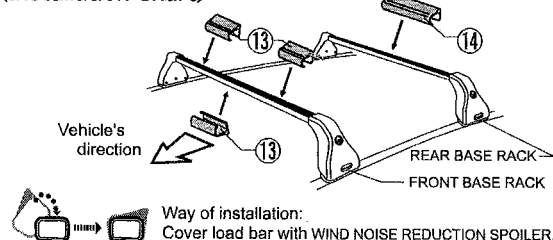

(Complete installation as seen from below)

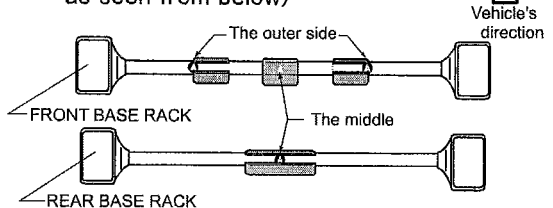

(1) Attach the STICKERS FOR SPOILERS

< FRONT BASE RACK >

Attach STICKERS FOR SPOILERS^⑮ on the back side of Front Base bar.

See illustration (a).

< REAR BASE RACK >

Attach STICKERS FOR SPOILERS^⑮ on the back side of Rear Base bar.

See illustration (b).

(2) Install WIND NOISE REDUCTION SPOILERS

< FRONT BASE RACK >

Install each SPOILER^⑬ so that each out side edge on SPOILER^⑬ aligns with the mark on STICKER^⑮. (except Center SPOILER) The Center SPOILER^⑬ should be installed on the center of the FRONT BASE RACK. See illustration (c) and installation chart and complete installation as seen from blow.

< REAR BASE RACK >


The SPOILER^⑭ should be installed on the center of the REAR BASE RACK. See illustration (d) and installation chart and complete installation as seen from below.



CAUTION

Check direction of WIND NOISE REDUCTION SPOILERS^⑬ and ^⑭.

CHECK FIT

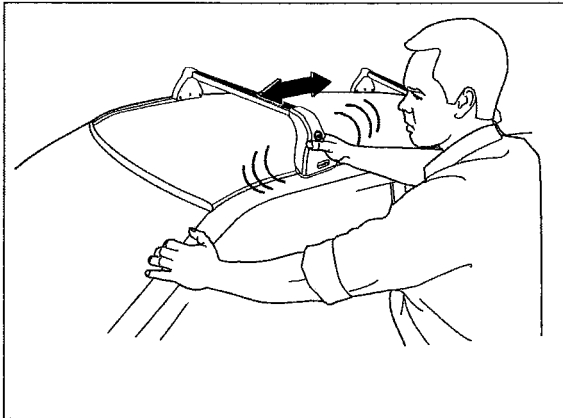

Firmly grip each Base rack foot. Push and pull on the foot to make sure it remains in the mounted position.

If Base rack or Square plastic washer^⑩ does not move, it is installed properly.

If base rack or Square plastic washer^⑩ moves, check location or direction of installation and tightened status for all parts with this installation instruction.

And install again firmly.


BASE RACK GUIDELINES

When using Base rack, the user must understand the precautions. The points listed below will assist you in using the Base rack and will encourage safety.

WARNING

- For quality fits and safety, use only the recommended optional Mazda genuine accessories on this Base rack when loaded. Do not use Base rack for purpose other than those for which they were designed for.
- Maximum load of this Base rack is 75kg (165lbs.). Do not exceed this carrying capacity.
Maximum load = weight of Base rack + weight of the load + weight of the accessories.
- Do not operate sunroof when using roof rack.
- Always make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened, and locked before every trip. Knobs, bolts, screws, straps, and locks must be periodically inspected for signs of wear, corrosion, and fatigue.
Check your load at stops during the trip to insure continued fastening security.
- All long loads such as, but not limited to, sailboards, surfboards, kayaks, canoes, and lumber may interfere when vehicle's back door is opened.
- Check local and state laws governing projection of objects beyond the width of a Vehicle. Be aware of the width and height of your cargo since low clearance branches, bridges, and parking garages can affect the load. All cargo will affect the vehicle's driving behavior. Never drive with any locks in an open or unlocked position.
- Remove Base rack and accessories when they are not in use and before entering an automatic car washer.
- When the Base rack is removed from the vehicle, all loose parts should be stored safely.

CHECK YOUR KEY NUMBER

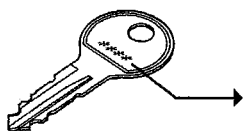

Write your key number here.