



ENTERTAINMENT

3. Remove the nuts.

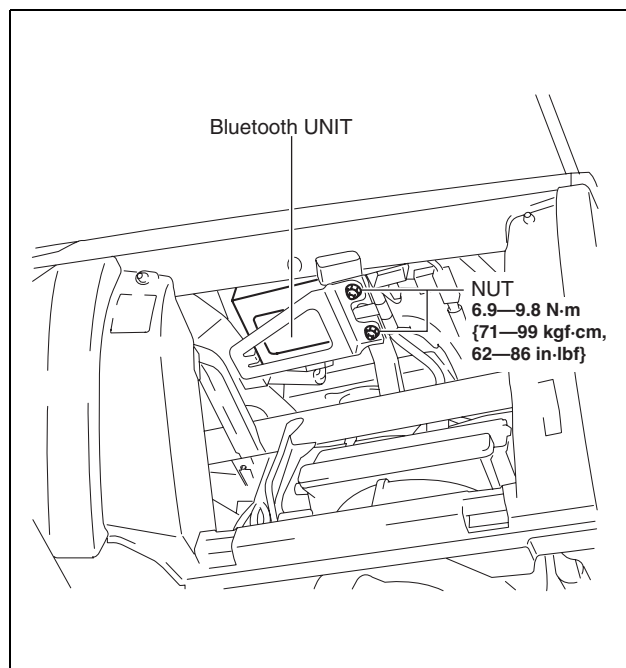

ac5jv00000475

4. While pressing the tabs of the clip in the direction of the arrows (1) shown in the figure, press the clip in the direction of the arrow (2) to detach it from the Bluetooth unit.
5. Detach the clip.
6. Disconnect the connector.
7. Remove the Bluetooth unit.
8. Install in the reverse order of removal.

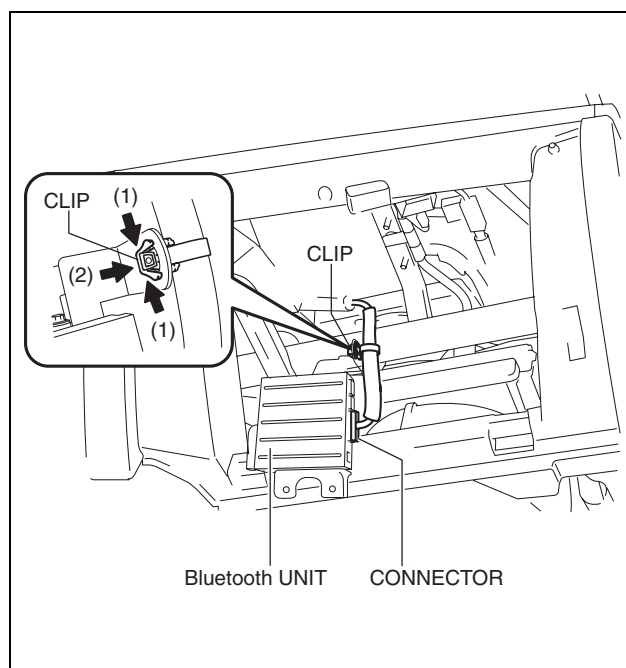

ac5jv00000476

REAR MOUNT CAMERA REMOVAL/INSTALLATION

id092000814900

Caution

- The audio unit communicates with the rear mount camera and records the presence/non-presence of the rear mount camera when the ignition is switched to ACC or ON (engine off or on) after connecting the negative battery cable.
- If the commander switch is installed with the negative battery cable connected when the audio unit records that there is no rear mount camera, the rear mount camera does not operate.
- For the rear mount camera installation/removal, disconnect the negative battery cable, switch the ignition to ACC or ON (engine off or on) after the servicing is completed, and the audio unit records the presence/non-presence of the rear mount camera.

1. Disconnect the negative battery cable. (See 01-17A-11 NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0].) (See 01-17A-13 NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0 (WITHOUT i-stop)].) (See 01-17B-9 NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)