

ENTERTAINMENT

Initialization setting (calibration) mode launching procedure  
Cursor operation method

- The operation method of the screen cursor, operates the light switch as follows.

Switch position	Operation content
Right turn	Move cursor clockwise.
Left turn	Move cursor counterclockwise.
Passing	Selects (decides).

Preparation

- Adjust the wheel alignment, tire pressure. (See 02-12-1 WHEEL AND TIRE SPECIFICATION.)
- Prepare two target bars for adjustment as shown in the figure.


Note

- Prepare target bars for adjustment which are easily recognized.


- Attach the target bars for adjustment to the position (floor surface) shown in the figure.

Caution

- The margin of error in the installation position of the adjustment target bar is within +/- 5 mm {0.2 in}.

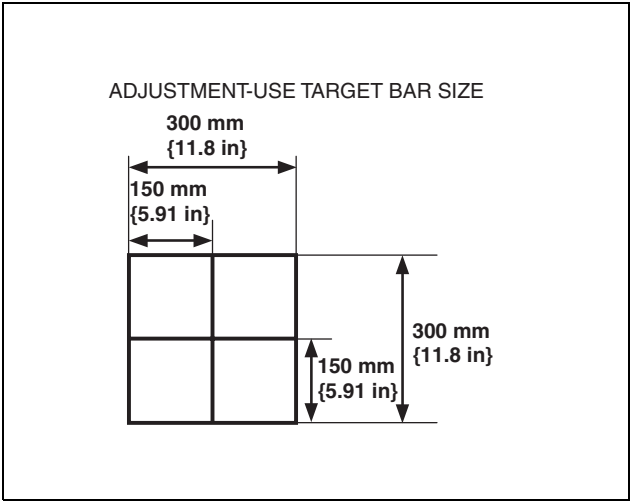

ac5wzw0000292

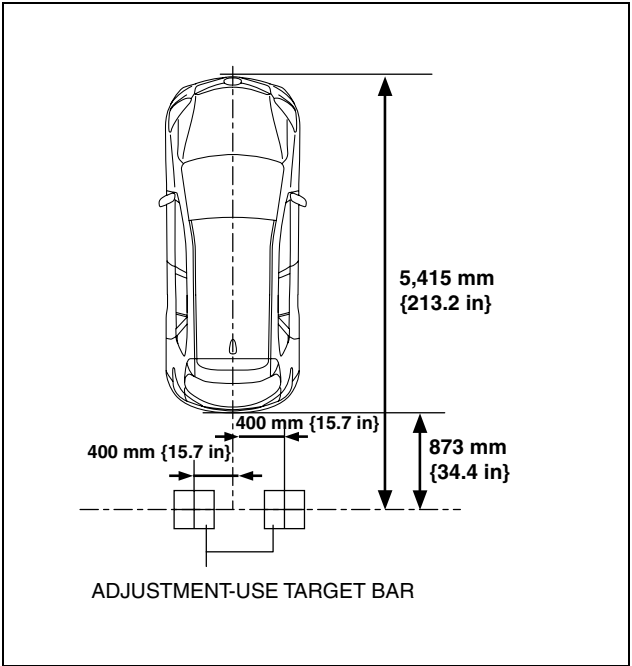

ac5wzw0000292

Initialization setting (calibration) launching procedure

- Launch the initialization setting (calibration) mode using the following procedure.

Note

- If the parking assist system initialization is not implemented (such as after back camera is replaced), the initialization setting adjustment mode is force-launched when the ignition is switched ON, and the No.1 screen is displayed, therefore, the procedure shown in the figure is not required.