[Close Window]

Connectors 0920-2c

0920-201A
AUDIO UNIT /
AUDIO UNIT
ILLUMINATION

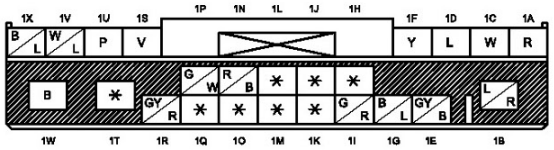

0920-206
REAR DOOR SPEAKER
LH

0920-207
REAR DOOR SPEAKER
RH



0918-701
AUDIO CONTROL SWITCH /
AUDIO CONTROL SWITCH ILLUMINATION LH



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0922-202
INSTRUMENT
PANEL HARNESS-
CLOCK SPRING

INSTRUMENT PANEL HARNESS

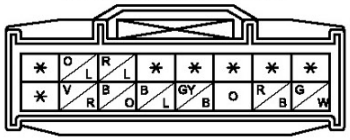

CLOCK SPRING

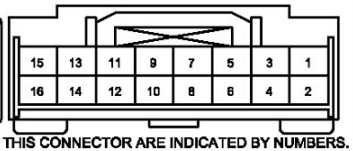

NOTE:SEEN FROM TERMINAL SIDE TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

0922-203
CLOCK SPRING-
SHORT CORD

CLOCK SPRING

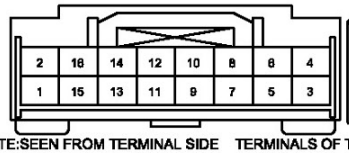

SHORT CORD

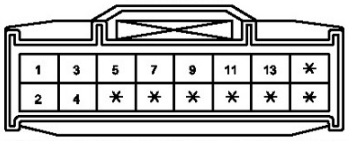

NOTE:SEEN FROM TERMINAL SIDE TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

Audio control switch

O-WW-O : Resistance

Switch Position	Terminal			Resistance (ohm)
	M	K	I	
Volume Down Switch ON	O-WW-O			50.9—56.3
Volume Up Switch ON	O-WW-O			139—155
Seek Up Switch ON	O-WW-O			285—316
Seek Down Switch ON	O-WW-O			533—590
MODE Switch ON	O-WW-O			984—1,089
Mute Switch ON	O-WW-O			1,934—2,139
INFO Switch ON	O—WW—		—O	50.9—56.3
OFF	O-WW-O			4,794—5,300