


KNA-DV3100

KNA-DV3200



SERVICE MANUAL

The DVD mechanism information is not in this service manual.
Please, refer to service manual X92-4740-00 (B53-0052-00).

KNA-DV3100

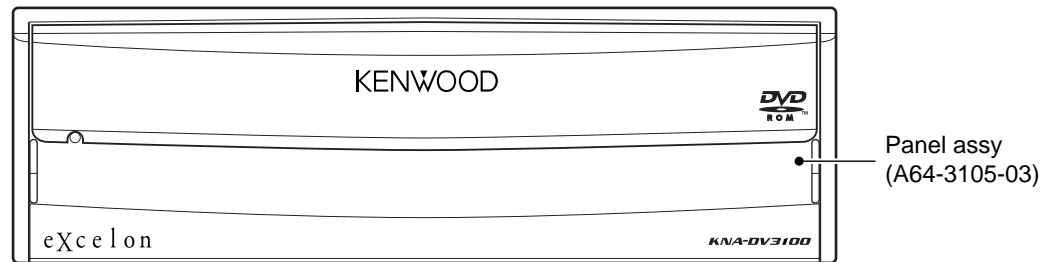

KNA-DV3200

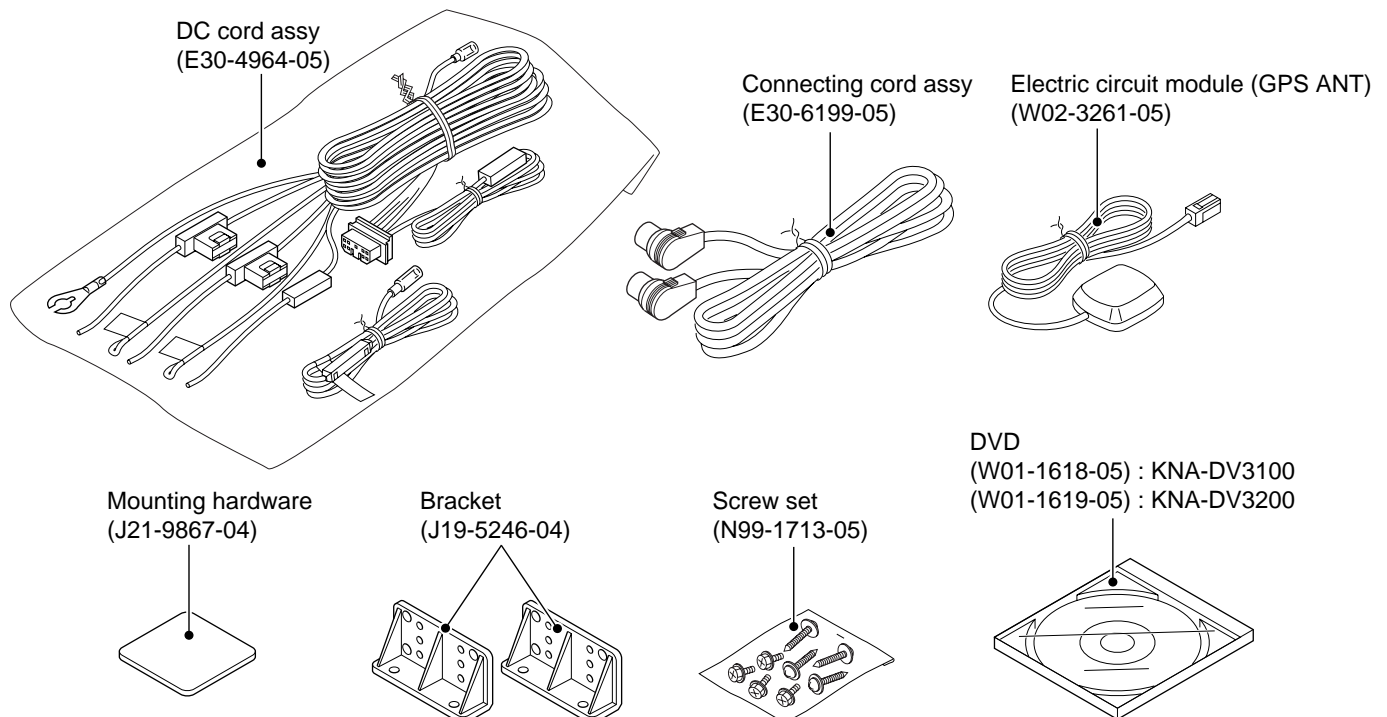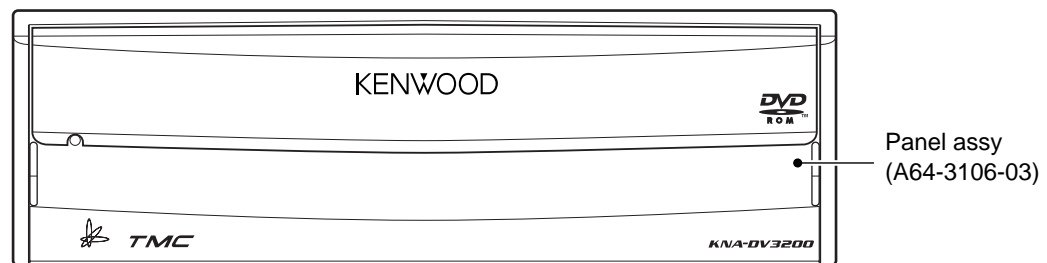
**CAUTION (Repair of NAVI board)**

You can not repair IC521 (GPS Receiver) and IC701 (CORE1).

If you can repair those parts please change to NAVI board assy(W02-3395-15).



BLOCK DIAGRAM

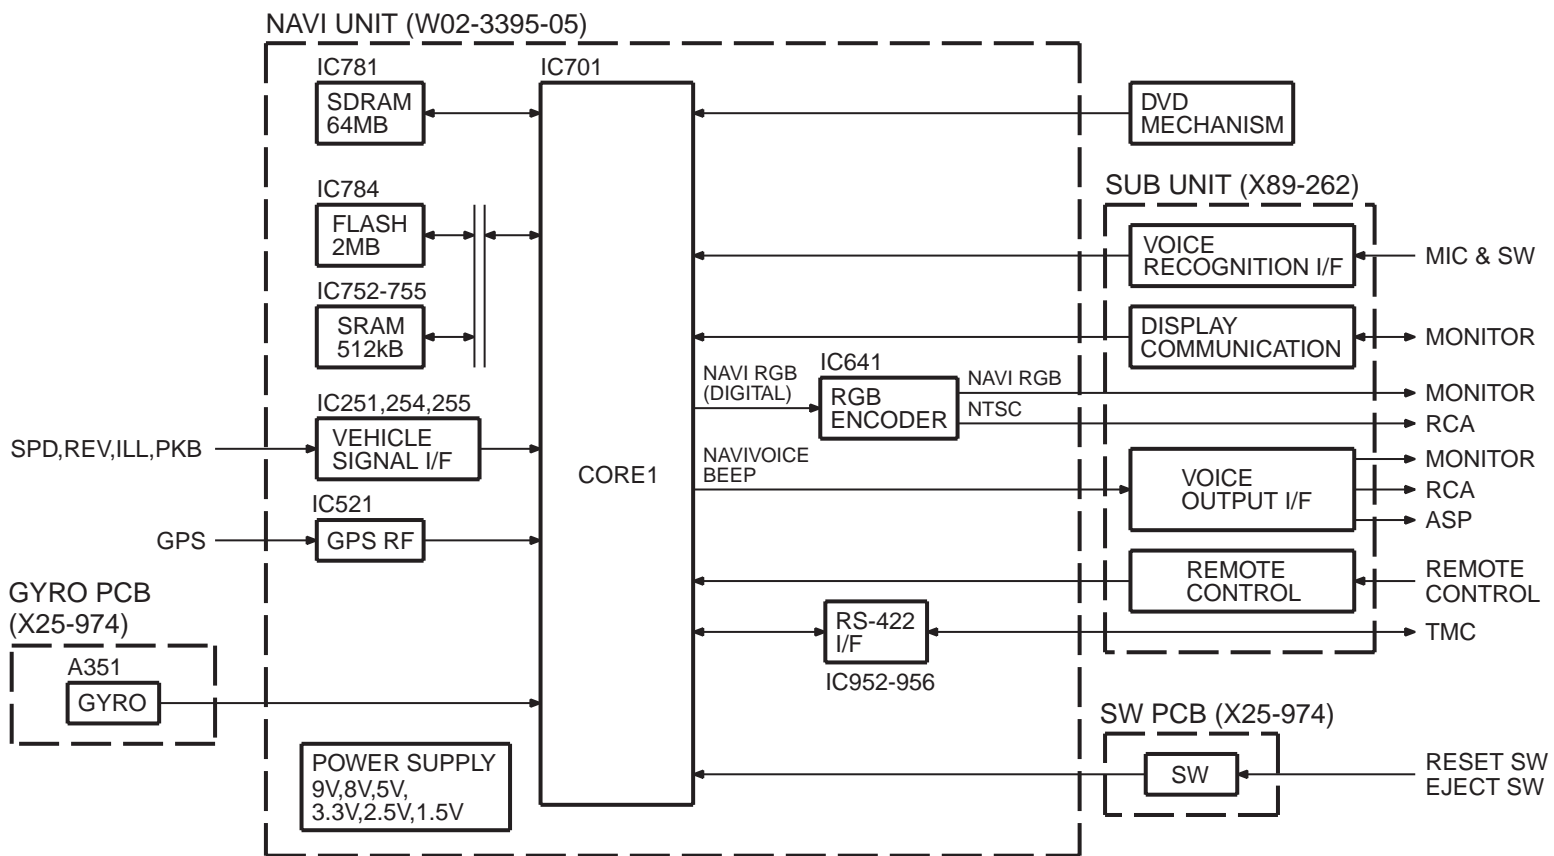

COMPONENTS DESCRIPTION

● NAVI BOARD (W02-3395-15)

Ref. No.	Application/Function	Operation/Condition/Compatibility
IC101	Comparator	Voltage detected
IC102	IC	Voltage detected
IC103	SW regulator	8.3V power supply, 5V power source control
IC104	SW regulator	3.3V power supply, 1.5V power source control
IC105	3 terminal regulator	Backup 3.3V power supply
IC106	Microcomputer	Power supply, reset control
IC107	3 terminal regulator	9V power supply
IC108	3 terminal regulator	5V power supply
IC109	General purpose logic	For voltage conversion from 3.3V to 5V
IC111	General purpose logic	For mute signal generation
IC212	Point regulator	3V power supply
IC251	Non-inverter driver	Vehicle-related signal generation
IC254	General purpose logic	For SPD signal generation
IC255	Analog multiplexer	For switching vehicle speed signal
IC256	General purpose logic	For voltage conversion from 3.3V to 5V
IC301	Ope-amp	For synthesizing voice signal
IC306	Ope-amp	For voice signal for navigation system generation
IC309	General purpose logic	For voltage conversion from 3.3V to 5V
IC310	Ope-amp	For synthesizing voice signal
IC502	General purpose logic	For voltage conversion from 3.3V to 5V
IC521	RF-IC	GPS signal
IC522	Crystal oscillator	For GPS signal
IC523	Comparator	For GPS antenna detection
IC524~526	General purpose logic	For GPS signal
IC551	General purpose logic	For HDD/DVD control signal generation
IC561	General purpose logic	For EJECT signal generation
IC641	D/A converter	For video signal generation
IC642	General purpose logic	For dot clock generation
IC684	Ope-amp	For gyro sensor signal generation
IC701	Microcomputer	CORE1
IC731	3 terminal regulator	Backup 1.5V power supply
IC732,733	Point regulator	2.5V power supply
IC734	3 terminal regulator	1.5V power supply
IC751	Analog switch	For CKE signal generation
IC752~755	128M-SDRAM	16MB
IC781	4M-SRAM	512MB
IC782,783	General purpose logic	For generating CS signal
IC784	16M-FLASH	2MB
IC951	Line transceiver	RS422/TMC transceiver

COMPONENTS DESCRIPTION

Ref. No.	Application/Function	Operation/Condition/Compatibility
IC952	General purpose logic	For generation of TMC control signal
IC954~956	General purpose logic	For generation of TMC control signal
IC957	General purpose logic	For mute signal generation
T101	Transistor	Power ON/OFF control
T102	Power MOS FET	Power ON/OFF control
T103,104	Transistor with resistor	For T101&T102 control
T105,106	Transistor	DC/DC switching
T107,108	Power MOS FET	Power ON/OFF control
T109	Transistor with resistor	For delayed ACC control
T110,111	Transistor	DC/DC switching
T112,113	Transistor	For backup 3.3V power supply control
T305	Transistor array	For control navigation system voice mute
T306	Transistor array	For control LMUTE
T307	Transistor with resistor	For control beep volume
T309	Transistor with resistor	For control beep volume
T319	Transistor with resistor	For control T305

● DAUGHTER UNIT (X89-2622-71)

Ref. No.	Application/Function	Operation/Condition/Compatibility
IC1	Power supply IC	5V power supply for ACTIVE SP
IC2	AND gate	Buffer for TV communicatioin (TX/RX) signal
IC3	MIC amplifier	Isolation amplifier for external microphone
IC4	NAND gate	For switching remote control signal (TV/Remoto control sensor)
Q1,2	Driver	Mute driver
Q3	Buffer	TV SYNC signal buffer
Q4	Buffer	ACTIVE SP signal buffer
Q5	Mute switch	RCA (Voice) Rch mute switch
Q6	Mute switch	ASP (Voice) mute switch
Q7	Mute switch	RCA (Voice) Lch mute switch
Q8	Mute switch	TV (Voice) Lch mute switch
Q9	Mute switch	TV (Voice) Rch mute switch


MICROCOMPUTER'S TERMINAL DESCRIPTION

● MICROCOMPUTER : MB89935B (NAVI BOARD : IC106)

Pin No.	Pin Name	I/O	Function	Processing Operation Description
1	P04	O	FRES output	Lo : Flash ROM and CORE1 reset
2	P05	O	RES output	Lo : System reset
3	P06	O	NMI output	Interrupt output to CORE1
4	P07	I		Not used (Pull down to GND line)
5	MODE0	I	Mode input 0	Lo Fixed (Connect to GND Line)
6	MODE1	I	Mode input 1	Lo Fixed (Connect to GND Line)
7	RST#	I	Reset input	Lo : At the time when system is down and when panel reset SW is pressed
8	X0	-	Clock oscillator terminal	
9	X1	-	Clock oscillator terminal	
10	VSS	-	GND connection terminal	Connect to GND line
11	P37	O	P ON terminal	Hi : Turning power ON for SW's system power circuit
12	P36	I	WDP input	Detection of watchdog pulse from CORE1 Normal operation : Logic is reversed within 300ms
13	P35	I	ACC detection input	Hi : ACC ON
14	P34	I	BU detection input	Hi : BU ON
15	P33	I	SDRAM clock enable input	Lo : Self-refresh of SDRAM, Hi : Normal operation of SDRAM
16	C	-	C connection terminal	(0.1μF)
17	P32	I		Not used (Pull down to GND line)
18	P31	I	Delayed ACC input	Hi : CORE1 in operation and panel mechanism in operation when ACC is OFF
19	P30	O	ACC detection output	Hi : Power ON, Lo : Power OFF (Output to CORE1 and system computer)
20	P50	O	Backup operation complete notice	Hi : SDRAM CKE core in control, Lo : Backup processing complete
21	AVSS	-	GND connection terminal	Connect to GND line
22	P40	O	V33D switching output	Lo : Normal (ACC ON)
23	P41	O	V33D switching output	Lo : At the time of backup
24	P42	O	Mute output	Lo : Mute
25	P43	I	V33 monitor input	Lo : No Output
26	P00	I	VMAIN monitor input	Lo : No Output
27	P01	I	BU monitor input	Lo : No BU
28	P02	I	V50 output monitor input	Lo : No Output
29	P03	I	V80 output monitor input	Lo : No Output
30	VCC	-	Positive power supply terminal	Connect to 3.3V line backup

TEST MODE

Diagnostics (DIAG) Screen Flow Chart

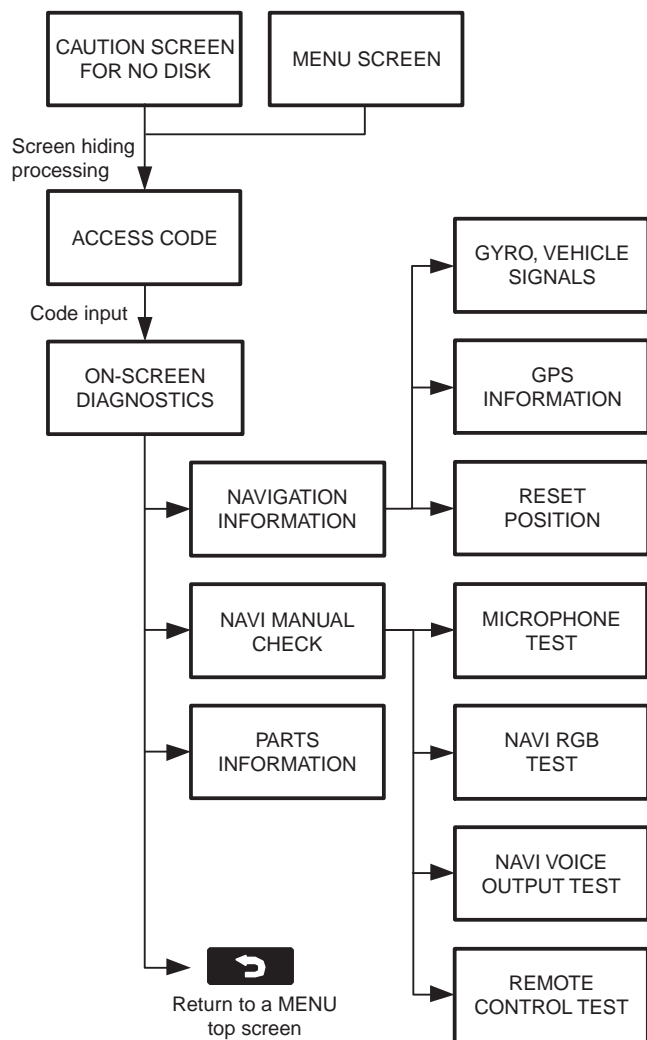

Moving to the Diagnostics (Diag) Screen

There are two ways to move to the input screen for the access code in order to move to the Diag screen. In other words, the access code input screen can be displayed from two different screens.


■ How to move to the Diag screen 1

Press the portion of the screen indicated below for 3 seconds or more when the Caution Screen for “No Map Disk” is displayed.

• How to move to the access code input screen using the remote controller

Press the right screen selection button for 5 seconds or more. (No.12 button on the remote control test screen specification)

Press for 5 seconds or more on the top center portion of the screen.

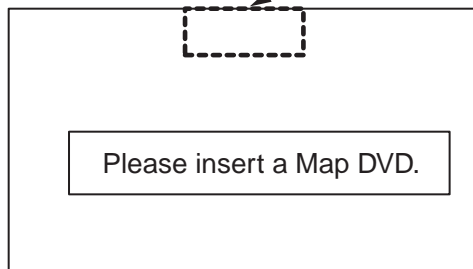

The screen contents are to follow the HMI specifications.


■ How to move to the Diag screen 2

Press for 5 seconds or more the position indicated below while the MENU screen is displayed.

• How to move to the access code input screen using the remote controller (Overseas Market Version)

Press the right screen selection button for 5 seconds or more. (No.12 button on the remote control test screen specification)

Press for 5 seconds or more on the top center portion of the screen.

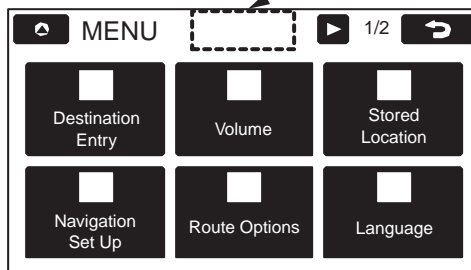

The screen contents are to follow the HMI specifications.

Recovery from the Diag Screen

Recovery from the Diag screen can be made using the Back switch.


TEST MODE

Screen Name : Access Code input screen

■ Functions outline

- This screen is displayed after Diag operation is conducted.
- Diag screen can be accessed by inputting the Diag PIN code in this screen.

■ Screen appearance

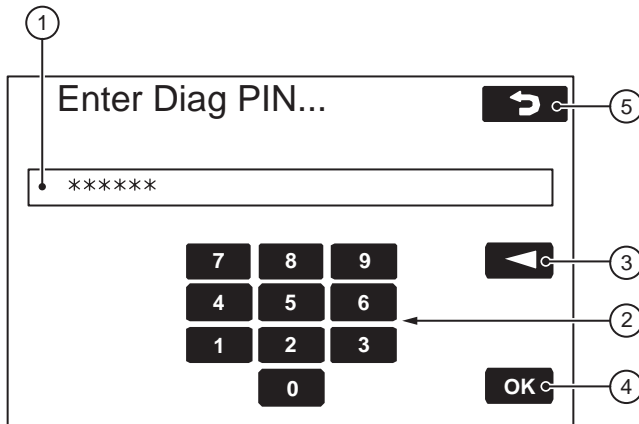

■ Display details

- ① Displays numbers input
 - The number of maximum input characters is 6.
 - The numbers input from the numeric pad is displayed by [*].
- ② Numeric key pad
 - When the maximum input characters are input, the numbers on the numeric key pad are tone-down displayed.
- ③ Back space key
 - When no input is made, the back space key is tone-down displayed.
- ④ OK button
 - When no input is made, the OK key is tone-down displayed.
 - The On-screen diagnostics screen is accessed when the appropriate code in the access level table is input.
 - If the code input is not appropriate, the previous screen to the On-screen diagnostics screen is displayed.
- ⑤ The screen returns to the previous screen to the On-screen diagnostics screen.

The Diag PIN code is defined as follows:


Diag PIN : 014220

Screen Name : On-screen diagnostics menu screen

■ Functions outline

- On-screen diagnostics screen : This is the screen to be displayed by Diag operation.
- Data is updated when the information to be displayed changes.

■ Screen appearance

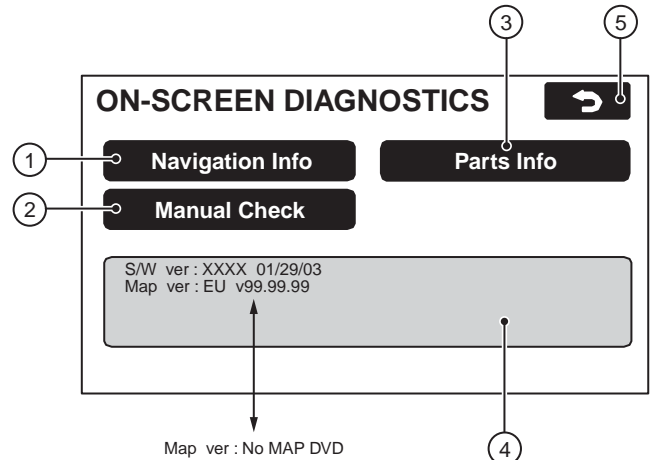


■ Display details

- ① The Navigation Information screen is accessed next.
- ② Then, the Manual Check screen is accessed.
- ③ The Parts Information screen is accessed.
- ④ Display of detailed information
 - The version and the release date of the navigation software are displayed.
The version of navigation software : Displayed in 4 digits.
The release date of the navigation software : Displayed in MM/DD/YY.
 - The area of the map disk and version are displayed.
The area of the map disk : The area of the maps on the disk is displayed.
The version of the map : Management Frame for all data, Data Volume, and Media Version are displayed. When it is considered that the map disk is not inserted, the following characters will be displayed. "No MAP DVD" (There will be no Area/Version display.)
- ⑤ On-screen diag is ended and the screen returns to normal operation screen. (The screen before accessing Diag screen is to be displayed.)

TEST MODE

Screen Name : NAVI Manual check screen

■ Screen appearance

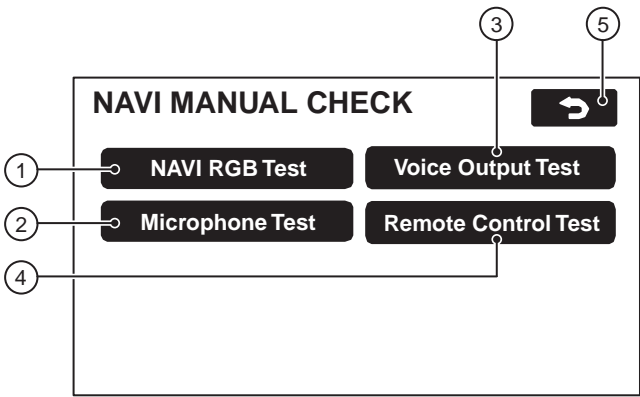

■ Display details


- ① The button is used to access the Navi RGB test screen.
- ② The button is used to access the Microphone test screen.
- ③ The button is used to access the Navi Voice output test screen.
- ④ The button is used to access the Remote Control test screen.
- ⑤ The button is used to return to the On-screen diagnostics screen.

Screen Name : Microphone inspection screen

■ Functions outline


- PTT connection conformation of the voice recognition microphone and microphone check.

■ Screen appearance

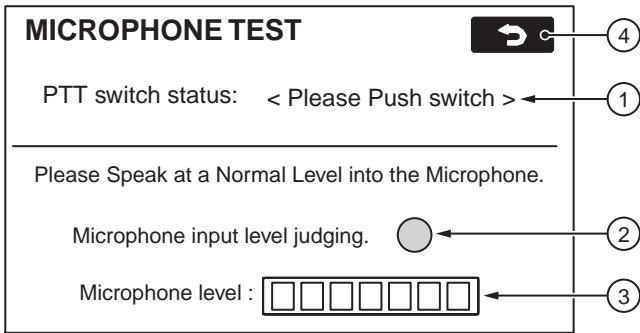

■ Display details

- ① The PTT connection check is conducted.
 - The appropriate character set is displayed under the following condition :
 - <OK> : When the PTT switch is pressed.
 - <Please Push switch> : Other than the above.
 - When <OK> is displayed, the condition is maintained. When a different screen is accessed, the condition is released.
- ② Test result indicator
 - Once this screen is accessed, the Navi system samples voice at all times and sampling results are reflected on the indicator.
 - After sampling a voice in A/D, the system compares it with the threshold value with the maximum of 500ms delay. Then, the system makes the following displays
 - : Makes displays in blue if the value is greater than the threshold value.
 - : Makes displays in grey if the value is smaller than the threshold value.
- ③ The input level of the microphone is sampled every 200ms and the results are displayed on 8 levels. The display update timing for the input level is 400ms.

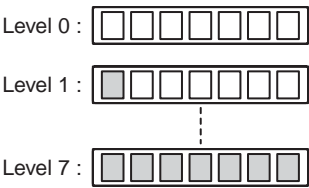

- ④ When terminated, the screen goes back to the NAVI Manual check screen.


TEST MODE

Screen Name : NAVI RGB test screen

■ Functions outline

- This is the screen for testing the NAVI color display.

■ Screen appearance

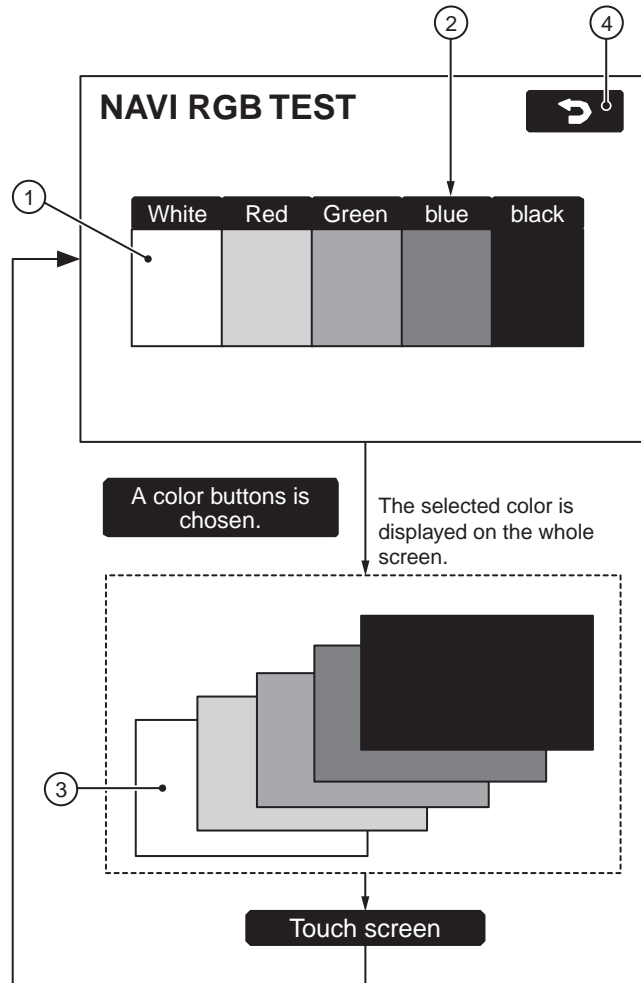

■ Display details


- ① Color bar
 - Bar display for the following colors : white, red, green, blue and black.
- ② Selection button
 - When a button corresponding to a color is pressed, the selected color is displayed on the whole screen.
- ③ Whole screen display
 - The selected color is displayed on the whole screen.
 - When other parts of the screen is pressed, the screen goes back to the RGB test screen.
- ④ When terminated, the screen goes back to the NAVI Manual check screen.

Screen Name : NAVI Voice Output test screen

■ Functions outline

- In this screen, the ADPCM output is tested.

■ Screen appearance

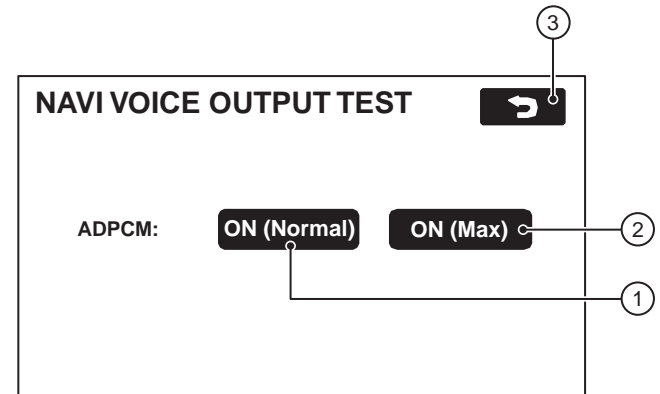

■ Display details

- ① and ② are ADPCM voice test buttons.
 - The following ADPCM voices (sine wave of 1kHz/maximum since wave of 1kHz) are output for five seconds.
 NORMAL (①) Voice ID : 00020015
 MAX (②) Voice ID : 00020014
 However, if no map disk is not inserted, the ADPCM voices are not output.
- ③ When terminated, the screen goes back to the NAVI Manual check screen.
- In this screen, the beep is not sounded when q and w buttons are pressed.



TEST MODE

Screen Name : Remote control test screen

■ Functions outline

- In this screen, remote control buttons are tested.

■ Screen appearance

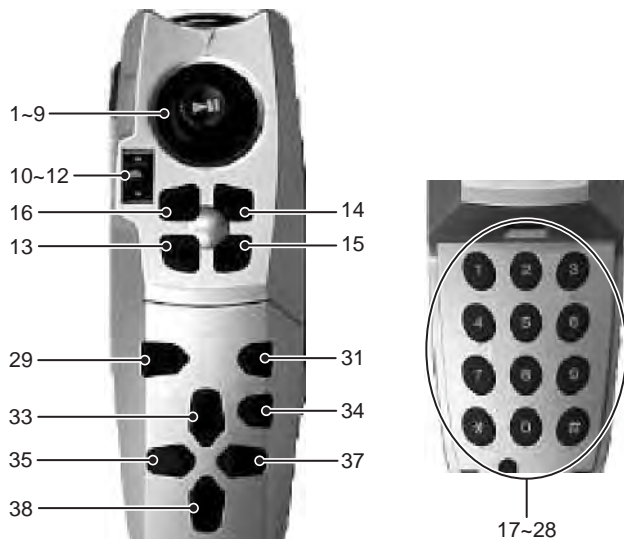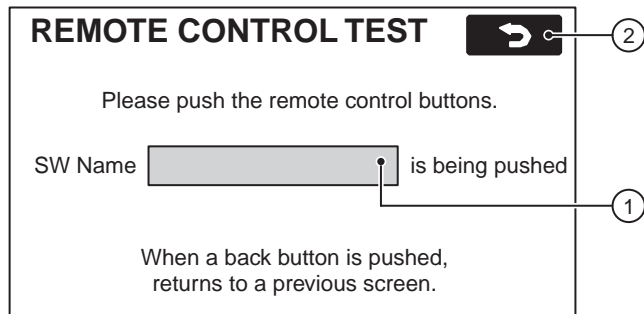

■ Display details

① Names of button switches

- When a remote control button switch is pressed, the name of the button is displayed within the frame. (Please refer to the definition for the button names in the table right.)
- When this screen is first accessed, the display frame will be blank. When the button is pressed and while it is depressed, the corresponding button name will be displayed. When the button is released, the display disappears. (Blank)
- When the cancel button is pressed, the switch name will not be displayed and the screen goes back to the NAVI Manual Check screen.
- When a remote control button is pressed, a beep sounds.
- ② The screen goes back to the NAVI Manual Check screen.

■ Definitions of the Button Names

The table below is the correspondence table between the remote control silk names and displayed names on the diag screen. For detail, refer to the Car Navigation System Remote Control Software specifications.

No.	ID	Function	Display Name
1	4A	0° (Up)	UP
2	4B	45° (Upper right)	UPPER RIGHT
3	4C	90° (Right)	RIGHT
4	4D	135° (Lower right)	LOWER RIGHT
5	4E	180° (Down)	DOWN
6	4F	225° (Lower left)	LOWER LEFT
7	50	270° (Left)	LEFT
8	51	315° (Upper left)	UPPER LEFT
9	5A	ENT	ENT
10	82	Λ	ZOOM OUT
11	83	V	ZOOM IN
12	16	Right screen select	RIGHT SELECT
13	84	Position	POSITION
14	5D	Menu	MENU
15	80	Route	ROUTE
16	D6	Cancel	CANCEL
17	41	1	1
18	42	2 (ABC)	2
19	43	3 (DEF)	3
20	44	4 (GHI)	4
21	45	5 (JKL)	5
22	46	6 (MNO)	6
23	47	7 (PQRS)	7
24	48	8 (TUV)	8
25	49	9 (WXYZ)	9
26	40	0 (Space)	0
27	10	* (+)	*
28	CB	# (BS)	#
29	17	Voice	VOICE
31	C1	Short cut 1	SHORT CUT 1
33	D9	↑ List	UP LIST
34	C2	Shot cut 2	SHORT CUT 2
35	DA	← Text	LEFT TEXT
37	DC	→ Text	RIGHT TEXT
38	DD	↓ List	DOWN LIST

No. 1~16 : Not related to whether the cover is open or closed.


No. 17~28 : Cover open

No. 29~40 : Cover closed

TEST MODE

Screen Name : Navigation information screen

■ Screen appearance

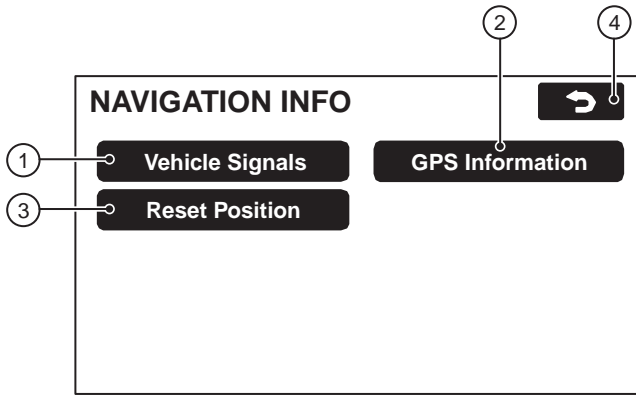

■ Display details


- ① VEHICLE/GYRO/SIGNALS screen is accessed.
- ② GPS information screen is accessed.
- ③ Reset Position screen is accessed.
- ④ The screen returns to the On-screen diagnostics screen.

Screen Name : Vehicle signals screen

■ Functions outline

- In this screen, the vehicle signals input to the Navi ECU are checked.
- The data is updated when the information changes.

■ Screen appearance

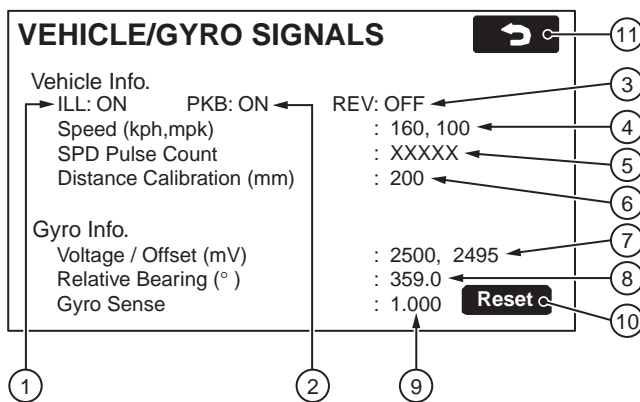

■ Display details

- ① When ILL signal is displayed :
 - The condition of the PARK LAMP is displayed as : ON/OFF.
- ② When PKB signal is displayed :
 - The condition of the parking brake signal is displayed as : ON/OFF
- ③ When REV signal is displayed :
 - The condition of the REV signal is displayed as : ON/OFF.
- ④ Vehicle speed condition
 - The vehicle speed is displayed in kph/mph.
The speed is displayed in maximum of 3 digits in LSB 1.
- ⑤ The count value of the SPD pulses is displayed. (The time of access to the screen is set to 0. The count is displayed in maximum of 5 digits in LSB 1 with the maximum of 65535 and when this is exceeded, the value is counted again from 0.)
- ⑥ Distance adjustment information
 - The obtained value is displayed.
The value is displayed in maximum of 3 digits in LSB 1.
- ⑦, ⑧, ⑨ Gyro signal display
 - Gyro output voltage value is displayed in mV.
The value is displayed in maximum of 4 digits in LSB with 1mV as the unit.
 - Gyro output voltage value (left) and adjusted reference voltage (right) are displayed in mV.
The value is displayed in maximum of 4 digits in LSB with 1mV as the unit.
 - The relative direction is displayed. (The time when the Navi system is activated is set to 0.)
The value is displayed in maximum of 4 digits in LSB with 0.1 degree as the unit.
 - The obtained value for the gyro sensitivity is displayed.
The value is displayed in maximum of 4 digits in LSB with 0.011 as the unit.
- ⑩ Reset button for the gyro sensitivity obtained value
 - This button is for resetting the gyro sensitivity obtained value.
- ⑪ The screen returns to the Navigation Information screen.


TEST MODE

Screen Name : GPS information screen

■ Functions outline

- This screen displays GPS-related information.
- The data is updated when the information displayed changes.

■ Screen appearance

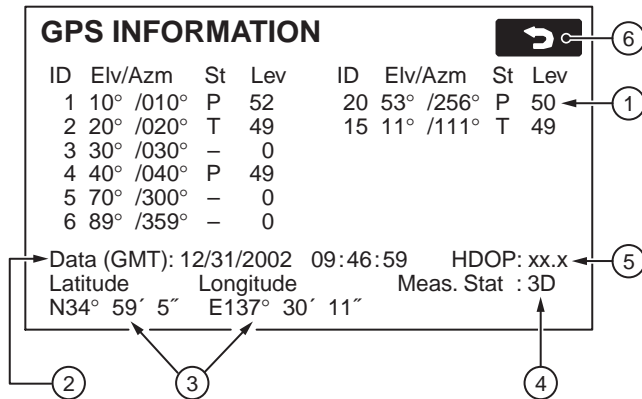

■ Display details

① Satellite information

- The following information on the satellite as the search object is displayed : satellite number (ID); an angle of elevation (Elv); azimuth reading (Azm); signal level (Lev) and reception state (St).
- The display areas are secured for the maximum of 8 satellites.
- For the reception state, the appropriate letter is displayed depending on the state.
[P] : When the satellite in question is used for positioning.
[T] : When the satellite in question is spotted but not used for positioning.
[-] : When the satellite in question is spotted yet.

② Date and time information

- The date and time information obtained from the GPS receiver is displayed in : month; day; year; hour; minute; and second.

③ Position information

- The current latitude and longitude are displayed in : sign, degree, minute, and second.
As for the sign, appropriate letter is displayed according to the conditions that apply.
[N] : When the latitude is judged to be north latitude.
[S] : When the latitude is judged to be south latitude.
[W] : When the longitude is judged to be west longitude.
[E] : When the longitude is judged to be east longitude.

④ Positioning condition information

- Positioning conditions are described in the following five conditions :

[2D] : When positioning is made on two dimensions.

[3D] : When positioning is made on three dimensions.

[NG] : When positioning is not possible..

[error] : When reception error takes place.

[-] : When conditions other than the above occur.

⑤ HDOP

- The HDOP value at the time of positioning (accuracy value in the horizontal direction) is displayed in numbers.

LSB 01 display areas: 0.0~99.9

When exceeding 99.9 and when positioning is not conducted, [-] is displayed.


- ⑥ The screen returns to the Navigation Information screen.

Screen Name : Adjust position screen

■ Functions outline

- This is the function for adjusting the position to the default coordinate that is registered on the map disk.

■ Screen appearance

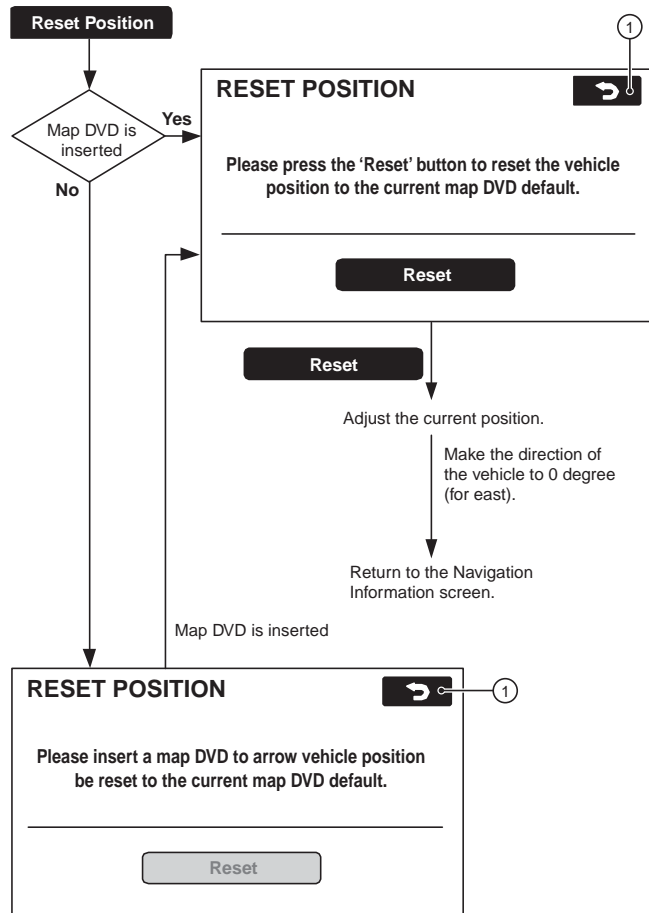

■ Display details

- ① The screen returns to the Navigation Information screen.


TEST MODE

Screen Name : Parts information screen

■ Functions outline

- Displays the conditions of the parts comprising the navigation system.
- Displays the map software version of the navigation system.
- The data updates are conducted when the information changes.

■ Screen appearance

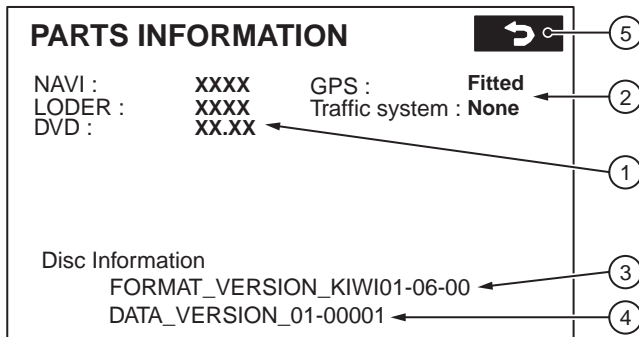


■ Display details

- ① Displays the map software version of the software that comprise navigation system.
- NAVI : Displays the software version of the software that comprise navigation system.
- LODER : Displays the kanji ROM version.
- DVD : Displays the revision level of the DVD player.
- ② Displays the conditions of the devices that comprise the navigation system.
- GPS: The connection condition of the GPS system is displayed by appropriate character sets that corresponds to the condition :
 [Fitted] : GPS antenna is connected.
 [None] : Conditions other than the above.
- The type of traffic congestion information service is displayed by appropriate character sets that corresponds to the condition :
 [TMC] : When a TMC tuner is connected.
 [None] : Conditions other than the above.
- ③ Format version number
- Displays the data stored in the "Format Version Number" item in the "Control Frame Data Volume for all data" on the disk.
- ④ Data Version Number
- Displays the data stored in the "Data Version Number" item in the "Control Frame Data Volume for all data" on the disk.
- ⑤ The screen returns to the On-screen diagnostics screen.


KNA-DV3100/DV3200

PC BOARD (COMPONENT SIDE VIEW)



NAVI BOARD (W02-3395-15)

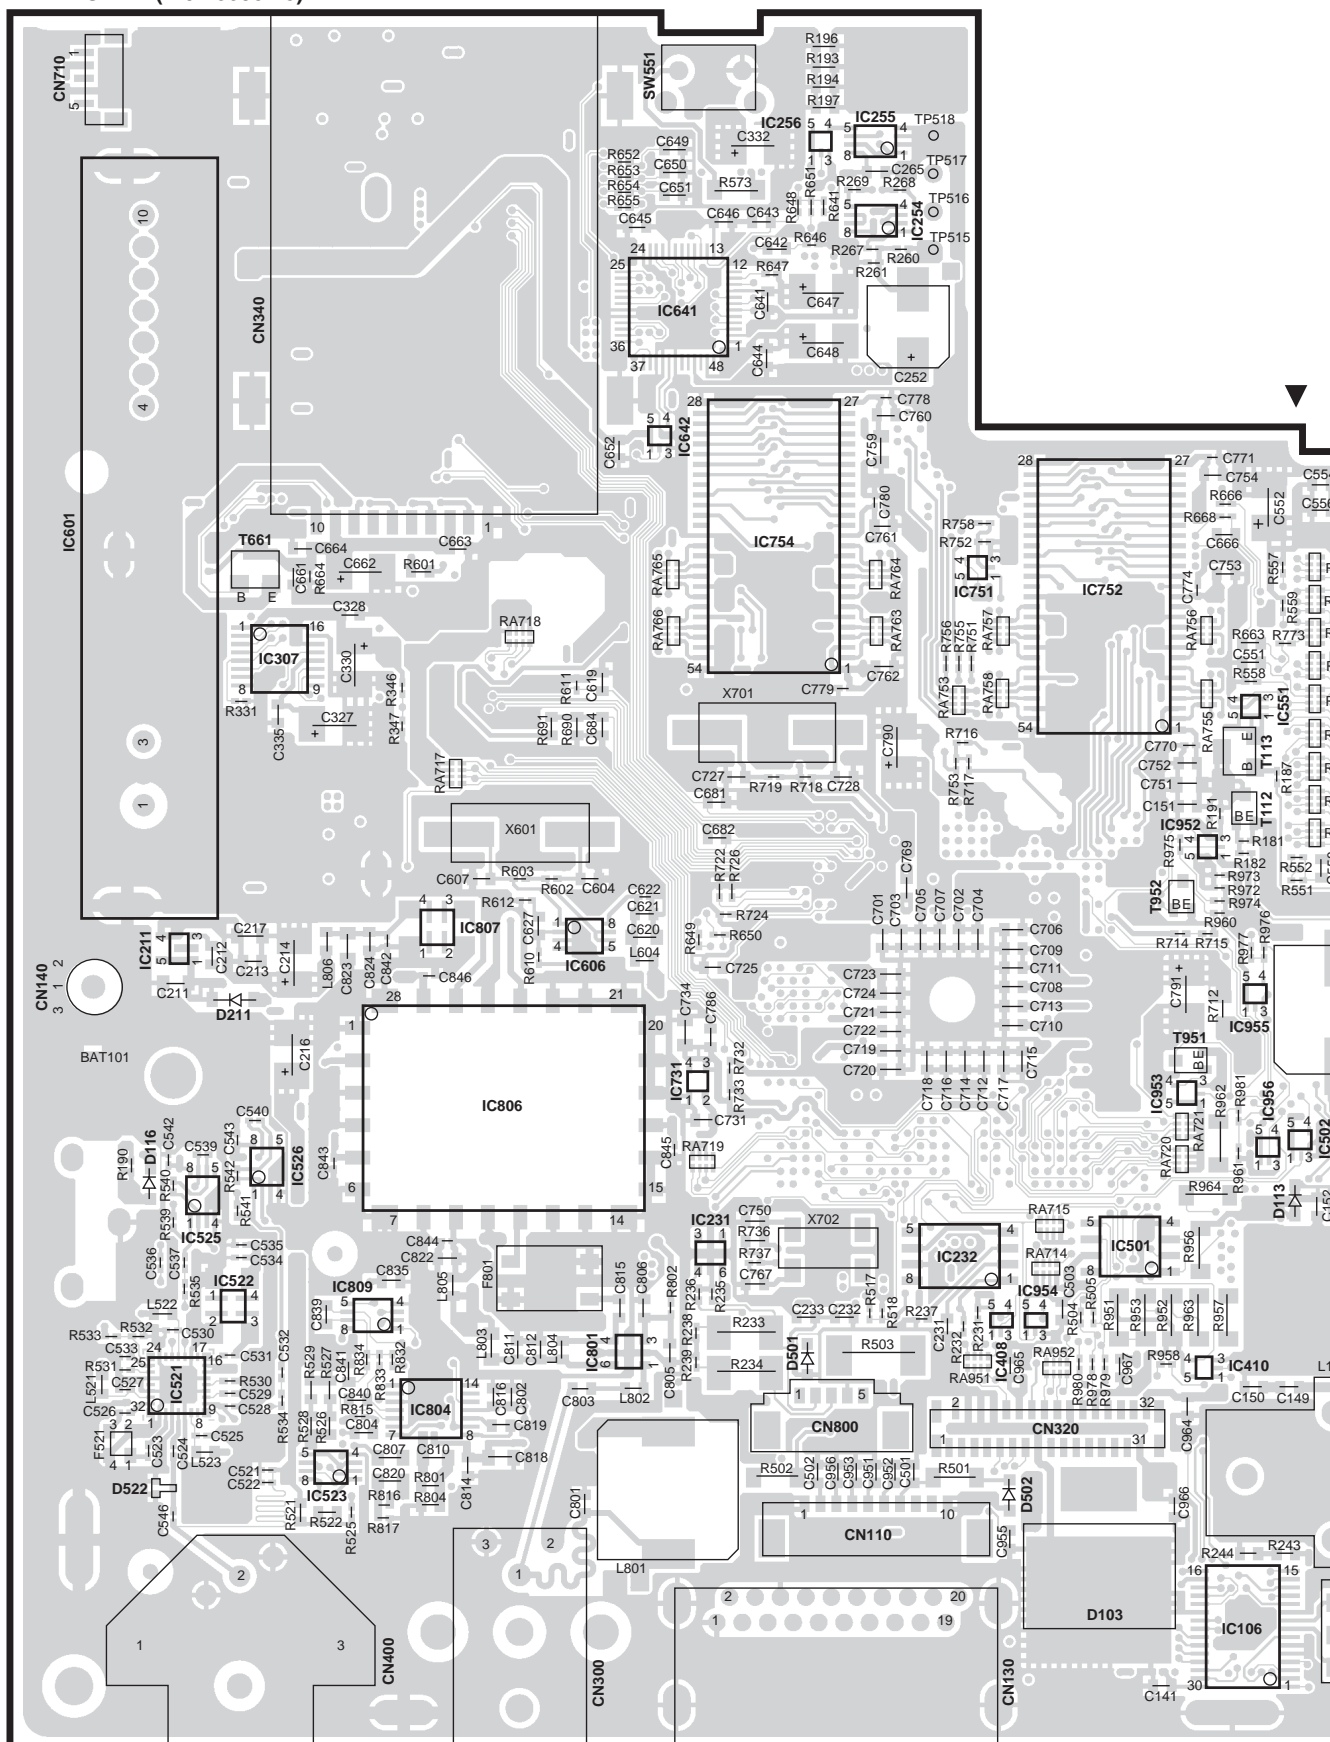

SWITCH UNIT **X25-9742-71 A/2 (J74-1507-22)**

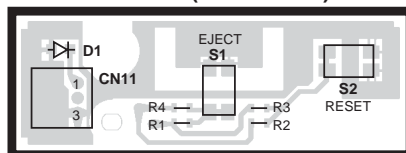

X25 B/2

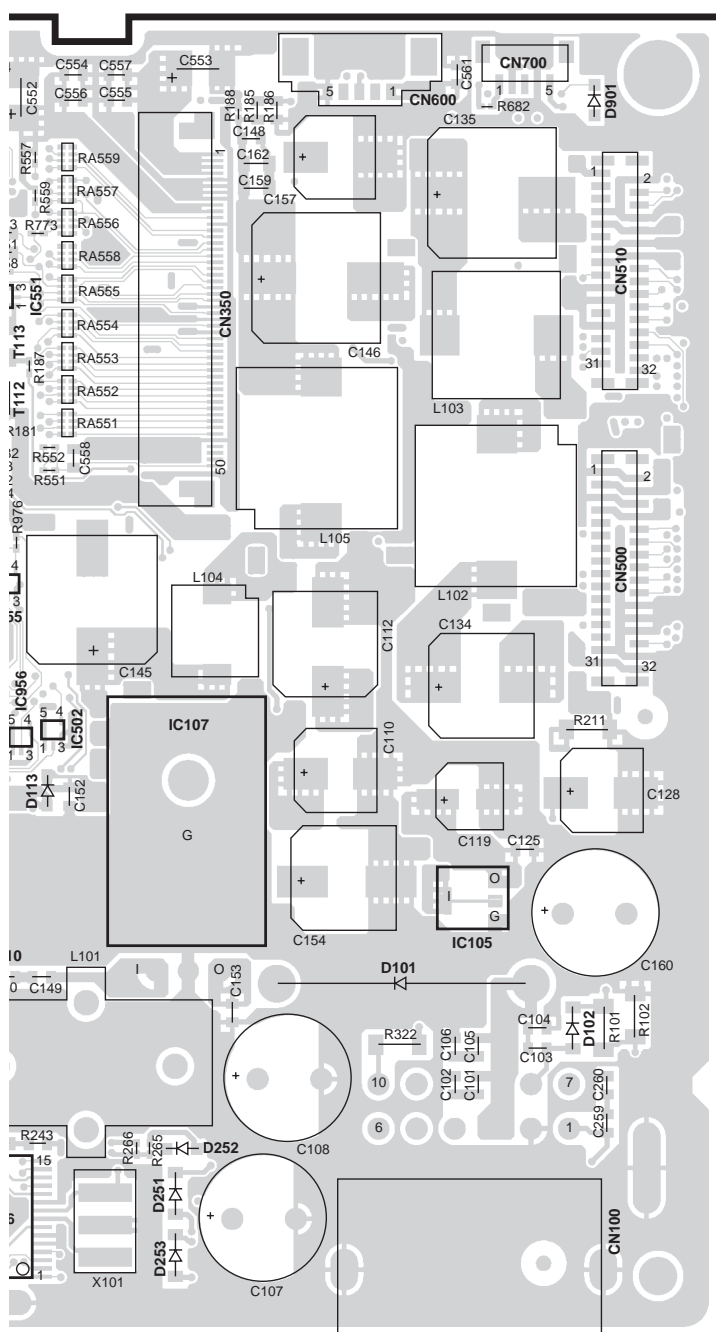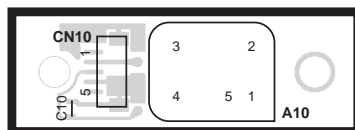

NAVI BOARD



IC	T	Address
105		6G
106		7E
107		5F
254		2D
255		2D
256		2D
502		5F
521		6B
522		6B
523		6B
525		5B
526		5B
551		4E
641		2C
642		3C
731		5C
751		3D
752		3E
754		3D
952		4E
954		6E
955		5E
956		5E
	112	4E
	113	4E


Refer to the schematic diagram for the values of resistors and capacitors.

X25-9742-71 A/2 (J74-1507-22)



X25 B/2

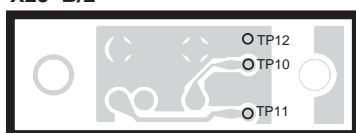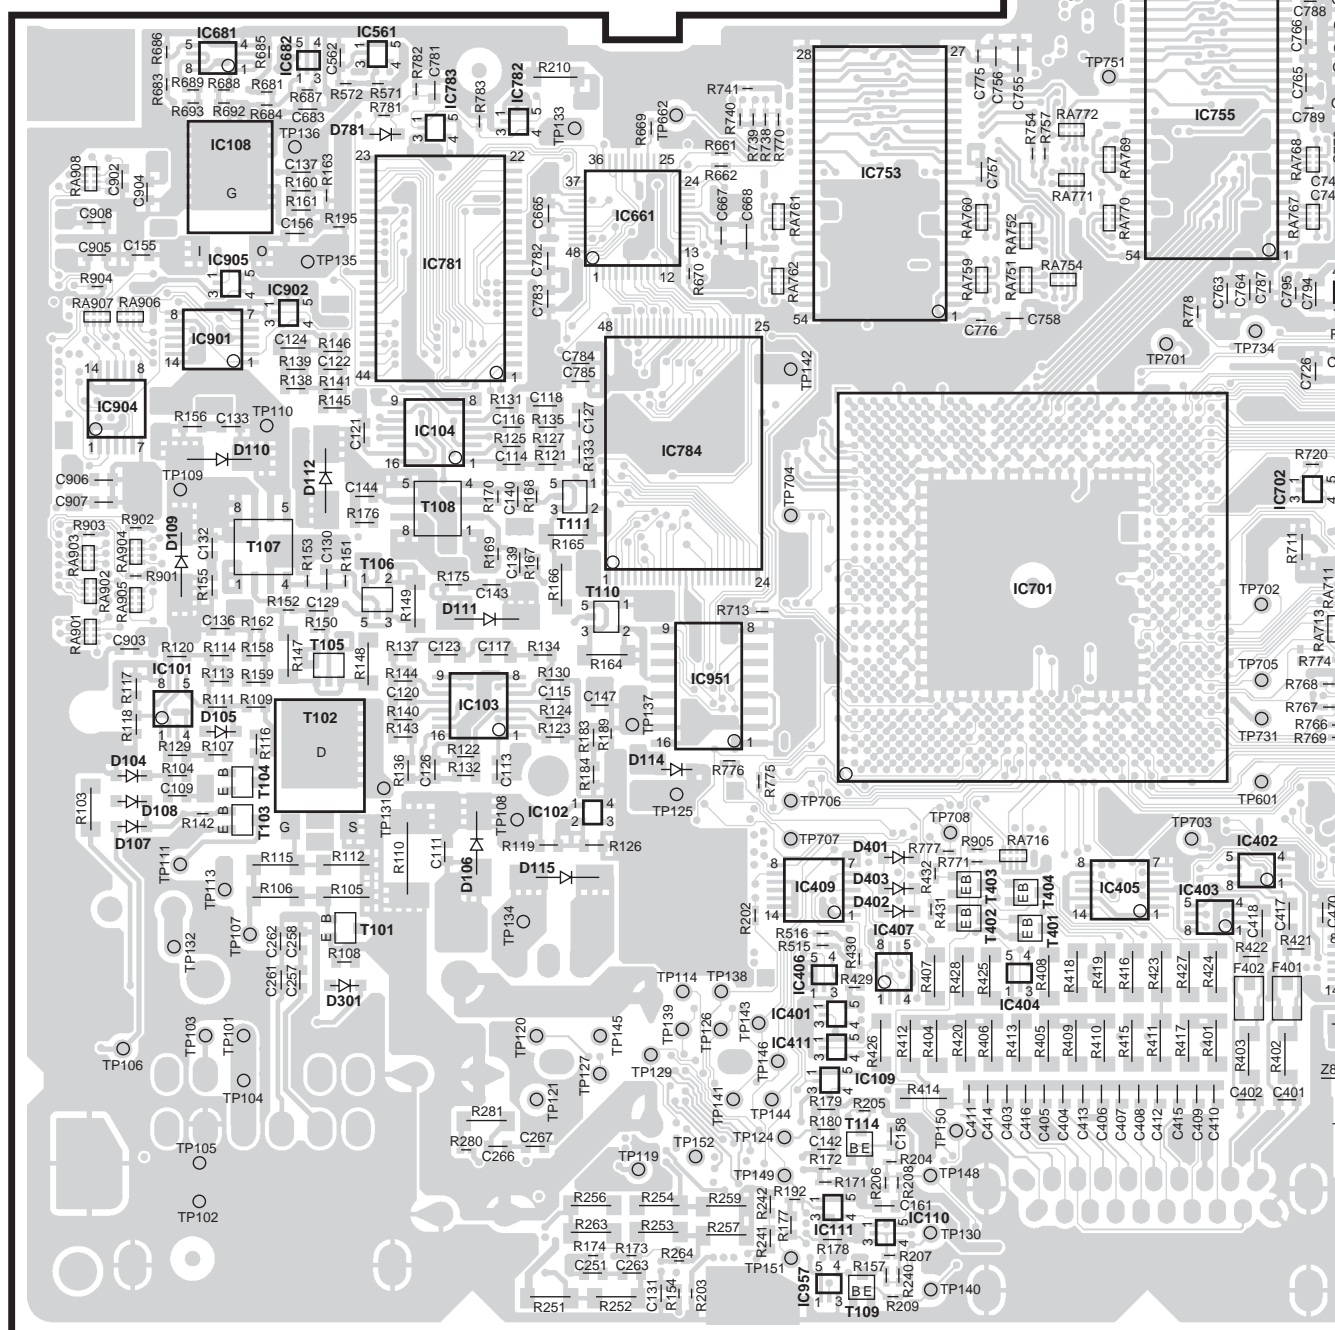**NAVI BOARD (W02-3395-15)**

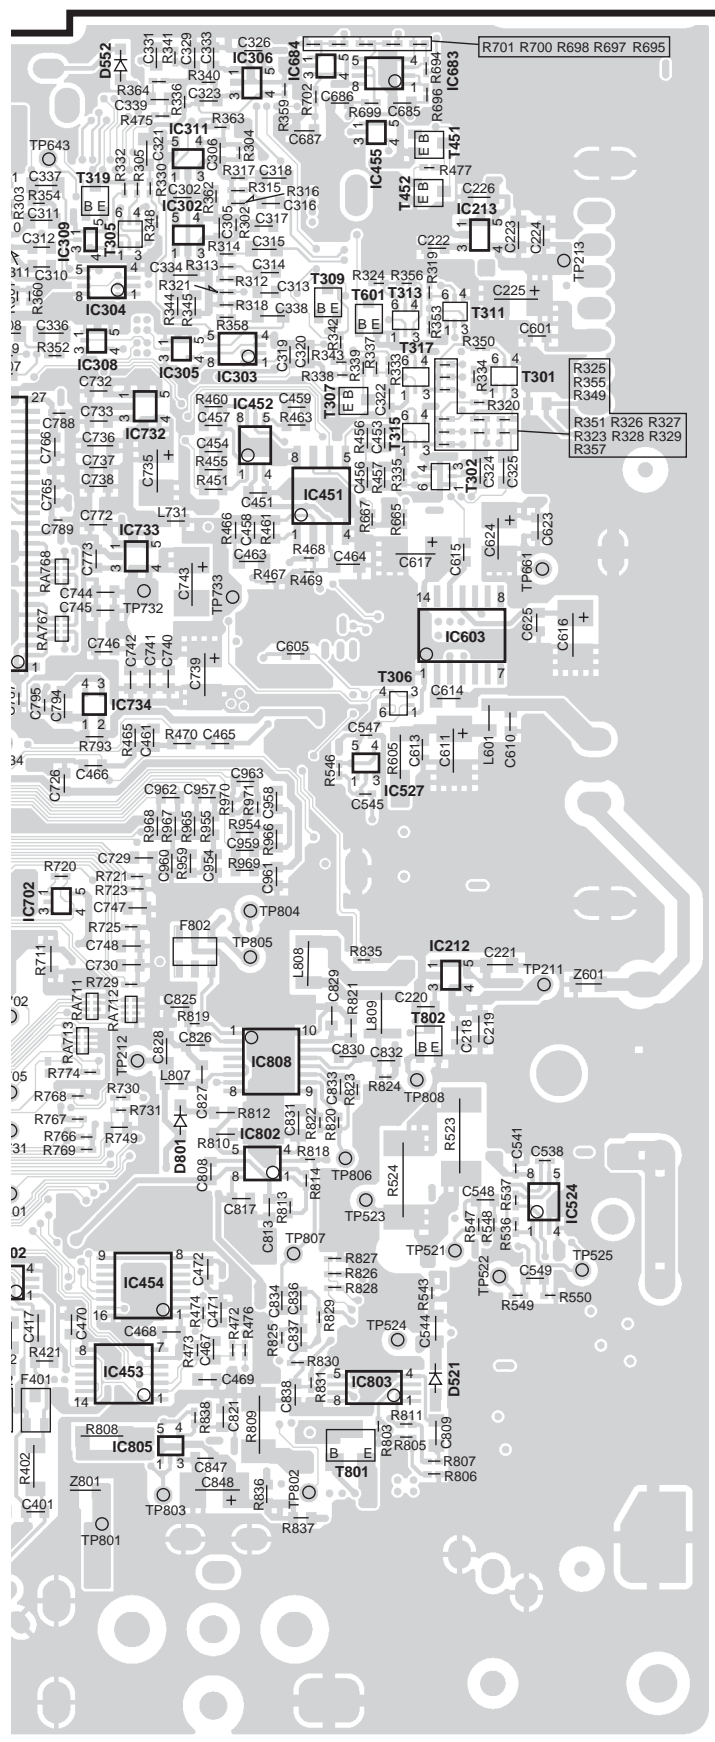


NAVI BOARD

IC	T	Address
101		5L
102		5M
103		5M
104		4L
108		3L
109		6N
111		7N
212		4Q
251		2O
301		2O
306		2P
309		2P
310		2O
524		5Q
561		3L
684		2P
701		5N
732		3P
733		3P
734		4P
753		3N
755		3O
781		4L
782		3M
783		3L
784		4M
951		5M
957		7N
101		6L
102		5L
103		5L
104		5L
105		5L
106		5L
107		5L
108		4L
109		7N
110		5M
111		4M
305		2P
306		4Q
307		3Q
309		2Q
319		2P

Refer to the schematic diagram for the values of resistors and capacitors.

PC BOARD (COMPONENT SIDE VIEW)

DAUGHTER UNIT
X89-2622-71 (J74-1508-22)

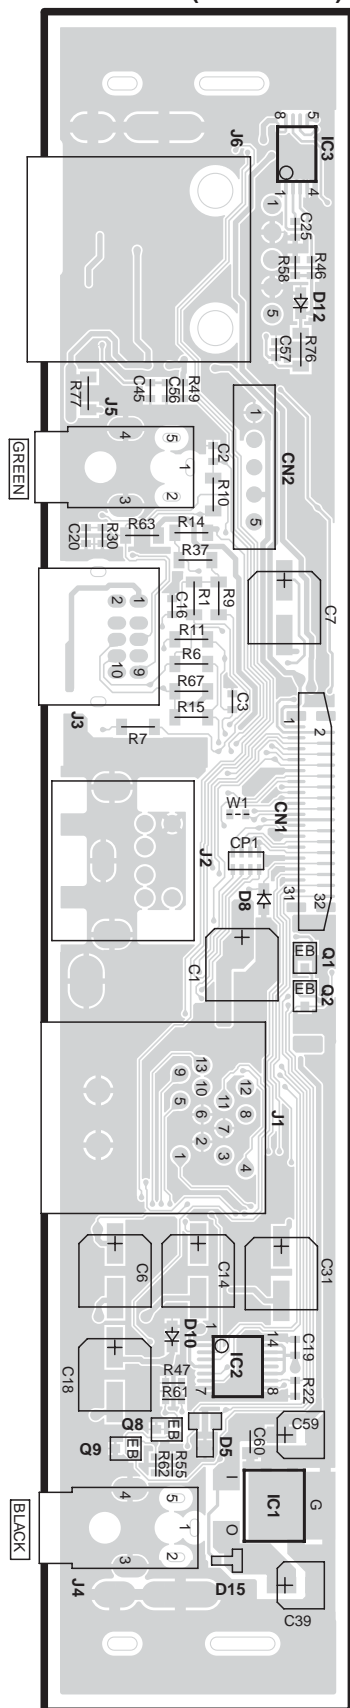


X89-2622-71

IC	Q	Address
1		6V
2		6V
3		2V
	1	5V
	2	5V
	8	6U

(FOIL SIDE VIEW)

DAUGHTER UNIT
X89-2622-71 (J74-1508-22)

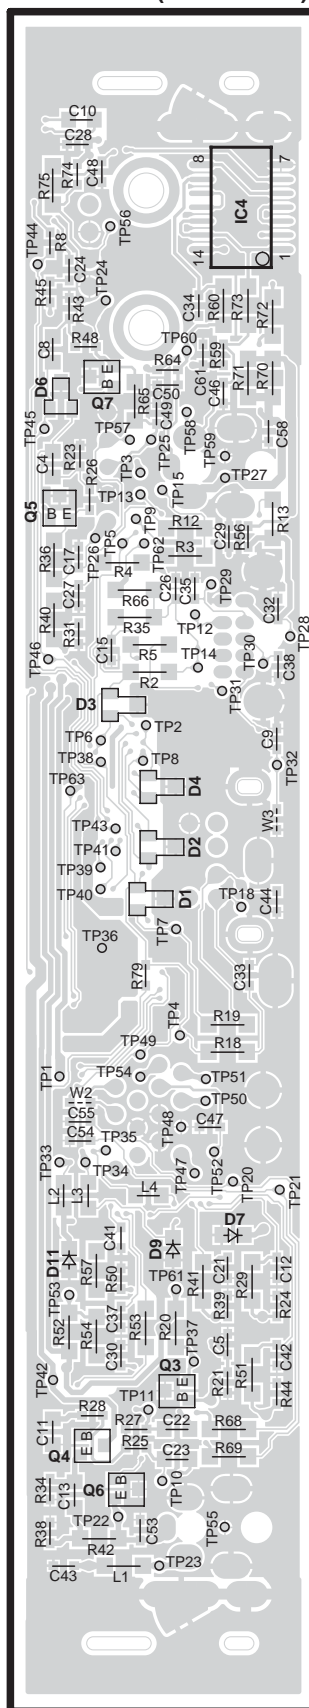



X89-2622-71

IC	Q	Address
4		2X
	3	6X
	4	6X
	6	6X
	7	3X

Refer to the schematic diagram for the values of resistors and capacitors.



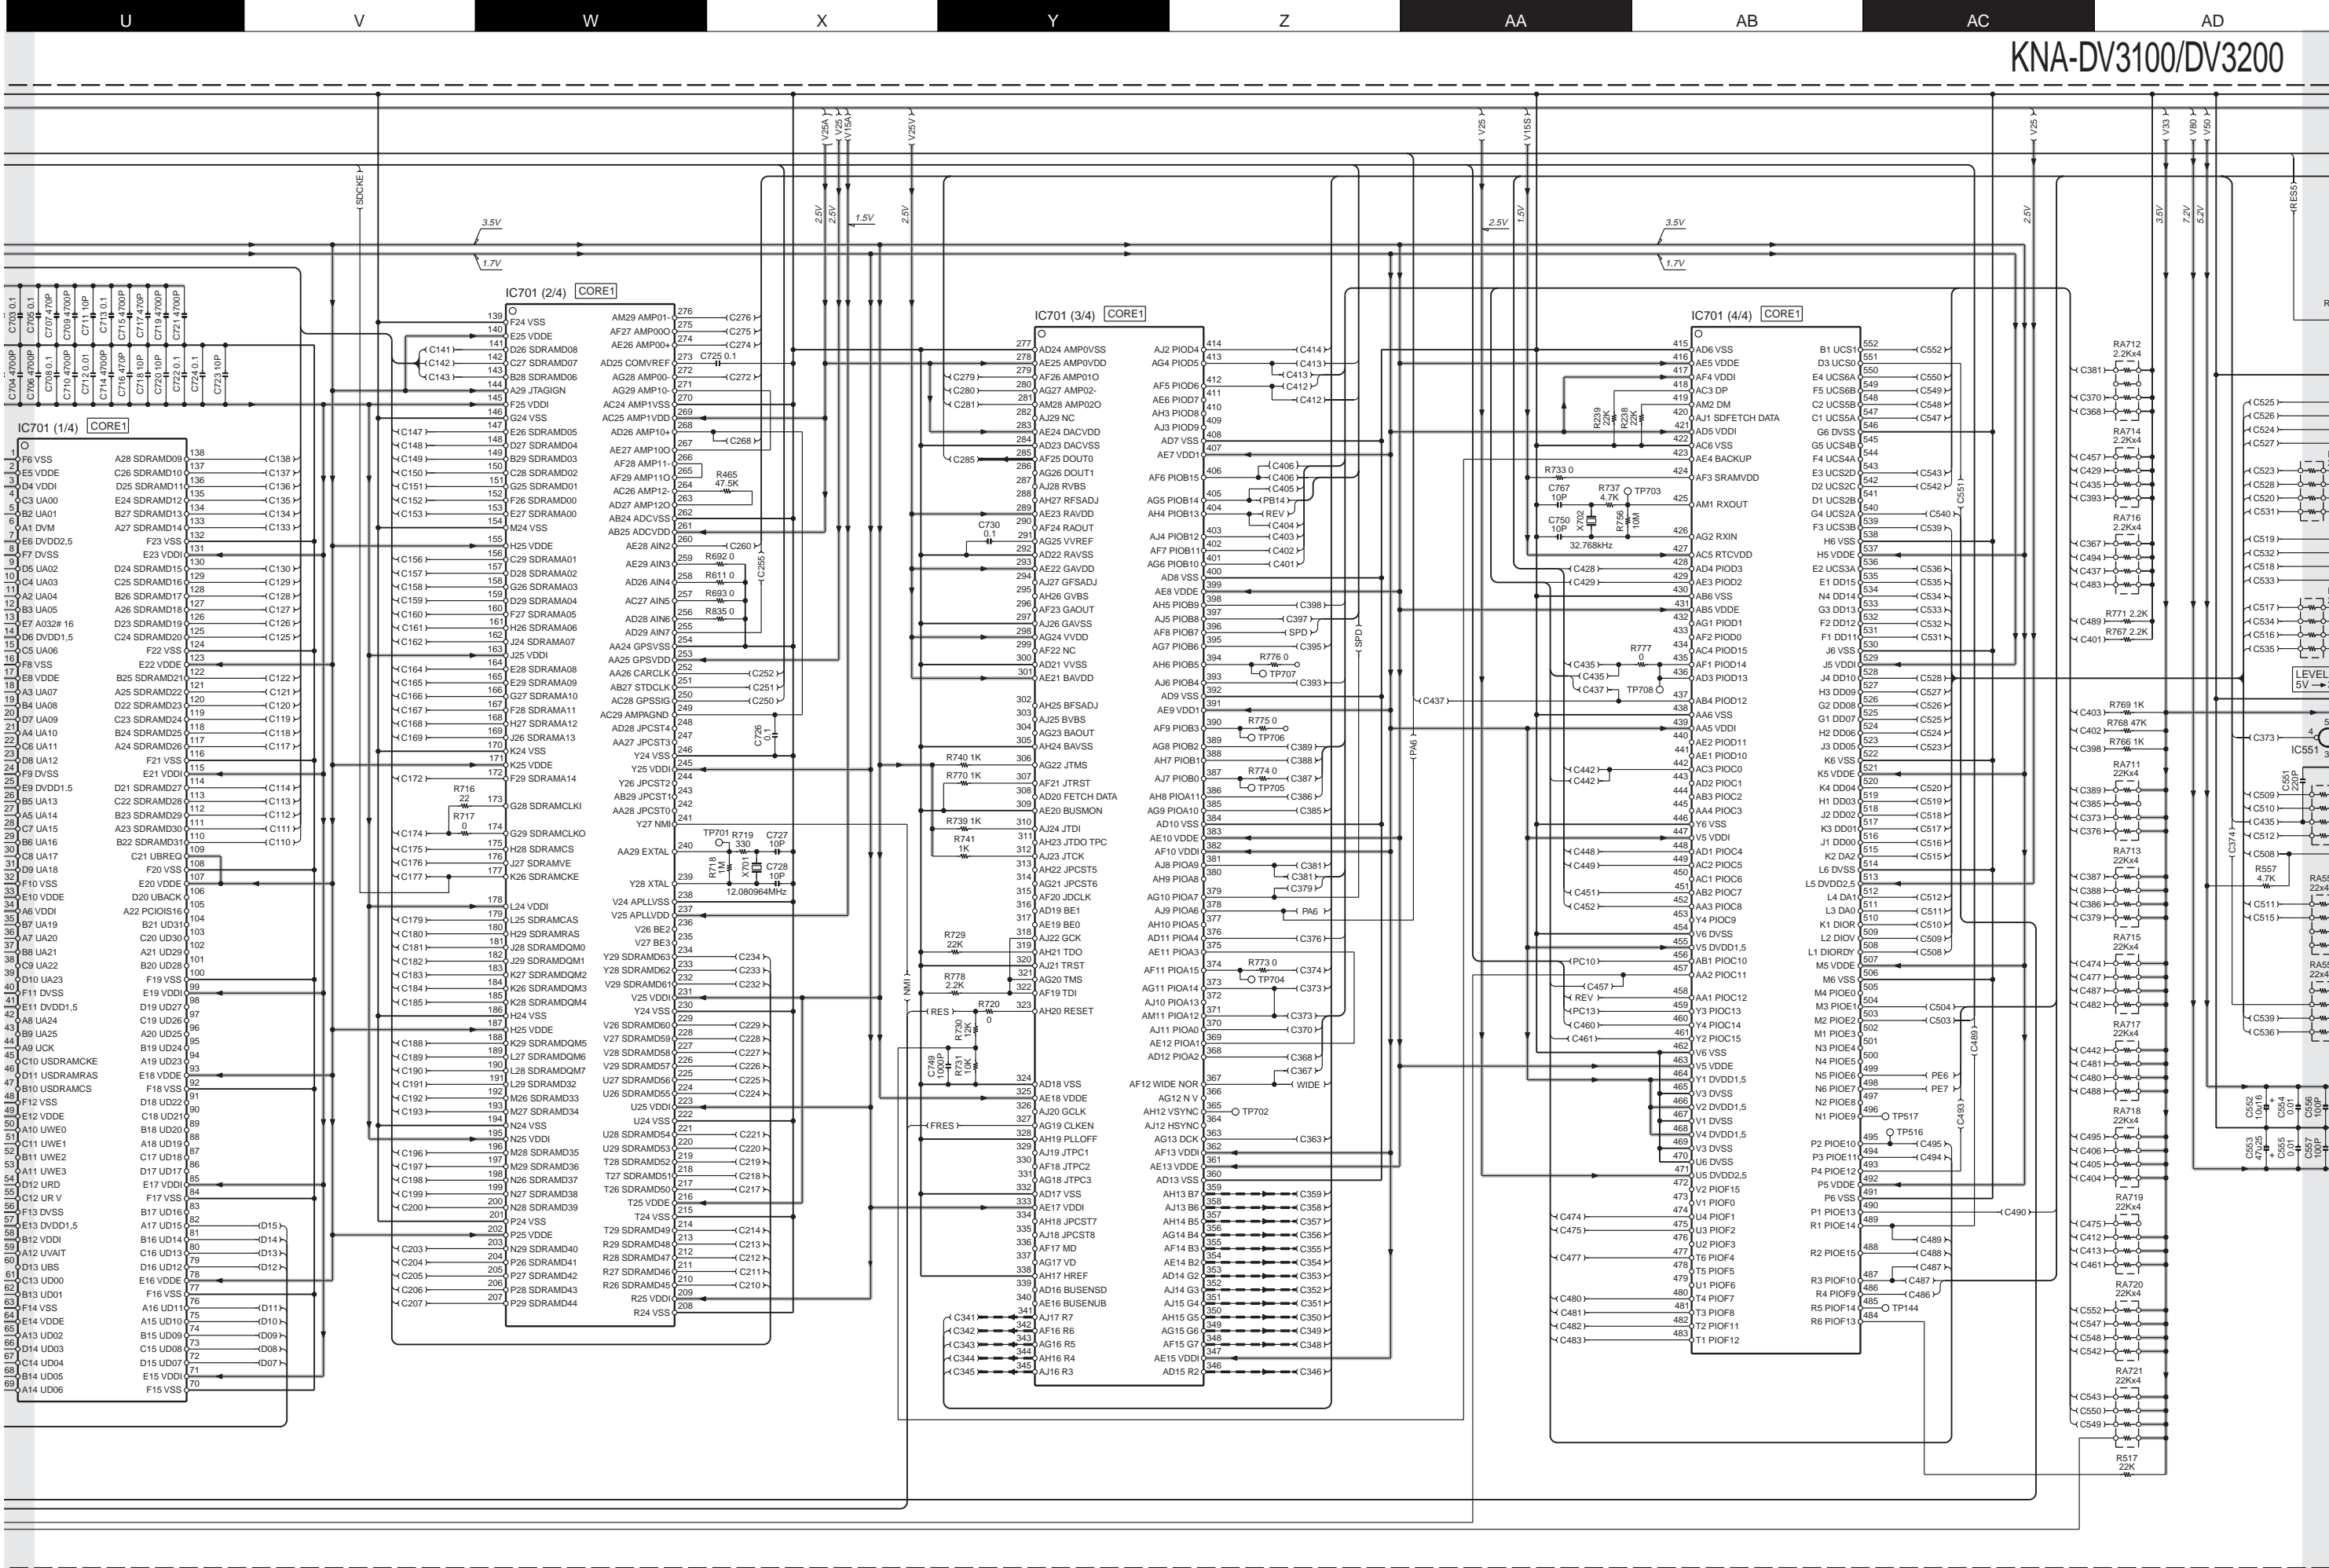

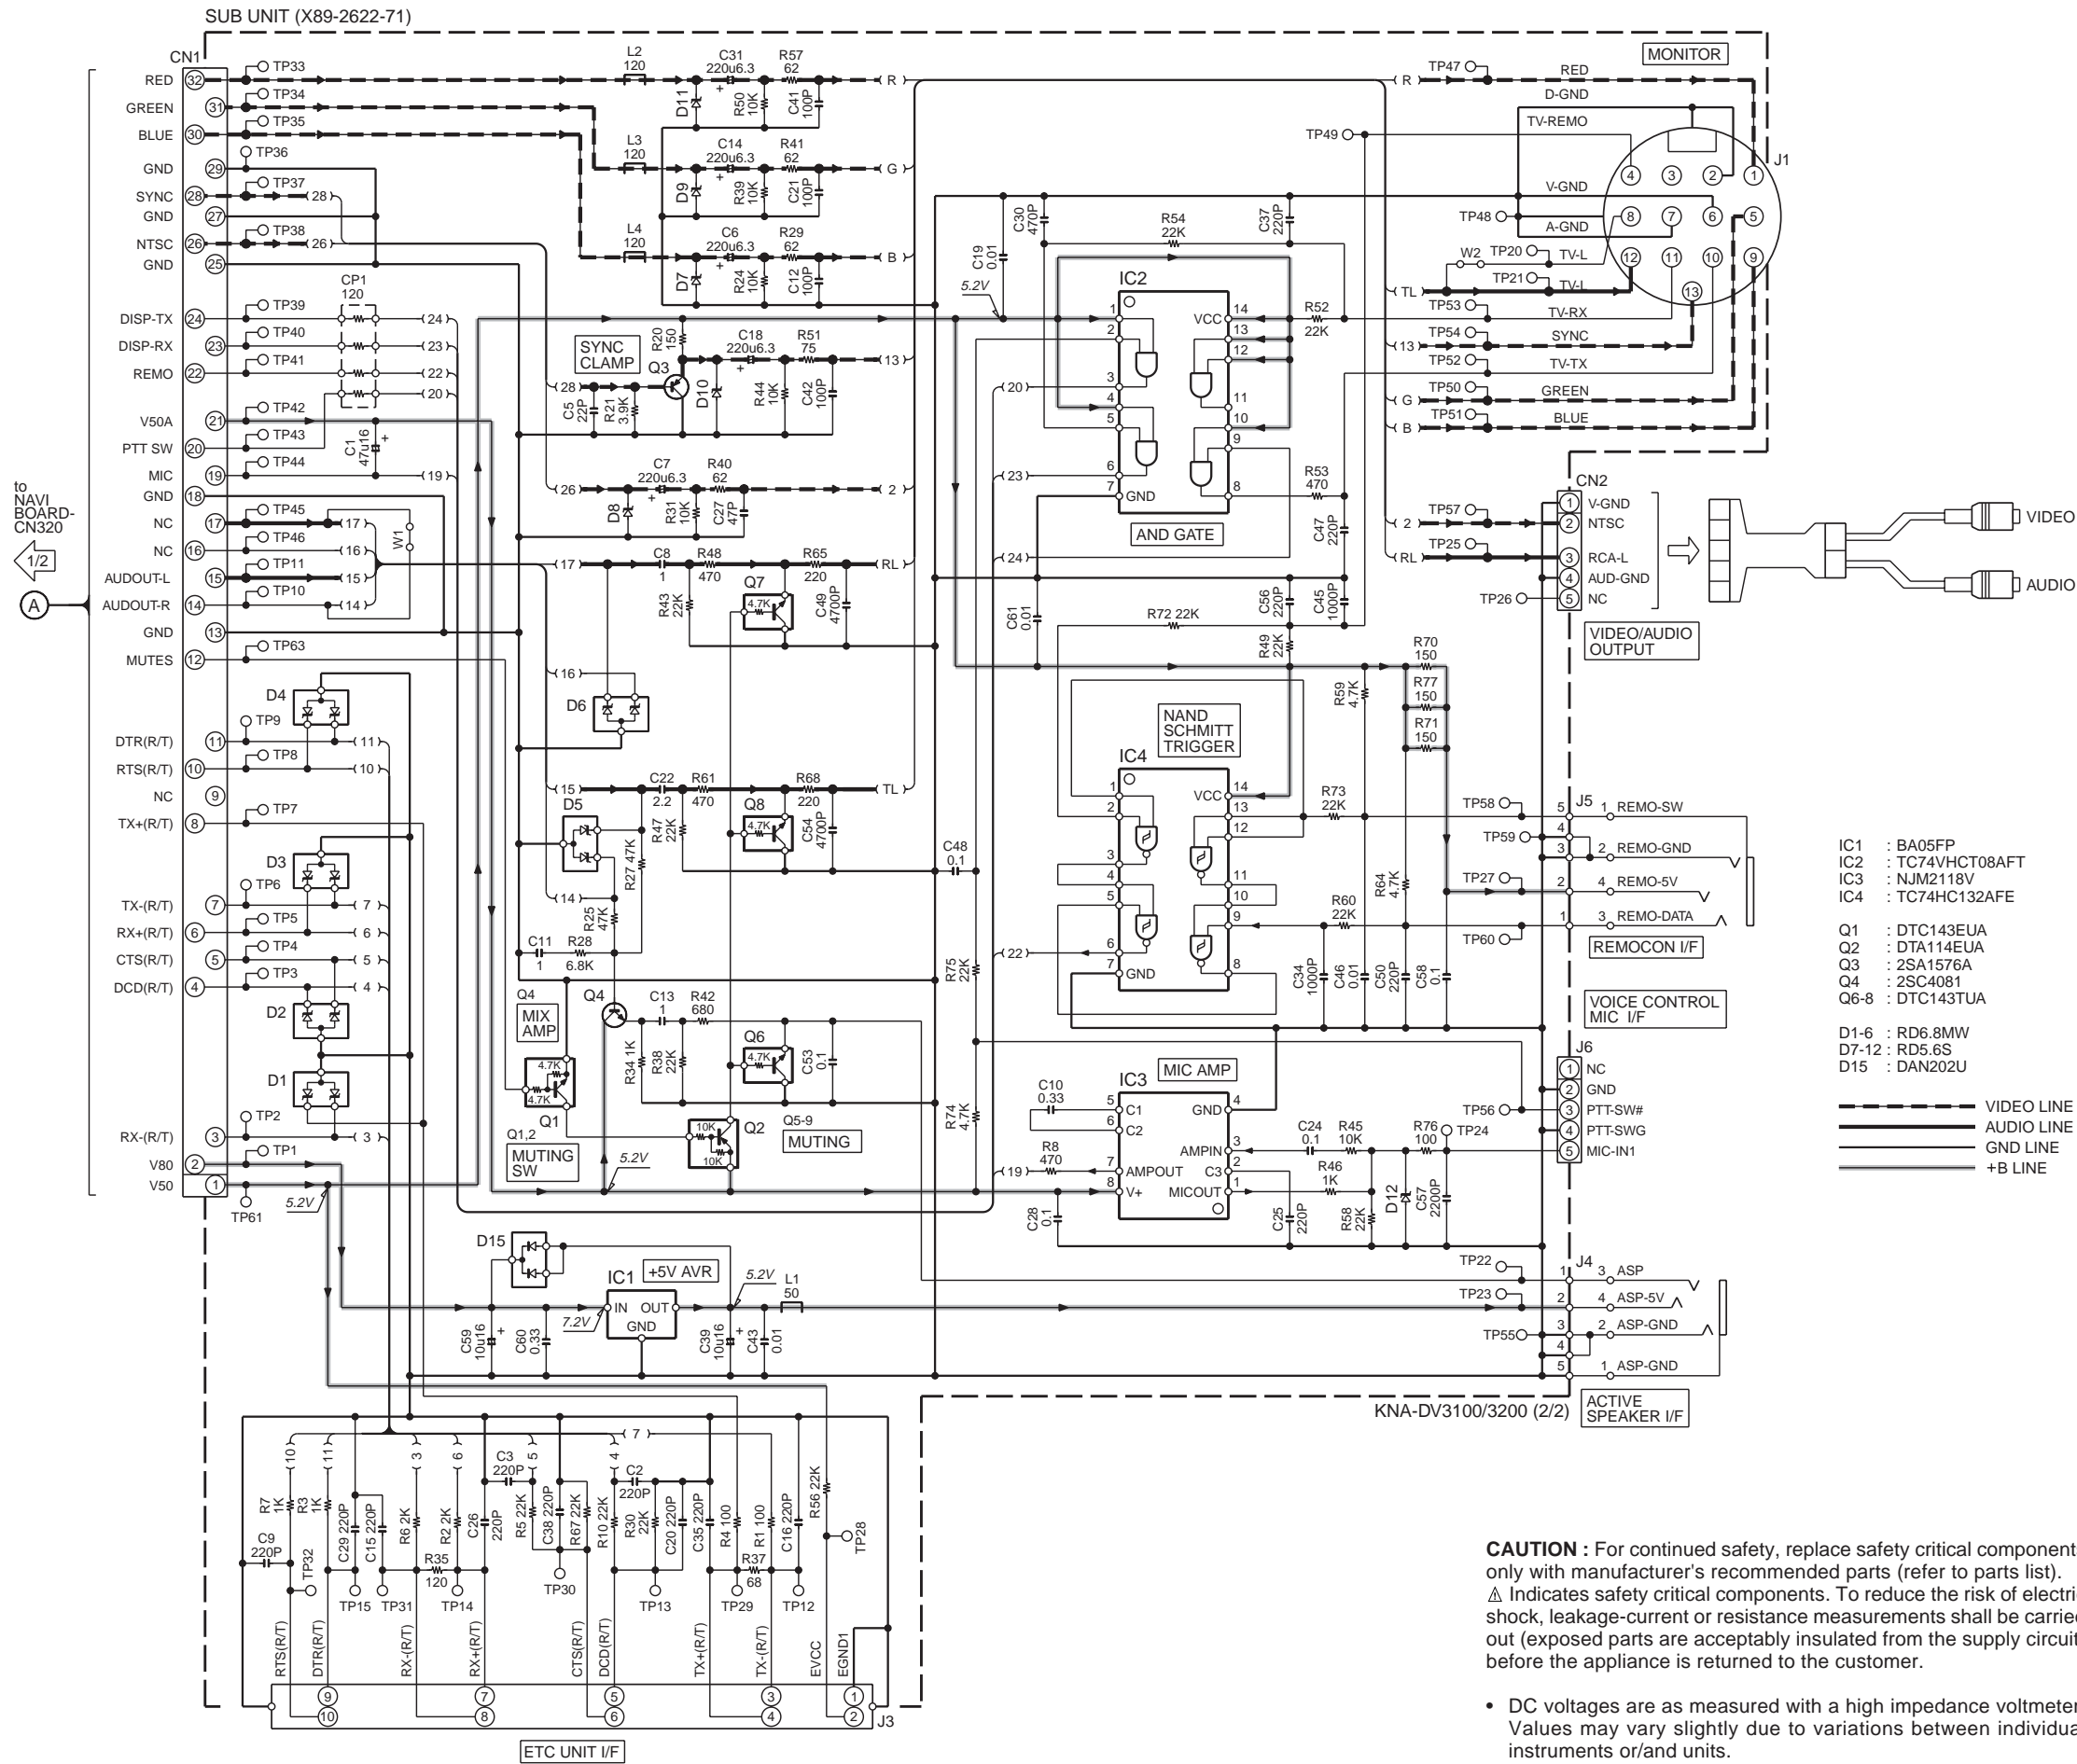

CAUTION : For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list).
 ⚠ Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

- DC voltages are as measured with a high impedance voltmeter. Values may vary slightly due to variations between individual instruments or/and units.



PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KNA-DV3100/DV3200					
201	1B	*	A01-2816-02	METALLIC CABINET	K
201	1B	*	A01-2821-02	METALLIC CABINET	E1
204	3A	*	A21-4296-03	DRESSING PANEL ASSY	
PA1	3A	*	A64-3105-03	PANEL ASSY	K
PA1	3A	*	A64-3106-03	PANEL ASSY	E1
-			B46-0100-50	WARRANTY CARD	
-		*	B46-0648-13	USER CARD	K
-		*	B54-4407-00	INSTALLATION MANUAL (ENG.FRE.)	K
-		*	B54-4408-00	INSTALLATION MANU (ENG.FRE.GER.)	E1
-		*	B54-4408-00	INSTALLATION MANU (DUT.ITA.SPA.)	E1
-		*	B64-2615-00	INSTRUCTION MANUAL (ENG.FRE.)	K
-		*	B64-2616-00	INSTRUCTION MANUAL (ENG.FRE.)	E1
-		*	B64-2617-00	INSTRUCTION MANUAL (GER.DUT.)	E1
-		*	B64-2618-00	INSTRUCTION MANUAL (ITA.SPA.)	E1
210	1A		E30-6199-05	CONNECTING CORD ASSY	
211	2B	*	E30-6252-05	AUDIO CORD	
214	2A	*	E39-0552-05	WIRING HARNESS 3PIN	
215	3B	*	E39-0553-15	WIRING HARNESS 5PIN	
DC1	1A		E30-4964-05	DC CORD ASSY	
FC1	2B		E39-0513-05	FLAT CABLE	
FC2	2A	*	E39-0551-15	FLAT CABLE 50PIN	
217	2B		F09-1234-05	CAP	
221	1B		F29-0049-05	INSULATING COVER	
F1	1A	*	F52-0003-05	FUSE (3A)	
F2	1A		F52-0004-05	FUSE (5A)	
222	3A	*	G09-2055-04	FORMED WIRE	
-			H02-0829-13	INNER CARTON CASE	
-		*	H10-4879-02	POLYSTYRENE FOAMED FIXTURE	
-		*	H13-2045-04	CARTON BOARD	
-			H25-0338-04	PROTECTION BAG 250X350X0.03	
-			H25-1110-04	PROTECTION BAG 300X450X0.5	K
-			H25-1115-04	PROTECTION BAG	E1
-		*	H54-2918-13	ITEM CARTON CASE	K
-		*	H54-2919-03	ITEM CARTON CASE	E1
224	1A	*	J19-5246-04	BRACKET	
225	1A		J21-9867-04	MOUNTING HARDWARE	
231	1A		N99-1713-05	SCREW SET	
A	3A		N09-1890-05	TAPTITE SCREW 1.7X3.5	
B	2B		N09-6099-05	MACHINE SCREW M3X3	
C	2A	*	N09-6124-05	MACHINE SCREW M2.6X 3	
D	3A	*	N09-6129-05	TAPTITE SCREW	
E	2B	*	N35-2605-48	BINDING HEAD MACHINE SCREW	
F	1B		N35-3005-45	BINDING HEAD MACHINE SCREW	
G	3A		N64-2004-46	PAN HEAD SEMS SCREW	
H	3A		N80-2004-46	PAN HEAD TAPTITE SCREW	
J	3A		N82-2006-48	BINDING HEAD TAPTITE SCREW	
L	2B	*	N09-6132-05	MACHINE SCREW M3X3	
232	1A	*	W01-1618-05	DVD	K
232	1A	*	W01-1619-05	DVD	E1
233	1A		W02-3261-05	ELECTRIC CIRCUIT MODULE (G-ANT)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
235	2B	*	W02-3395-15	ELECTRIC CIRCUIT MODULE (NAVI-B)	
VME1	2A	*	X92-4740-00	DVD MECHANISM ASSY DVS-3020	
SWITCH UNIT (X25-9742-71)					
C10			CK73GB1C104K	CHIP C 0.10UF K	
CN10			E41-0362-05	PIN ASSY 5P	
CN11			E40-5168-05	PIN ASSY 3P	
R3,4			RK73GB2A102J	CHIP R 1.0K J 1/10W	
S1,2			S70-0884-05	TACT SWITCH	
D1			RD5.6S	ZENER DIODE	
A10			W02-3382-05	ELECTRIC CIRCUIT MODULE (GYRO)	
DAUGHTER UNIT (X89-2622-71)					
C1			C92-0040-05	CHIP-ELE 47UF 16WV	
C2,3			CC73GCH1H221J	CHIP C 220PF J	
C5			CC73GCH1H220J	CHIP C 22PF J	
C6,7			C92-1791-05	ELECTRO 220UF 6.3WV	
C8			CK73FB1C105K	CHIP C 1.0UF K	
C9			CC73GCH1H221J	CHIP C 220PF J	
C10			CK73FB1C334K	CHIP C 0.33UF K	
C11			CK73FB1C105K	CHIP C 1.0UF K	
C12			CC73GCH1H101J	CHIP C 100PF J	
C13			CK73FB1C105K	CHIP C 1.0UF K	
C14			C92-1791-05	ELECTRO 220UF 6.3WV	
C15,16			CC73GCH1H221J	CHIP C 220PF J	
C18			C92-1791-05	ELECTRO 220UF 6.3WV	
C19			CK73GB1H103K	CHIP C 0.010UF K	
C20			CC73GCH1H221J	CHIP C 220PF J	
C21			CC73GCH1H101J	CHIP C 100PF J	
C22			CK73FB1A225K	CHIP C 2.2UF K	
C24			CK73GB1C104K	CHIP C 0.10UF K	
C25,26			CC73GCH1H221J	CHIP C 220PF J	
C27			CC73GCH1H470J	CHIP C 47PF J	
C28			CK73GB1C104K	CHIP C 0.10UF K	
C29			CC73GCH1H221J	CHIP C 220PF J	
C30			CC73GCH1H471J	CHIP C 470PF J	
C31			C92-1791-05	ELECTRO 220UF 6.3WV	
C34			CK73GB1H102K	CHIP C 1000PF K	
C35			CC73GCH1H221J	CHIP C 220PF J	
C37,38			CC73GCH1H221J	CHIP C 220PF J	
C39			C92-0671-05	ELECTRO 10UF 16WV	
C41,42			CC73GCH1H101J	CHIP C 100PF J	
C43			CK73GB1H103K	CHIP C 0.010UF K	
C45			CK73GB1H102K	CHIP C 1000PF K	
C46			CK73GB1H103K	CHIP C 0.010UF K	
C47			CC73GCH1H221J	CHIP C 220PF J	
C48			CK73GB1C104K	CHIP C 0.10UF K	
C49			CK73GB1H472K	CHIP C 4700PF K	
C50			CC73GCH1H221J	CHIP C 220PF J	
C53			CK73GB1C104K	CHIP C 0.10UF K	
C54			CK73GB1H472K	CHIP C 4700PF K	
C56			CC73GCH1H221J	CHIP C 220PF J	

K : KNA-DV3100 E1 : KNA-DV3200

(K : North America E : Europe)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

DAUGHTER UNIT (X89-2622-71)

Ref. No.	Add	New	Parts No.	Description	Destination
C57			CK73GB1H222K	CHIP C 2200PF K	
C58			CK73GB1C104K	CHIP C 0.10UF K	
C59			C92-0671-05	ELECTRO 10UF 16WV	
C60			CK73FB1C334K	CHIP C 0.33UF K	
C61			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-0401-05	FLAT CABLE CONNECTOR 32PIN	
CN2			E40-3240-05	PIN ASSY 5P	
J1			E56-0843-05	CYLINDRICAL RECEPTACLE 13P	
J3			E58-0867-15	RECTANGULAR RECEPTACLE	
J4			E11-0635-05	MINIATURE PHONE JACK	
J5			E11-0634-05	MINIATURE PHONE JACK	
J6			E58-0906-05	RECTANGULAR RECEPTACLE	
L1			L92-0315-05	CHIP FERRITE	
L2-4			L92-0340-05	CHIP FERRITE	
K	2B		N83-3005-41	PAN HEAD TAPTITE SCREW	
CP1			R90-0727-05	MULTI-COMP 120 X4	
R1		*	RK73EB2E101J	CHIP R 100 J 1/4W	
R2		*	RK73EB2E202J	CHIP R 2.0K J 1/4W	
R3		*	RK73EB2E102J	CHIP R 1.0K J 1/4W	
R4		*	RK73EB2E101J	CHIP R 100 J 1/4W	
R5		*	RK73EB2E223J	CHIP R 22K J 1/4W	
R6		*	RK73EB2E202J	CHIP R 2.0K J 1/4W	
R7		*	RK73EB2E102J	CHIP R 1.0K J 1/4W	
R8		*	RK73GB2A471J	CHIP R 470 J 1/10W	
R10		*	RK73EB2E223J	CHIP R 22K J 1/4W	
R20			RK73EB2E151J	CHIP R 150 J 1/4W	
R21			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R24			RK73GB2A103J	CHIP R 10K J 1/10W	
R25			RK73GB2A473J	CHIP R 47K J 1/10W	
R27			RK73GB2A473J	CHIP R 47K J 1/10W	
R28			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R29			RK73EB2E620J	CHIP R 62 J 1/4W	
R30			RK73GB2A223J	CHIP R 22K J 1/10W	
R31			RK73GB2A103J	CHIP R 10K J 1/10W	
R34			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R35			RK73EB2E121J	CHIP R 120 J 1/4W	
R38			RK73GB2A223J	CHIP R 22K J 1/10W	
R39			RK73GB2A103J	CHIP R 10K J 1/10W	
R40,41			RK73EB2E620J	CHIP R 62 J 1/4W	
R42			RK73EB2E681J	CHIP R 680 J 1/4W	
R43			RK73GB2A223J	CHIP R 22K J 1/10W	
R44,45			RK73GB2A103J	CHIP R 10K J 1/10W	
R46			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R47			RK73GB2A223J	CHIP R 22K J 1/10W	
R48			RK73GB2A471J	CHIP R 470 J 1/10W	
R49			RK73GB2A223J	CHIP R 22K J 1/10W	
R50			RK73GB2A103J	CHIP R 10K J 1/10W	
R51			RK73EB2E750J	CHIP R 75 J 1/4W	
R52			RK73EB2E223J	CHIP R 22K J 1/4W	
R53			RK73EB2E471J	CHIP R 470 J 1/4W	
R54			RK73EB2E223J	CHIP R 22K J 1/4W	
R56			RK73GB2A223J	CHIP R 22K J 1/10W	
R57			RK73EB2E620J	CHIP R 62 J 1/4W	
R58			RK73GB2A223J	CHIP R 22K J 1/10W	
R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R60			RK73EB2E223J	CHIP R 22K J 1/4W	
R61			RK73GB2A471J	CHIP R 470 J 1/10W	
R64			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R65			RK73EB2E221J	CHIP R 220 J 1/4W	
R67			RK73EB2E223J	CHIP R 22K J 1/4W	
R68			RK73EB2E221J	CHIP R 220 J 1/4W	
R70,71			RK73EB2E151J	CHIP R 150 J 1/4W	
R72,73			RK73EB2E223J	CHIP R 22K J 1/4W	
R74			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R75			RK73EB2E223J	CHIP R 22K J 1/4W	
R76			RK73EB2E101J	CHIP R 100 J 1/4W	
R77			RK73EB2E151J	CHIP R 150 J 1/4W	
W1,2			R92-1252-05	CHIP R 0 OHM J 1/16W	
D1-6			RD6.8MW	ZENER DIODE 6.8V	
D7-12			RD5.6S	ZENER DIODE 5.6V	
D15			DAN202U	DIODE	
IC1			BA05FP	ANALOGUE IC	
IC2			TC74VHCT08AFT	MOS-IC 14P	
IC3			NJM2118V	ANALOGUE IC	
IC4			TC74HC132AFE	MOS-IC	
Q1			DTC143EUA	DIGITAL TRANSISTOR	
Q2			DTA114EUA	DIGITAL TRANSISTOR	
Q3			2SA1576A	TRANSISTOR	
Q4			2SC4081	TRANSISTOR	
Q6-8			DTC143TUA	DIGITAL TRANSISTOR	
ELECTRIC CIRCUIT MODULE (NAVI UNIT W02-3395-15)					
C101,102			CK73GB1H104K	CHIP C 0.10UF K	
C105,106			CK73GB1H104K	CHIP C 0.10UF K	
C107,108		*	C90-5512-08	ELECTRO 1000UF 25WV	
C109			CK73GB1H103K	CHIP C 0.010UF K	
C110		*	C92-1811-08	ELECTRO 47UF 35WV	
C111			CK73GB1H103K	CHIP C 0.010UF K	
C112		*	C92-1807-08	ELECTRO 220UF 35WV	
C113,114			CC73GCH1H471J	CHIP C 470PF J	
C115,116			CK73GB1H104K	CHIP C 0.10UF K	
C117			CK73FB1C334K	CHIP C 0.33UF K	
C118		*	C93-1325-08	CHIP C 1UF K	
C119		*	C92-1810-08	ELECTRO 47UF 6.3WV	
C120-122			CK73GB1H104K	CHIP C 0.10UF K	
C123			CK73FB1C334K	CHIP C 0.33UF K	
C124		*	C93-1325-08	CHIP C 1UF K	
C125-127			CK73GB1H104K	CHIP C 0.10UF K	
C128		*	C92-1811-08	ELECTRO 47UF 35WV	
C129,130			CK73GB1H104K	CHIP C 0.10UF K	
C132,133			CC73GCH1H681J	CHIP C 680PF J	
C134			C92-1776-05	ELECTRO 470UF 16WV	
C135		*	C92-1808-08	ELECTRO 1500UF 6.3WV	
C136,137			CK73GB1H104K	CHIP C 0.10UF K	
C139,140			CK73GB1H104K	CHIP C 0.10UF K	
C141			CK73GB1H103K	CHIP C 0.010UF K	
C142			CK73GB1H104K	CHIP C 0.10UF K	
C143,144			CC73GCH1H681J	CHIP C 680PF J	

K : KNA-DV3100 E1 : KNA-DV3200
(K : North America E : Europe)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC CIRCUIT MODULE (NAVI UNIT W02-3395-15)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C145		*	C92-1808-08	ELECTRO 1500UF 6.3WV	
C146		*	C92-1806-08	ELECTRO 1000UF 10WV	
C147-153			CK73GB1H104K	CHIP C 0.10UF K	
C154			C92-1776-05	ELECTRO 470UF 16WV	
C155,156			CK73GB1H104K	CHIP C 0.10UF K	
C157		*	C92-1809-08	ELECTRO 100UF 16WV	
C159		*	C93-1325-08	CHIP C 1UF K	
C160		*	C90-5511-08	ELECTRO 270UF 16WV	
C162		*	C93-1325-08	CHIP C 1UF K	
C216		*	C93-1327-08	CHIP C 10UF 16WV	
C218			CK73GB1H103K	CHIP C 0.010UF K	
C219		*	C93-1325-08	CHIP C 1UF K	
C220			CK73GB1H103K	CHIP C 0.010UF K	
C221		*	C93-1325-08	CHIP C 1UF K	
C251			CK73GB1H472K	CHIP C 4700PF K	
C252		*	C92-1805-08	ELECTRO 22UF 16WV	
C253		*	C93-1325-08	CHIP C 1UF K	
C254,255			CK73GB1H102K	CHIP C 1000PF K	
C256			CK73GB1H103K	CHIP C 0.010UF K	
C263			CK73GB1H472K	CHIP C 4700PF K	
C264,265			CK73GB1H104K	CHIP C 0.10UF K	
C301			CK73GB1H104K	CHIP C 0.10UF K	
C303,304			CC73GCH1H221J	CHIP C 220PF J	
C307			CK73GB1H104K	CHIP C 0.10UF K	
C309,310			CK73GB1H104K	CHIP C 0.10UF K	
C312			CK73GB1H104K	CHIP C 0.10UF K	
C320			CK73GB1H392K	CHIP C 3900PF K	
C321		*	C93-1325-08	CHIP C 1UF K	
C322			CK73GB1H392K	CHIP C 3900PF K	
C323			CK73GB1H102K	CHIP C 1000PF K	
C326			CK73GB1H104K	CHIP C 0.10UF K	
C329			CK73GB1H392K	CHIP C 3900PF K	
C331			CK73GB1H104K	CHIP C 0.10UF K	
C332		*	C93-1327-08	CHIP C 10UF 16WV	
C333			CK73GB1H104K	CHIP C 0.10UF K	
C334		*	C93-1325-08	CHIP C 1UF K	
C521			CK73HB1C103K	CHIP C 0.010UF K	
C522-527			CC73HCH1H100D	CHIP C 10PF D	
C528			CK73HB1C103K	CHIP C 0.010UF K	
C529,530			CK73HB1A473K	CHIP C 0.047UF K	
C531			CK73HB1H102K	CHIP C 1000PF K	
C532			CK73HB1C103K	CHIP C 0.010UF K	
C533			CK73HB1A473K	CHIP C 0.047UF K	
C534			CK73HB1H102K	CHIP C 1000PF K	
C535			CK73HB1A473K	CHIP C 0.047UF K	
C536-543			CK73HB1C103K	CHIP C 0.010UF K	
C544		*	C93-1325-08	CHIP C 1UF K	
C546			CC73HCH1H100D	CHIP C 10PF D	
C548,549			CC73GCH1H470J	CHIP C 47PF J	
C551			CC73GCH1H221J	CHIP C 220PF J	
C552		*	C93-1327-08	CHIP C 10UF 16WV	
C553		*	C92-1825-08	TANTALUM C 4.7UF 25WV	
C554,555			CK73GB1H103K	CHIP C 0.010UF K	
C556,557			CC73GCH1H101J	CHIP C 100PF J	
C561			CK73GB1H104K	CHIP C 0.10UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C562			CK73GB1H103K	CHIP C 0.010UF K	
C641			CK73GB1H104K	CHIP C 0.10UF K	
C642			CC73GCH1H270J	CHIP C 27PF J	
C643			CC73GCH1H470J	CHIP C 47PF J	
C644			CK73GB1H104K	CHIP C 0.10UF K	
C645			CK73GB1H103K	CHIP C 0.010UF K	
C646			CK73GB1H104K	CHIP C 0.10UF K	
C647,648		*	C93-1327-08	CHIP C 10UF 16WV	
C652			CK73GB1H103K	CHIP C 0.010UF K	
C684			CK73GB1H103K	CHIP C 0.010UF K	
C687			CK73GB1H103K	CHIP C 0.010UF K	
C701			CC73GCH1H100D	CHIP C 10PF D	
C702			CK73GB1H103K	CHIP C 0.010UF K	
C703			CC73GCH1H470J	CHIP C 47PF J	
C704			CK73GB1H472K	CHIP C 4700PF K	
C705			CC73GCH1H100D	CHIP C 10PF D	
C706			CK73GB1H472K	CHIP C 4700PF K	
C707,708			CC73GCH1H471J	CHIP C 470PF J	
C709,710			CK73GB1H472K	CHIP C 4700PF K	
C711-713			CC73GCH1H100D	CHIP C 10PF D	
C714			CC73GCH1H471J	CHIP C 470PF J	
C715,716			CK73GB1H472K	CHIP C 4700PF K	
C717			CC73GCH1H471J	CHIP C 470PF J	
C718			CK73GB1H103K	CHIP C 0.010UF K	
C719			CK73GB1H472K	CHIP C 4700PF K	
C720			CC73GCH1H100D	CHIP C 10PF D	
C721			CK73GB1H472K	CHIP C 4700PF K	
C722			CC73GCH1H471J	CHIP C 470PF J	
C723			CK73GB1H103K	CHIP C 0.010UF K	
C724			CC73GCH1H100D	CHIP C 10PF D	
C725,726			CK73GB1H104K	CHIP C 0.10UF K	
C727,728			CC73GCH1H100D	CHIP C 10PF D	
C730,731			CK73GB1H104K	CHIP C 0.10UF K	
C732,733			CK73GB1H103K	CHIP C 0.010UF K	
C734		*	C93-1325-08	CHIP C 1UF K	
C735		*	C93-1327-08	CHIP C 10UF 16WV	
C736		*	C93-1325-08	CHIP C 1UF K	
C737			CC73GCH1H471J	CHIP C 470PF J	
C738			CK73GB1H472K	CHIP C 4700PF K	
C739		*	C93-1327-08	CHIP C 10UF 16WV	
C740			CK73GB1H104K	CHIP C 0.10UF K	
C741			CK73GB1H472K	CHIP C 4700PF K	
C742			CC73GCH1H471J	CHIP C 470PF J	
C743		*	C93-1327-08	CHIP C 10UF 16WV	
C744			CK73GB1H104K	CHIP C 0.10UF K	
C745			CK73GB1H472K	CHIP C 4700PF K	
C746			CC73GCH1H471J	CHIP C 470PF J	
C749			CK73GB1H102K	CHIP C 1000PF K	
C750			CC73GCH1H100D	CHIP C 10PF D	
C751		*	C93-1325-08	CHIP C 1UF K	
C752			CK73GB1H472K	CHIP C 4700PF K	
C753			CC73GCH1H471J	CHIP C 470PF J	
C754			CK73GB1H472K	CHIP C 4700PF K	
C755		*	C93-1325-08	CHIP C 1UF K	
C756			CK73GB1H472K	CHIP C 4700PF K	

K : KNA-DV3100 E1 : KNA-DV3200

(K : North America E : Europe)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC CIRCUIT MODULE (NAVI UNIT W02-3395-15)

Ref. No.	Add	New	Parts No.	Description	Destination
C757			CC73GCH1H471J	CHIP C 470PF J	
C758			CK73GB1H472K	CHIP C 4700PF K	
C759		*	C93-1325-08	CHIP C 1UF K	
C760			CK73GB1H472K	CHIP C 4700PF K	
C761			CC73GCH1H471J	CHIP C 470PF J	
C762			CK73GB1H472K	CHIP C 4700PF K	
C763		*	C93-1325-08	CHIP C 1UF K	
C764			CK73GB1H472K	CHIP C 4700PF K	
C765			CC73GCH1H471J	CHIP C 470PF J	
C766			CK73GB1H472K	CHIP C 4700PF K	
C767			CC73GCH1H100D	CHIP C 10PF D	
C770,771			CC73HCH1H100D	CHIP C 10PF D	
C772,773			CK73GB1H103K	CHIP C 0.010UF K	
C774-776			CC73HCH1H100D	CHIP C 10PF D	
C778-780			CC73HCH1H100D	CHIP C 10PF D	
C781			CK73GB1H102K	CHIP C 1000PF K	
C782			CK73GB1H103K	CHIP C 0.010UF K	
C783			CK73GB1H102K	CHIP C 1000PF K	
C784			CK73GB1H103K	CHIP C 0.010UF K	
C785			CK73GB1H102K	CHIP C 1000PF K	
C786			CK73GB1H472K	CHIP C 4700PF K	
C787-789			CC73HCH1H100D	CHIP C 10PF D	
C790,791		*	C93-1327-08	CHIP C 10UF 16WV	
C793			CK73GB1H104K	CHIP C 0.10UF K	
C794		*	C93-1325-08	CHIP C 1UF K	
C795			CK73HB1H102K	CHIP C 1000PF K	
C902			CK73GB1H103K	CHIP C 0.010UF K	
C954			CK73GB1H682K	CHIP C 6800PF K	
C957			CK73GB1H152K	CHIP C 1500PF K	
C958,959			CK73GB1H473K	CHIP C 0.047UF K	
C960			CK73GB1H103K	CHIP C 0.010UF K	
C961			CK73GB1H104K	CHIP C 0.10UF K	
C962			CC73GCH1H151J	CHIP C 150PF J	
C963			CC73GCH1H101J	CHIP C 100PF J	
C964-967			CK73GB1H104K	CHIP C 0.10UF K	
CN100		*	E58-0976-08	RECTANGULAR RECEPTACLE	
CN110			E40-5751-05	PIN ASSY	
CN320		*	E41-2006-08	FLAT CABLE CONNECTOR	
CN350		*	E41-2003-08	FLAT CABLE CONNECTOR	
CN400			E58-0921-08	RECTANGULAR RECEPTACLE	
CN600		*	E41-2004-08	PIN ASSY	
CN710		*	E41-0362-05	PIN ASSY	
F521		*	L78-0887-08	FILTER	
L101			L33-1171-08	CHOKE COIL	
L102,103		*	L33-1855-05	CHOKE COIL 100UH	
L104		*	L33-1955-08	CHOKE COIL	
L105		*	L33-1855-05	CHOKE COIL 100UH	
L521		*	L33-1951-08	CHOKE COIL 39nH	
L522		*	L33-1952-08	CHOKE COIL 100nH	
L523		*	L33-1951-08	CHOKE COIL 39nH	
L731			L92-0330-05	CHIP FERRITE	
X101			L78-0823-08	RESONATOR 4MHz	
X701		*	L78-0884-08	RESONATOR 12.080964MHz	
X702		*	L78-0886-08	RESONATOR 32.768kHz	

Ref. No.	Add	New	Parts No.	Description	Destination
R101,102			RK73EB2E392J	CHIP R 3.9K J 1/4W	
R103			R92-3207-05	CHIP R 17.8K J 1/4W	
R104		*	R92-3437-08	CHIP R 34.8K J 1/10W	
R105			RK73EB2E103J	CHIP R 10K J 1/4W	
R106			RK73EB2E223J	CHIP R 22K J 1/4W	
R107		*	R92-3446-08	CHIP R 8.06K J 1/10W	
R108		*	R92-3424-08	CHIP R 10K J 1/10W	
R109		*	R92-3443-08	CHIP R 49.9K J 1/10W	
R110		*	R92-3452-08	CHIP R 180 J 1W	
R111		*	R92-3429-08	CHIP R 150K J 1/10W	
R112			RK73EB2E223J	CHIP R 22K J 1/4W	
R113		*	R92-3434-08	CHIP R 24.9K J 1/10W	
R114		*	R92-3448-08	CHIP R 8.66K J 1/10W	
R115			RK73EB2E103J	CHIP R 10K J 1/4W	
R116		*	R92-3424-08	CHIP R 10K J 1/10W	
R117		*	R92-3425-08	CHIP R 100K J 1/10W	
R118		*	R92-3441-08	CHIP R 46.4K J 1/10W	
R119		*	R92-3425-08	CHIP R 100K J 1/10W	
R120		*	R92-3429-08	CHIP R 150K J 1/10W	
R121,122		*	R92-3434-08	CHIP R 24.9K J 1/10W	
R123		*	R92-3433-08	CHIP R 22.6K J 1/10W	
R124			RK73GB2A104J	CHIP R 100K J 1/10W	
R125		*	R92-3430-08	CHIP R 18.2K J 1/10W	
R126		*	R92-3425-08	CHIP R 100K J 1/10W	
R127			RK73GB2A104J	CHIP R 100K J 1/10W	
R130			RK73GB2A104J	CHIP R 100K J 1/10W	
R131-133		*	R92-3434-08	CHIP R 24.9K J 1/10W	
R134			RK73GB2A104J	CHIP R 100K J 1/10W	
R135		*	R92-3428-08	CHIP R 15K J 1/10W	
R136		*	R92-3434-08	CHIP R 24.9K J 1/10W	
R137			RK73GB2A104J	CHIP R 100K J 1/10W	
R138		*	R92-3434-08	CHIP R 24.9K J 1/10W	
R139		*	R92-3426-08	CHIP R 12.1K J 1/10W	
R140,141			RK73GB2A104J	CHIP R 100K J 1/10W	
R142		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R143		*	R92-3434-08	CHIP R 24.9K J 1/10W	
R144			RK73GB2A104J	CHIP R 100K J 1/10W	
R145,146		*	R92-3434-08	CHIP R 24.9K J 1/10W	
R147			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R148			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R149			RK73EB2E331J	CHIP R 330 J 1/4W	
R150,151			RK73HB1J470J	CHIP R 47 J 1/16W	
R152			RK73HB1J223J	CHIP R 22K J 1/16W	
R153			RK73HB1J103J	CHIP R 10K J 1/16W	
R154			RK73HB1J223J	CHIP R 22K J 1/16W	
R155,156		*	R92-3451-08	CHIP R 3.3 J 1/10W	
R157			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R158		*	R92-3432-08	CHIP R 22.1K J 1/10W	
R159		*	R92-3476-08	CHIP R 4.75K J 1/10W	
R160		*	R92-3432-08	CHIP R 22.1K J 1/10W	
R161		*	R92-3427-08	CHIP R 13K J 1/10W	
R162			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R163			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R164			RK73EB2E331J	CHIP R 330 J 1/4W	
R165			RK73EB2E222J	CHIP R 2.2K J 1/4W	

K : KNA-DV3100 E1 : KNA-DV3200
 (K : North America E : Europe)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC CIRCUIT MODULE (NAVI UNIT W02-3395-15)

Ref. No.	Added	New	Parts No.	Description	Destination
R166			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R167,168			RK73HB1J470J	CHIP R 47 J 1/16W	
R169			RK73HB1J103J	CHIP R 10K J 1/16W	
R170			RK73HB1J223J	CHIP R 22K J 1/16W	
R172			RK73HB1J473J	CHIP R 47K J 1/16W	
R173			RK73HB1J104J	CHIP R 100K J 1/16W	
R175,176		*	R92-3451-08	CHIP R 3.3 J 1/10W	
R177-180		*	R92-3423-08	CHIP R 1K J 1/10W	
R181			RK73HB1J104J	CHIP R 100K J 1/16W	
R182		*	R92-3461-08	CHIP R 16K J 1/16W	
R183		*	R92-3445-08	CHIP R 5.90K J 1/10W	
R184,185		*	R92-3434-08	CHIP R 24.9K J 1/10W	
R186		*	R92-3447-08	CHIP R 8.25K J 1/10W	
R187			RK73HB1J331J	CHIP R 330 J 1/16W	
R188,189			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R190			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R191,192			RK73HB1J104J	CHIP R 100K J 1/16W	
R195			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R202			RK73HB1J223J	CHIP R 22K J 1/16W	
R203			RK73HB1J104J	CHIP R 100K J 1/16W	
R205			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R207		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R209			RK73HB1J471J	CHIP R 470 J 1/16W	
R238,239			RK73HB1J223J	CHIP R 22K J 1/16W	
R240		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R241		*	R92-3436-08	CHIP R 3.01K J 1/10W	
R242-244		*	R92-3423-08	CHIP R 1K J 1/10W	
R251,252			RK73EB2E103J	CHIP R 10K J 1/4W	
R253,254			RK73EB2E122J	CHIP R 1.2K J 1/4W	
R256			RK73EB2E122J	CHIP R 1.2K J 1/4W	
R257			RK73EB2E272J	CHIP R 2.7K J 1/4W	
R258			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R259			RK73EB2E272J	CHIP R 2.7K J 1/4W	
R260,261			RK73HB1J563J	CHIP R 56K J 1/16W	
R263			RK73EB2E223J	CHIP R 22K J 1/4W	
R264			RK73HB1J223J	CHIP R 22K J 1/16W	
R265			RK73HB1J103J	CHIP R 10K J 1/16W	
R266			RK73HB1J104J	CHIP R 100K J 1/16W	
R267			RK73HB1J393J	CHIP R 39K J 1/16W	
R268			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R269			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R271			RK73HB1J103J	CHIP R 10K J 1/16W	
R272		*	R92-3431-08	CHIP R 200 J 1/10W	
R273		*	R92-3435-08	CHIP R 301 J 1/10W	
R274			RK73HB1J103J	CHIP R 10K J 1/16W	
R275			RK73HB1J104J	CHIP R 100K J 1/16W	
R277			RK73HB1J103J	CHIP R 10K J 1/16W	
R278			RK73HB1J224J	CHIP R 220K J 1/16W	
R279,280		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R301		*	R92-3461-08	CHIP R 16K J 1/16W	
R303		*	R92-3461-08	CHIP R 16K J 1/16W	
R306			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R308			RK73HB1J563J	CHIP R 56K J 1/16W	
R309			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R311			RK73HB1J563J	CHIP R 56K J 1/16W	

Ref. No.	Added	New	Parts No.	Description	Destination
R322			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R330		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R332			RK73HB1J103J	CHIP R 10K J 1/16W	
R333			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R336		*	R92-3460-08	CHIP R 13K J 1/16W	
R337			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R338			RK73HB1J273J	CHIP R 27K J 1/16W	
R339		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R340,341		*	R92-3460-08	CHIP R 13K J 1/16W	
R342			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R343			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R344		*	R92-3435-08	CHIP R 301 J 1/10W	
R345		*	R92-3431-08	CHIP R 200 J 1/10W	
R348			RK73HB1J104J	CHIP R 100K J 1/16W	
R359-361			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R465		*	R92-3442-08	CHIP R 47.5K J 1/10W	
R501,502			RK73EB2E101J	CHIP R 100 J 1/4W	
R504,505		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R517			RK73HB1J223J	CHIP R 22K J 1/16W	
R521		*	R92-3424-08	CHIP R 10K J 1/10W	
R522		*	R92-3439-08	CHIP R 40.2K J 1/10W	
R523,524			R92-3210-05	CHIP R 30 J 1W	
R525			RK73HB1J223J	CHIP R 22K J 1/16W	
R526		*	R92-3424-08	CHIP R 10K J 1/10W	
R527		*	R92-3438-08	CHIP R 37.4K J 1/10W	
R528		*	R92-3424-08	CHIP R 10K J 1/10W	
R529		*	R92-3427-08	CHIP R 13K J 1/10W	
R530			RK73HB1J124J	CHIP R 120K J 1/16W	
R531,532			RK73HB1J473J	CHIP R 47K J 1/16W	
R534,535		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R536,537			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R539-542			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R547			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R548,549			RK73HB1J103J	CHIP R 10K J 1/16W	
R550			RK73HB1J220J	CHIP R 22 J 1/16W	
R552		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R557			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R558,559			RK73HB1J103J	CHIP R 10K J 1/16W	
R571			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R572			RK73HB1J223J	CHIP R 22K J 1/16W	
R611			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R646,647		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R648			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R649,650			RK73HB1J100J	CHIP R 10 J 1/16W	
R651			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R652-655			RK73HB1J100J	CHIP R 10 J 1/16W	
R690		*	R92-3479-08	CHIP R 340 J 1/10W	
R691		*	R92-3435-08	CHIP R 301 J 1/10W	
R692,693		*	RK73HB1J000J	CHIP R 0.0 J 1/16W	
R700,701			RK73HB1J473J	CHIP R 47K J 1/16W	
R702			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R711,712			R92-2052-05	CHIP R 0 OHM J 1/10W	
R713			RK73HB1J220J	CHIP R 22 J 1/16W	
R714			RK73HB1J223J	CHIP R 22K J 1/16W	
R716			RK73HB1J220J	CHIP R 22 J 1/16W	

K : KNA-DV3100 E1 : KNA-DV3200
(K : North America E : Europe)

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC CIRCUIT MODULE (NAVI UNIT W02-3395-15)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R717		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		D101		*	30D4	DIODE	
R718			RK73HB1J105J	CHIP R 1.0M J 1/16W		D102		*	EP05DA40	DIODE	
R719			RK73HB1J331J	CHIP R 330 J 1/16W		D103			U5ZA27C(TE24L)	ZENER DIODE	
R720		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		D104,105			RD16S	ZENER DIODE	
R729			RK73HB1J223J	CHIP R 22K J 1/16W		D106		*	RD16FM	ZENER DIODE	
R730			RK73HB1J123J	CHIP R 12K J 1/16W		D107			1SS352	DIODE	
R731			RK73HB1J103J	CHIP R 10K J 1/16W		D108			1SS357	DIODE	
R733		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		D109-112			EC20QS06	DIODE	
R736		*	R92-3459-08	CHIP R 10M J 1/10W		D113,114			1SS357	DIODE	
R737			RK73HB1J472J	CHIP R 4.7K J 1/16W		D115			EC20QS06	DIODE	
R739-741			RK73HB1J102J	CHIP R 1.0K J 1/16W		D116			1SS357	DIODE	
R751		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		D211		*	EP05DA40	DIODE	
R752			RK73HB1J222J	CHIP R 2.2K J 1/16W		D251		*	EP05DA40	DIODE	
R753		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		D252			1SS352	DIODE	
R754-757			RK73HB1J820J	CHIP R 82 J 1/16W		D301			1SS352	DIODE	
R758		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		D521			1SS352	DIODE	
R766			RK73HB1J102J	CHIP R 1.0K J 1/16W		D522		*	1SS362	DIODE	
R767			RK73HB1J222J	CHIP R 2.2K J 1/16W		D781			1SS352	DIODE	
R768			RK73HB1J473J	CHIP R 47K J 1/16W		IC101			TC75W56FU	IC	
R769,770			RK73HB1J102J	CHIP R 1.0K J 1/16W		IC102		*	S-80818ANNP	IC	
R771			RK73HB1J222J	CHIP R 2.2K J 1/16W		IC103,104			BA9743AFV	IC	
R773-777		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		IC105			S-81233SGUP	IC	
R778			RK73HB1J222J	CHIP R 2.2K J 1/16W		IC106		*	MB89935B	IC	
R781			RK73HB1J103J	CHIP R 10K J 1/16W		IC107		*	UPC2409AHF	IC	
R782			RK73HB1J104J	CHIP R 100K J 1/16W		IC108			UPC2905T	IC (5V VOLTAGE REGULATOR)	
R783			RK73HB1J103J	CHIP R 10K J 1/16W		IC109			TC7SET08FU	IC (IC)	
R835		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		IC111		*	TC7SH00FU	IC	
R954,955		*	R92-3428-08	CHIP R 15K J 1/10W		IC212		*	TAR5S30-TE85L	IC	
R958		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		IC251			TD62604F	IC	
R959		*	R92-3428-08	CHIP R 15K J 1/10W		IC254			TC7WU04FU	IC (INVERTOR)	
R960,961			RK73HB1J473J	CHIP R 47K J 1/16W		IC255			TC7W53FU	IC (2-CHANNEL MULTIPLEXER)	
R962		*	R92-3481-08	CHIP R 0 J 1/4W		IC256			TC7SET08FU	IC (IC)	
R965		*	R92-3432-08	CHIP R 22.1K J 1/10W		IC301			TA75S01F	IC (OP AMP)	
R967,968		*	R92-3432-08	CHIP R 22.1K J 1/10W		IC306			TA75S01F	IC (OP AMP)	
R969		*	R92-3442-08	CHIP R 47.5K J 1/10W		IC309			TC7SET08FU	IC (IC)	
R970			RK73HB1J683J	CHIP R 68K J 1/16W		IC310			TA75S01F	IC (OP AMP)	
R971			RK73HB1J223J	CHIP R 22K J 1/16W		IC502			TC7SET08FU	IC (IC)	
R972		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		IC521			-	Exchange is impossible	
R975		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		IC522		*	L78-0885-08	IC	
R977		*	RK73HB1J000J	CHIP R 0.0 J 1/16W		IC523			TA75W393FU	IC	
R980			RK73HB1J101J	CHIP R 100 J 1/16W		IC524-526			TC7WU04FU	IC (INVERTOR)	
RA551-556		*	R90-1536-08	CHIP R 22 J 1/32W		IC551		*	TC7SH00FU	IC	
RA558		*	R90-1536-08	CHIP R 22 J 1/32W		IC561			TC7SH08FU	IC (2ch AND GATE)	
RA711		*	R90-1540-08	CHIP R 22K J 1/32W		IC641			CXA2106R	IC	
RA712		*	R90-1539-08	CHIP R 2.2K J 1/32W		IC642		*	TC7SH00FU	IC	
RA713		*	R90-1540-08	CHIP R 22K J 1/32W		IC684		*	TC7S551FU	IC	
RA714		*	R90-1539-08	CHIP R 2.2K J 1/32W		IC701			-	Exchange is impossible	
RA715		*	R90-1540-08	CHIP R 22K J 1/32W		IC731		*	S-817A15ANB	IC	
RA716		*	R90-1539-08	CHIP R 2.2K J 1/32W		IC732,733		*	TAR5S25	IC	
RA717-721		*	R90-1540-08	CHIP R 22K J 1/32W		IC734		*	S-817A15ANB	IC	
RA751-754		*	R90-1537-08	CHIP R 82 J 1/32W		IC751		*	TC7SB66FU	IC	
RA755-770		*	R90-1535-08	CHIP R 18 J 1/32W		IC752-755			HY57V281620HC	IC	
RA771,772		*	R90-1538-08	CHIP R 150 J 1/32W		IC781		*	M5M5V416BTP70H	IC	
RA908		*	R90-1538-08	CHIP R 150 J 1/32W		IC782,783		*	TC7SH00FU	IC	
RA951,952		*	R90-1538-08	CHIP R 150 J 1/32W		IC784		*	MBM29LV160BE90	IC	

K : KNA-DV3100 E1 : KNA-DV3200
(K : North America E : Europe)

△ Indicates safety critical components.

PARTS LIST

- * New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC CIRCUIT MODULE (NAVI UNIT W02-3395-15)

Ref. No.	Add	New	Parts No.	Description	Destination
IC951 IC952 IC954 IC955,956 IC957			SN65C1168NS TC7SET08FU TC7SET00FU TC7SET08FU TC7SET00FU	IC IC (IC) IC IC (IC) IC	
T101 T102 T103,104 T105,106 T107,108			2SA1576 2SJ327Z DTC144EUA FMY6 HAT1038RJ	TRANSISTOR FET DIGITAL TRANSISTOR TRANSISTOR FET	
T109 T110,111 T112 T113 T305		*	DTC143EUA FMY6 2SA1576 2SB1690K UMX18N	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
T306 T307 T309 T319			UMD3N DTC143EUA DTC143EUA DTA143EU	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
BAT10			W09-0741-08	BATTERY	

Ref. No.	Add	New	Parts No.	Description	Destination

K : KNA-DV3100 **E1** : KNA-DV3200
(**K** : North America **E** : Europe)

⚠ Indicates safety critical components.

PARTS LIST

CAPACITORS

$\frac{C}{1} \frac{C}{2} \frac{4}{3} \frac{5}{4} \frac{T}{5} \frac{H}{6} \frac{1}{6} \frac{H}{6} \frac{2}{6} \frac{2}{6} \frac{0}{6} \frac{J}{6}$

1 = Type ... ceramic, electrolytic, etc.


2 = Shape ... round, square, etc.

3 = Temp. coefficient

4 = Voltage rating

5 = Value

6 = Tolerance

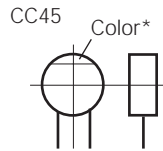

• Capacitor value


010 = 1pF

100 = 10pF

101 = 100pF

102 = 1000pF = 0.001μF

103 = 0.01μF

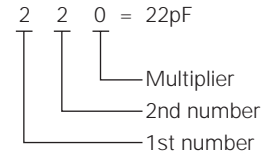

• Temperature coefficient

1st Word	C	L	P	R	S	T	U
Color*	Black	Red	Orange	Yellow	Green	Blue	Violet
ppm/°C	0	-80	-150	-220	-330	-470	-750

2nd Word	G	H	J	K	L
ppm/°C	±30	±60	±120	±250	±500

Example : CC45TH = -470±60ppm/°C

• Tolerance (More than 10pF)

Code	C	D	G	J	K	M	X	Z	P	No code
(%)	±0.25	±0.5	±2	±5	±10	±20	+40 -20	+80 -20	+100 -0	More than 10μF : -10~+50 Less than 4.7μF : -10~+75

(Less than 10pF)

Code	B	C	D	F	G
(pF)	±0.1	±0.25	±0.5	±1	±2

• Voltage rating

2nd word 1st word	A	B	C	D	E	F	G	H	J	K	V
0	1.0	1.25	1.6	2.0	2.5	3.15	4.0	5.0	6.3	8.0	-
1	10	12.5	16	20	25	31.5	40	50	63	80	35
2	100	125	160	200	250	315	400	500	630	800	-
3	1000	1250	1600	2000	2500	3150	4000	5000	6300	8000	-

CHIP CAPACITORS

(EX) $\frac{C}{1} \frac{C}{2} \frac{7}{3} \frac{3}{4} \frac{F}{5} \frac{S}{6} \frac{L}{7} \frac{1}{6} \frac{H}{6} \frac{0}{6} \frac{0}{6} \frac{0}{6} \frac{J}{7}$ Refer to the table above.


(Chip) (CH, RH, UJ, SL)

(EX) $\frac{C}{1} \frac{K}{2} \frac{7}{3} \frac{3}{4} \frac{F}{5} \frac{F}{6} \frac{1}{6} \frac{H}{6} \frac{0}{6} \frac{0}{6} \frac{0}{6} \frac{Z}{7}$

(Chip) (B, F)

- 1 = Type
2 = Shape
3 = Dimension
4 = Temp. coefficient
5 = Voltage rating
6 = Value
7 = Tolerance

• Dimension

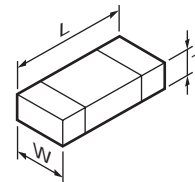

Chip capacitor

Code	L	W	T
Empty	5.6±0.5	5.0±0.5	Less than 2.0
A	4.5±0.5	3.2±0.4	Less than 2.0
B	4.5±0.5	2.0±0.3	Less than 2.0
C	4.5±0.5	1.25±0.2	Less than 1.25
D	3.2±0.4	2.5±0.3	Less than 1.5
E	3.2±0.2	1.6±0.2	Less than 1.25
F	2.0±0.3	1.25±0.2	Less than 1.25
G	1.6±0.2	0.8±0.2	Less than 1.0
H	1.0±0.05	0.5±0.05	0.5±0.05

Chip resistor

Code	L	W	T
E	3.2±0.2	1.6±0.2	1.0
F	2.0±0.3	1.25±0.2	1.0
G	1.6±0.2	0.8±0.2	0.5±0.1
H	1.0±0.05	0.5±0.05	0.35±0.05

RESISTORS

• Chip resistor (Carbon)

(EX) $\frac{R}{1} \frac{D}{2} \frac{7}{3} \frac{3}{4} \frac{E}{5} \frac{B}{6} \frac{2}{6} \frac{B}{6} \frac{0}{6} \frac{0}{6} \frac{0}{6} \frac{J}{7}$

(Chip) (B, F)

• Carbon resistor (Normal type)

(EX) $\frac{R}{1} \frac{D}{2} \frac{1}{3} \frac{4}{4} \frac{B}{5} \frac{B}{6} \frac{2}{6} \frac{C}{6} \frac{0}{6} \frac{0}{6} \frac{0}{6} \frac{J}{7}$

(Chip) (B, F)

1 = Type ... ceramic, electrolytic, etc.

2 = Shape ... round, square, etc.

3 = Dimension

4 = Temp. coefficient

5 = Voltage rating

6 = Value

7 = Tolerance

• Rating wattage

Code	Wattage	Code	Wattage	Code	Wattage
1J	1/16W	2C	1/6W	3A	1W
2A	1/10W	2E	1/4W	3D	2W
2B	1/8W	2H	1/2W		

SPECIFICATIONS

Navigation Section

Antenna	Micro-strip patched antenna
Receiver channel	Digital 8-channels parallel
Receiving frequency	1575.42MHz (C/A code)
Receiving sensitivity	Less than -130dBm
Positioning method	Hybrid (GPS + Wheel Pulse + Gyro Sensor)

General

Operating voltage	14.4V DC (11V to 16V)
Consumed current	Less than 2.5A
Operational temperature range	-10°C to +55°C
Storage temperature range	-30°C to +85°C
Video output level (75Ω)	1Vp-p (Composite) / 0.7Vp-p (Analog RGB)
Audio output level (10kΩ)	1.2Vrms

Size

Navigation unit	164.5 (W) x 50 (H) x 176.0 (D) mm 6-1/2 (W) x 1-15/16 (H) x 6-15/16 (D) in.
Antenna unit	34 (W) x 13.2 (H) x 38 (D) mm 1-5/16 (W) x 1/2 (H) x 1-1/2 (D) in.

Mass

Navigation unit	1174g (2.59 LBS)
Antenna unit	25g (0.055 LBS)

KENWOOD follows a policy of continuous advancements in development.

For this reason specifications may be changed without notice.

KENWOOD CORPORATION

2967-3, Ishikawa-machi, Hachioji-shi, Tokyo 192-8525, Japan

KENWOOD USA CORPORATION
P.O. BOX 22745, 2201 East Dominguez Street, Long Beach, CA90801-5745, U.S.A.

KENWOOD ELECTRONICS CANADA INC.
6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

KENWOOD ELECTRONICS LATIN AMERICA S.A.
P.O. Box 55-2791 Paitilla, Plaza Credicorp Bank Panama,
Piso 9, Oficina 901, Calle 50, Panama, Rep. de Panama

KENWOOD ELECTRONICS BRASIL LTDA.
Alameda Ministro Rocha Azevedo No. 456,
Edifício Jaú, 10o Andar, Cerqueira César, Cep 0140-001,
São Paulo-SP-Brasil

KENWOOD ELECTRONICS UK LIMITED
Kenwood House, Dwight Road, Watford, Herts, WD18 9EB, United Kingdom

KENWOOD ELECTRONICS DEUTSCHLAND GMBH
Rembrücker-Str. 15, 63150 Heusenstamm, Germany

KENWOOD ELECTRONICS FRANCE S.A.
13, Boulevard Ney, 75018 Paris, France

KENWOOD ELECTRONICS BELGIUM N.V.
Leuvensesteenweg 248 J, 1800 Vilvoorde, Belgium

KENWOOD ELECTRONICS ITALIA S.p.A.
Via G. Sirtori 7/9, 20129 Milano, Italy

KENWOOD IBÉRICA S.A.
Bolivia, 239-08020 Barcelona, Spain

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD. (A.C.N. 001 499 074)
16 Giffnock Avenue, Centrecourt Estate, North Ryde,
N.S.W. 2113, Australia

KENWOOD ELECTRONICS (HONG KONG) LTD.
Unit 3712-3724, Level 37, Tower 1, Metroplaza, 223 Hing Fong Road, Kwai Fong, N.T.,
Hong Kong

KENWOOD ELECTRONICS GULF FZE
P.O. Box 61318, Jebel Ali, Dubai, U.A.E.

KENWOOD ELECTRONICS (THAILAND) CO., LTD.
2019 New Pechburi Road, Bangkok, Huaykwang, Bangkok, 10320 Thailand

KENWOOD ELECTRONICS SINGAPORE PTE. LTD.
1 Genting Lane, #07-00, Kenwood Building, Singapore, 349544

KENWOOD ELECTRONICS (MALAYSIA) SDN BHD
#4.01 Level 4, Wisma Academy Lot 4A, Jalan 19/1, 46300 Petaling Jaya, Selangor Darul Ehsan,
Malaysia

X92-4400-0x/4730-0x X92-4740-0x/4750-0x

SERVICE MANUAL

DESCRIPTION MECHANISM


X92-4400-00 (DVS-3000) : X92-4740-00 (DVS-3020) : X92-4750-00 (DVS-3030)

X92-4400-01 (DVS-3001) : X92-4740-01 (DVS-3021) : X92-4750-01 (DVS-3031)

X92-4730-00 (DVS-3010) : X92-4740-02 (DVS-3022) : X92-4750-02 (DVS-3032)

X92-4730-01 (DVS-3011) : X92-4740-03 (DVS-3023) : X92-4750-03 (DVS-3033)

CONSTRUCTION OF MAJOR PARTS

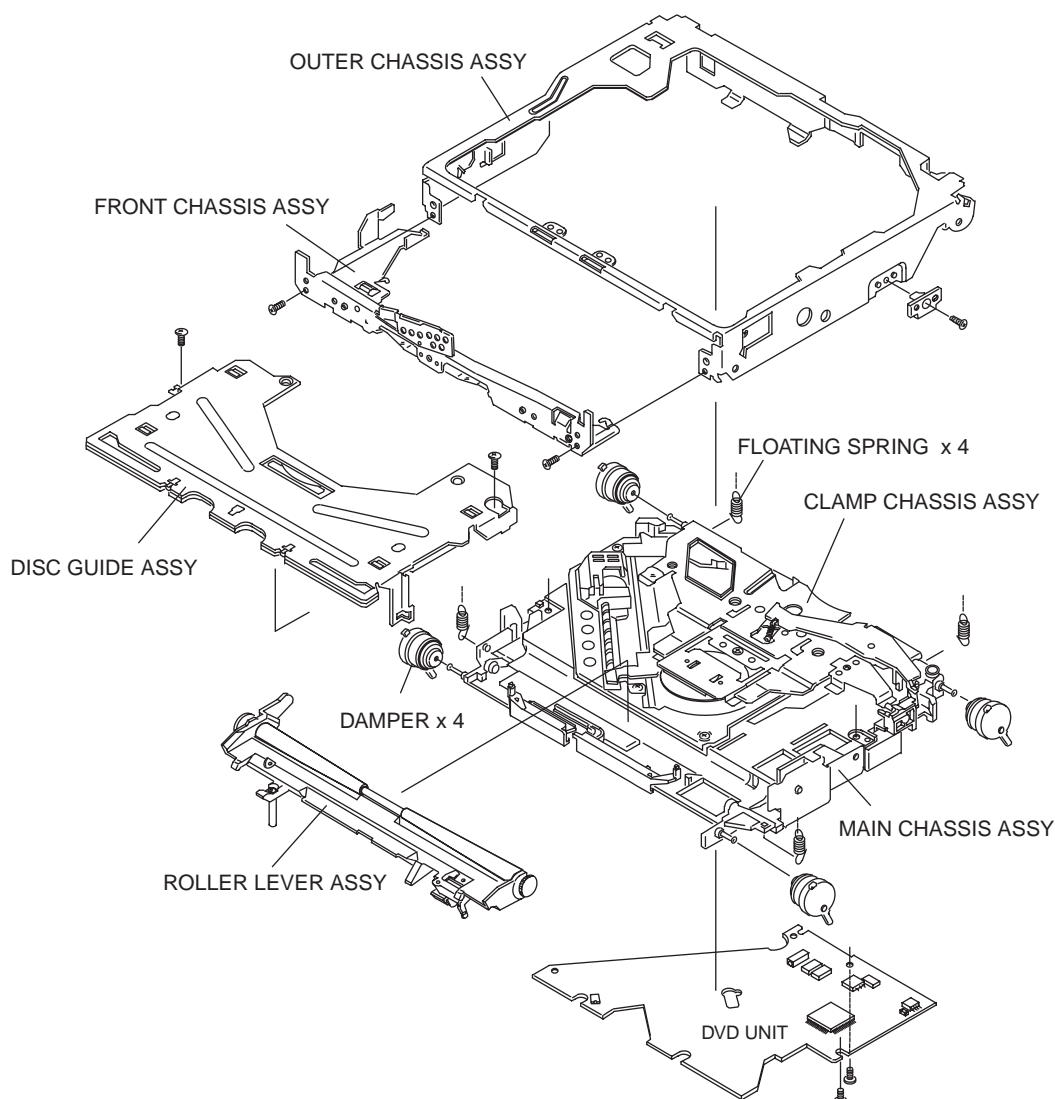

DVD MECHANISM TABLE

MODEL NAME	X92-4400-00	X92-4400-01	X92-4740-00	X92-4740-01	X92-4740-02	X92-4740-03
MECHANISM NAME	DVS-3000	DVS-3001	DVS-3020	DVS-3021	DVS-3022	DVS-3023
X37	X37-1020-00	X37-1020-00	X37-1020-00	X37-1020-00	X37-1020-00	X37-1020-00
PICKUP	T25-0222-05	T25-0222-05	T25-0222-05	T25-0222-05	T25-0222-05	T25-0222-05
DVD	○	○	○	○	○	○
CD	○	○	○	○	○	○
DISC PROTECTION MECHANISM	×	○	×	×	○	○
EXPORT PACKING SPECIFICATION	×	×	×	○	×	○
DESTINATION	A0	A1	A2	A3	A4	A5

MODEL NAME	X92-4730-00	X92-4730-01	X92-4750-00	X92-4750-01	X92-4750-02	X92-4750-03
MECHANISM NAME	DVS-3010	DVS-3011	DVS-3030	DVS-3031	DVS-3032	DVS-3033
X37	X37-1020-01	X37-1020-01	X37-1020-01	X37-1020-01	X37-1020-01	X37-1020-01
PICKUP	T25-0299-05	T25-0299-05	T25-0299-05	T25-0299-05	T25-0299-05	T25-0299-05
DVD	○	○	○	○	○	○
CD	×	×	×	×	×	×
DISC PROTECTION MECHANISM	×	○	×	×	○	○
EXPORT PACKING SPECIFICATION	×	×	×	○	×	○
DESTINATION	B0	B1	B2	B3	B4	B5


USE GREASE TABLE

Grease Name	Ref. No.	Description	Application position
CFD-703ZA (BLUE)	1	CHASSIS	MOLD GEAR CONTACT POINT
	2	CHASSIS	PICKUP CONTACT POINT
	15	SLIDER	GEAR CONTACT POINT
	30	CAM	ARM ASSY (21) CONTACT POINT
	33	GEAR	GEAR WHOLE
	34	GEAR	GEAR WHOLE
	35	GEAR	GEAR WHOLE
	36	GEAR	GEAR WHOLE
	37	GEAR	GEAR WHOLE
	38	GEAR	GEAR WHOLE
PFD-602Z	1	CHASSIS	SLIDER (17, 18) & LOCK ARM (25, 26) CONTACT POINT
KW-223	VM3	SLED MOTOR	GEAR WHOLE
HF-30	44	SHAFT	SHAFT WHOLE

BLOCK DIAGRAM

DVD MECHANISM ASS'Y

(X92-4400-0x : DVS-300x / X92-4740-0x : DVS-302x)

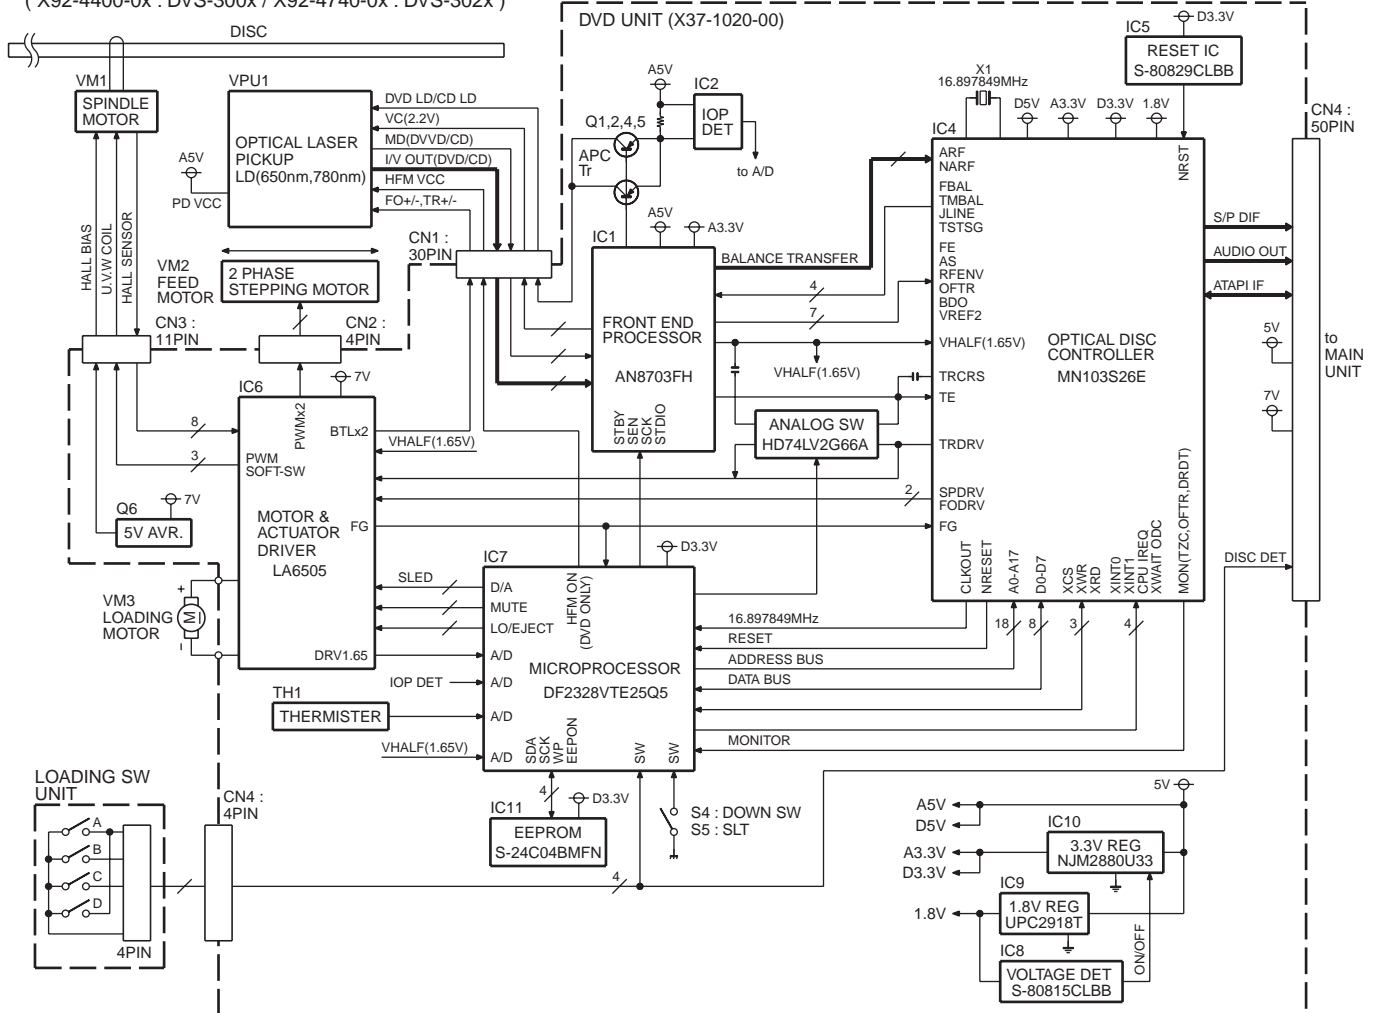

COMPONENTS DESCRIPTION

● DVD UNIT (X37-1020-00/01)

Ref. No.	Component Name	Application/Function/Operation/Condition
IC1	AN8703FH	RF signal processor
IC2	NJU7042	IOP detector OP amp
IC4	MN103S26E	ATAPI interface, Servo/Spindle/Seek control, DVD ROM/CD ROM digital signal processor, 2M DRAM
IC5	S-80829CLBB	System reset IC
IC6	LA6505	Motor & pickup actuator driver
IC7	DF2328VTE254Q8	System microprocessor
IC8	S-80815CLBB	Voltage detector
IC9	UPC2918T	1.8V AVR
IC10	NJM2880U33	3.3V AVR
IC11	S-24C04BMFN	Backup memory (EPROM)
IC12	HD74LV2G66A	Servo filter on/off control
Q1	2SB0970	Laser diode power supply for CD (APC)
Q3	2SJ0536	Laser diode power supply for DVD (APC)
Q4	UN5114	DVD laser high frequency superposition circuit on-switch
Q5	UN5214	
Q6	2SD1819A	5V AVR
Q9	UN5114	Loading motor control (base L= ON)
Q10	UN5214	Loading motor control (base H= ON)
Q13	UN5114	EEPROM power control (base L = ON)
Q15	UN5114	FG signal inverter transistor

MICROCOMPUTER'S TERMINAL DESCRIPTION

● System microprocessor : DF2328VTE254Q8 (DVD unit IC7)

Pin No.	Pin Name	I/O	Purpose / Description / Processing / Operation
1	Vcc	-	Power supply input terminal
2~5	A0~A3	O	Address bus
6	Vss	-	GND
7~14	A4~A11	O	Address bus
15	Vss	-	GND
16~21	A12~A17	O	Address bus
22	M2	I	SODC monitor input terminal 2
23	(NC)	-	NC
24	Vss	-	GND
25	SW_AD	I	SW_A+D detect input terminal
26	SW_B	I	SW_B detect input terminal
27	SW_C	I	SW_C detect input terminal
28	M3	I	SODC monitor input terminal 3
29	(NC)	-	NC
30	NINT0	I	SODC interrupt signal 0 input terminal
31	NINT2	I	SODC interrupt signal 2 input terminal
32	NINT1	I	SODC interrupt signal 1 input terminal

X92-4400-0x/4730-0x
X92-4740-0x/4750-0x

MICROCOMPUTER'S TERMINAL DESCRIPTION

Pin No.	Pin Name	I/O	Purpose / Description / Processing / Operation
33	Vcc	-	Power supply input terminal
34~37	(NC)	-	NC (PULL UP)
38	Vss	-	GND
39~42	(NC)	-	NC (PULL UP)
43~46	CPUDT0~3	I/O	DATA bus
47	Vss	-	GND
48~51	CPUDT4~7	I/O	DATA bus
52	Vcc	-	Power supply input terminal
53	(NC)	-	NC
54	(NC)	I/O	Flash memory data output terminal
55	(NC)	-	NC
56	(NC)	I	Flash memory data input terminal
57	_LOADP	O	Loading control terminal (* Please see for Table of Loading/Eject Logic)
58	(NC)	-	NC
59	Vss	-	GND
60	SEL0	I	Destination select input terminal (* Please see for Table of Destination)
61	SEL1	I	Destination select input terminal (* Please see for Table of Destination)
62	LOADM	O	Loading control terminal (* Please see for Table of Loading/Eject Logic)
63	LO_MUTE	O	Loading driver muting control terminal (* Please see for Table of Loading/Eject Logic)
64	SL_MUTE	O	Sled driver muting control terminal
65	DRV_MUTE	O	Driver muting control terminal
66	FG	I	FG signal input terminal
67	M0	I	SODC monitor input terminal 0
68~70	(NC)	-	NC
71	FWC	I/O	Flash memory data writhing control terminal
72	FWE	I	Flash memory data writhing control terminal
73	_RES	I	Reset signal input terminal
74	(NC)	-	NC
75	_STBY	I	Standby signal input terminal
76	Vcc	-	Power supply input terminal
77	XTAL	I	System clock input terminal (16.897849MHz)
78	EXTAL	I	System clock input terminal (16.897849MHz)
79	Vss	-	GND
80	(NC)	-	NC
81	Vcc	-	Power supply input terminal
82	(NC)	-	NC
83	_RD	O	Read signal output terminal
84	_HWR	O	Write signal output terminal
85	(NC)	-	NC
86	_WAIT	I	Request for wait statement input terminal
87	EEPON	O	EEPROM power supply control terminal
88	WP	O	EEPROM WP control terminal
89	SCL	O	EEPROM clock output terminal
90	SDA	I/O	EEPROM data input/output terminal
91	HFM	O	DVD laser high frequency superposition circuit control terminal
92	(NC)	-	NC

MICROCOMPUTER'S TERMINAL DESCRIPTION

Pin No.	Pin Name	I/O	Purpose / Description / Processing / Operation
93	AVcc	-	A/D converter Power supply input terminal
94	Vref	-	A/D converter reference voltage input terminal
95	TEMP_DET	I	Temperature sensor input terminal
96	(NC)	-	NC
97	IOP	I	IOP monitor terminal
98	(NC)	-	NC
99	VHALF	I	Reference 1.65V input terminal
100	DRV_HALF	I	Drive 1.65V input terminal
101	STEP_A	O	Sled motor control terminal A
102	STEP_B	O	Sled motor control terminal b
103	AVss	-	A/D converter GND terminal
104	Vss	-	GND
105	STDI	O	FEP serial data output terminal
106	SCK	O	FEP serial clock output terminal
107	SEN	O	FEP tip enable output terminal
108	STBY	O	FEP standby output terminal
109	(NC)	-	NC
110	M1	I	SODC monitor input terminal 1
111	(NC)	-	NC
112	CEON	O	Servo output terminal
113	MD0	I	Mode setup of operation input terminal
114	MD1	I	Mode setup of operation input terminal
115	MD2	I	Mode setup of operation / Flash memory writhing input terminal
116	SW_F	I	SW_F detect input terminal
117	SW_E	I	SW_E detect input terminal
118	SW_AD	I	SW_A+D detect input terminal
119	NCS	O	SODC chip select
120	(NC)	-	NC

● Loading/Eject Logic Table

Pin No.	Pin Name	Hi-Z	Short-Brake	CW	CCW
57	_LOADP	H	H	L	H
62	LOADM	L	L	L	H
63	LO_MUTE	L	H	H	H

● Destination Table

	DESTINATION	
Pin No.	DVD/CD	DVD only
60	H	L
61	H	H