

## 2013 CX-5 DAYTIME RUNNING LIGHTS



Some customers may request activating or deactivating Daytime Running Lights (DRL). Use the procedure below to activate or deactivate the DRL:

**Note:** The daytime running light (DRL) settings cannot be changed using IDS.

### Procedure

1. Apply the parking brake.
2. Set the ignition switch to the ON position (engine off).
3. Press and hold the brake pedal.
  - Continue to press the pedal until the procedure is completed.
  - The entire procedure must be completed within 23 seconds after pressing the brake pedal.
  - Start Step 4 within 2 seconds after pressing the pedal.
4. Turn the headlight switch from OFF to the parking light position 5 times and end with the switch in the OFF position.
  - DO NOT turn the switch all the way to the ON position.
  - Step 4 must be completed within 5 seconds.
  - Start Step 5 within 2 seconds.
5. Press the hazard warning switch 10 times within 5 seconds (on-off-on-off-on-off-on-off-on-off).
  - Start Step 6 within 2 seconds.
6. Turn the headlight switch from OFF to the parking light position 5 times and end with the switch in the OFF position.
  - DO NOT turn the switch all the way to the ON position.
  - Step 6 must be completed within 5 seconds.
7. Confirm DRL setting is changed by releasing the parking brake.
  - If DRL is activated:
    - PARK BRAKE OFF = DRL ON
    - PARK BRAKE ON = DRL OFF


Daytime Running Lights

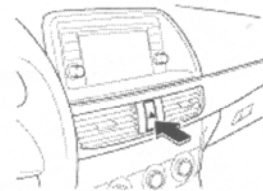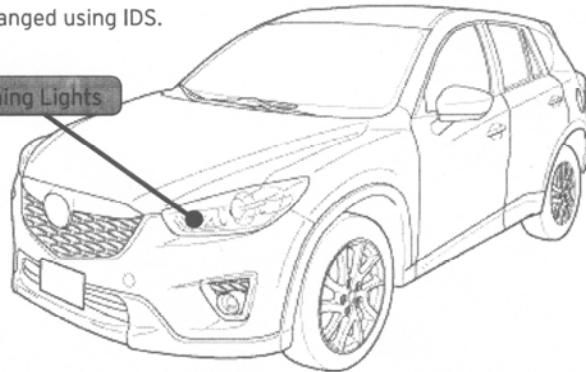


**Note:** The setting will not change if the DRL procedure is not completed within the time limits noted in the above procedure.

If the customer wishes to switch back to the previous DRL setting, repeat the same procedure.

### Without Auto-Light Control

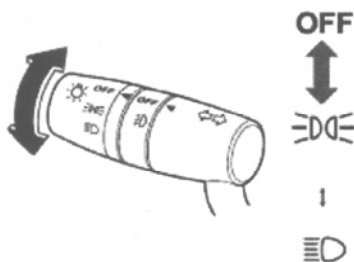

### With Auto-Light Control

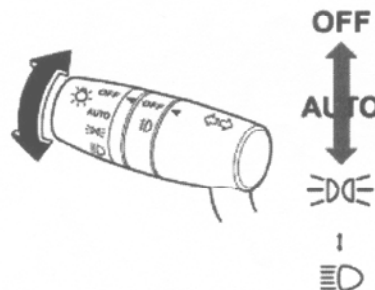

Courtesy of Rhino\_66

In Step 5, count each press of the hazard switch. You are actually turning the hazard lights on and off 5 times.